



Panasonic®

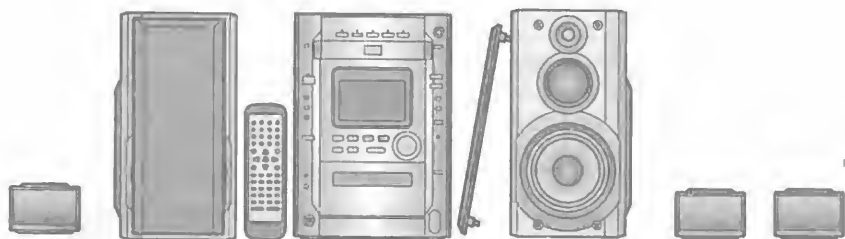

DVD Stereo System

Operating Instructions

Model No. **SC-DK10**

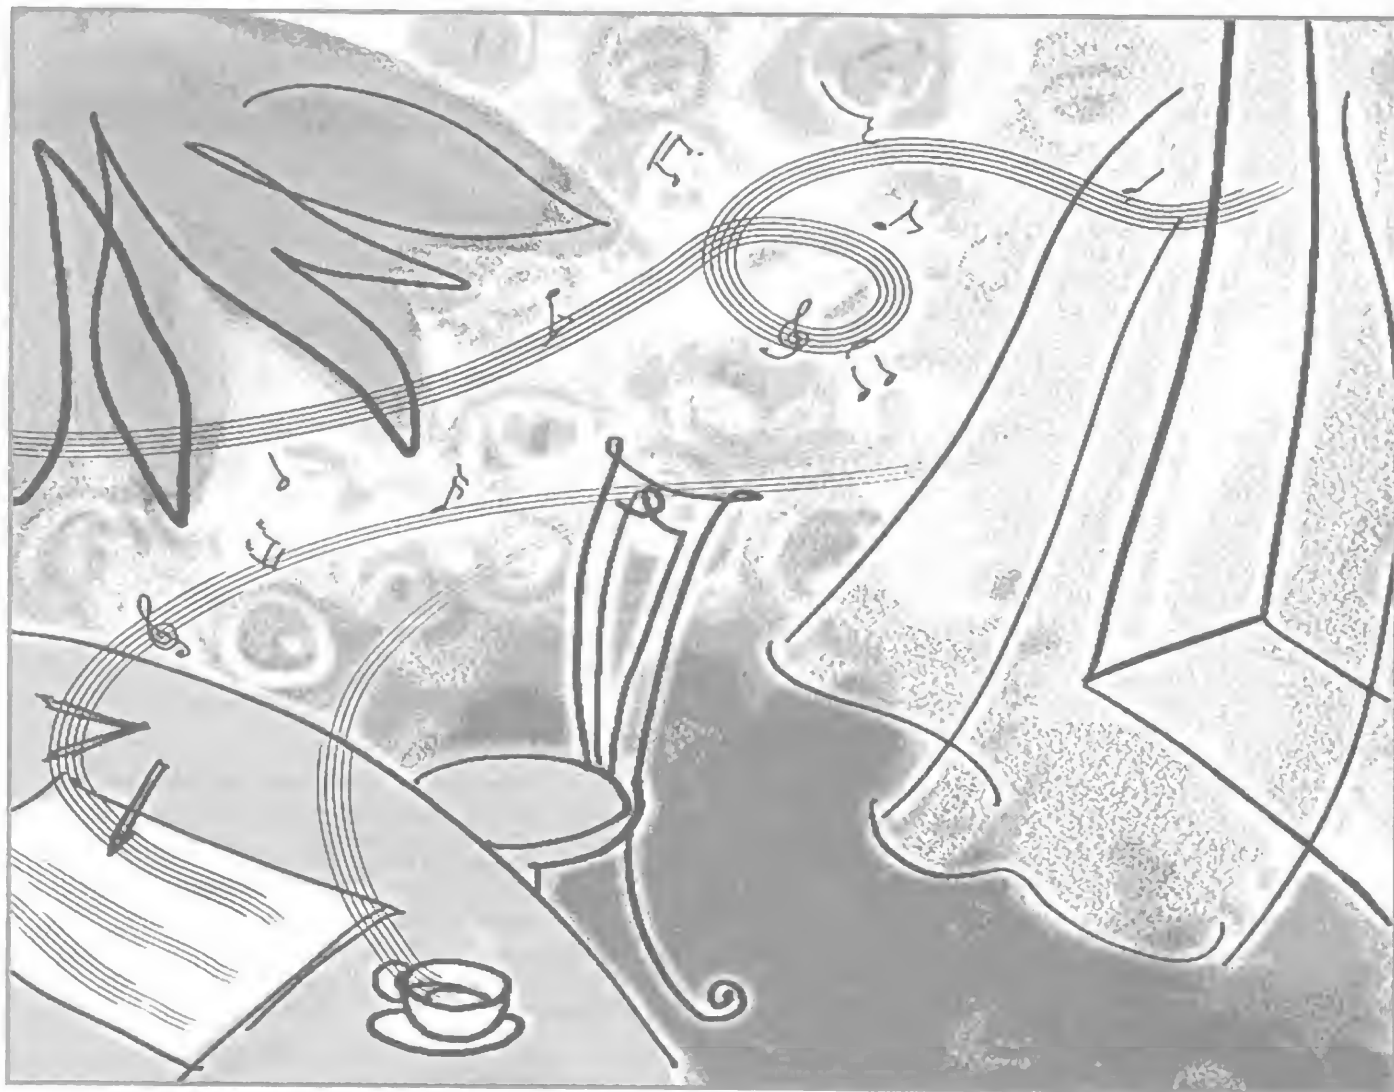

Before connecting, operating or adjusting this product, please read these instructions completely.

Please keep this manual for future reference.

The above illustration of the unit is an example and shows the model for the U.S.A.

This unit responds to the region number information on DVDs. The unit can only play DVDs if the region number of the disc matches the region number of this unit. See page 5 for details.

Dear customer

Thank you for purchasing this product.

For optimum performance and safety, please read these instructions carefully.

These operating instructions are applicable to the following system.

| | For the Middle East, South Africa and Asia | For U.S.A., Canada and others |
|-------------------|---|----------------------------------|
| System | SC-DK10 | SC-DK10 |
| Main unit | SA-DK10 | SA-DK10 |
| Front speakers | SB-DK10 | SB-DK10 |
| Center speaker | SB-PC90 | SB-PC93 |
| Surround speakers | SB-PS90 | SB-PS90 |

For areas except U.S.A., Canada, Australia, N.Z. and China

CAUTION:

Change the voltage setting to suit the AC voltage in your area. See page 9.

Note that the unit will be seriously damaged or fail to operate correctly if this setting is not made correctly.

CAUTION!

THIS PRODUCT UTILIZES A LASER.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION!

DO NOT INSTALL, OR PLACE THIS UNIT, IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE, DO NOT EXPOSE THIS APPLIANCE TO RAIN, SPLASHING, DRIPPING OR MOISTURE.

| | |
|------------------|--|
| ANGER | - VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM. (FDA 21 CFR) |
| CAUTION | - VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. (IEC60825-1) |
| ATTENTION | - RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU. |
| ADVARSEL | - SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING. |
| VARO! | - AVARTAIKESIA OLET ALTUURIA NÄKYVÄÄ JA NÄKYMÄTÖN LASERISÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN. |
| WARNING | - SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. RETRÄTTA FÖR STRÅLEN. |
| ADVARSEL | - SYNLIG OG USYNLIG LASERSTRÅLING NÄR DEKSEL ÅPNES. UNDGÅ EKSPONERING FOR STRÅLEN. |
| VORSICHT | - SICHTBARE UND UNSICHTBARE LASERSTRALUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHLEN AUSSETZEN. |
| 注意 | - 打开时有可见及不可见激光辐射。避免激光照射。 |
| 注意 | - この装置を開くと可視及び不可視のレーザー光が出ます。 これを見ないように、注意してください。 ROL502231 |

(Inside of product)

For areas except U.S.A. and Canada



Back of product

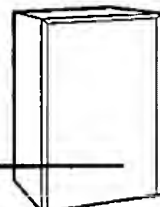


Table of contents

Before use

| | |
|-------------------------------------|---|
| Supplied accessories | 2 |
| IMPORTANT SAFETY INSTRUCTIONS | 4 |
| The remote control | 5 |
| Disc information | 5 |

Simple set-up

| | |
|---|---|
| STEP1 Locating | 7 |
| STEP2 Speakers and TV | 8 |
| STEP3 Antennas and AC power supply cord | 9 |

Control guide and preparatory steps

| | |
|--------------------------------|----|
| Front panel controls | 10 |
| Turning DEMO off | 12 |
| Setting the time | 12 |
| Auto power-off | 12 |
| Selecting TV screen type | 13 |

Disc operations

| | |
|--|----|
| Discs | 14 |
| Normal play | 14 |
| Frame-by-frame viewing | 17 |
| Slow-motion play | 17 |
| Changing the picture quality for movie viewing | 18 |
| Switching angles | 18 |
| Changing soundtrack and subtitle languages | 19 |
| Marking a position | 20 |
| Other methods of disc play | 21 |
| Repeat function | 21 |
| Program play | 22 |
| Random play | 23 |
| Starting play from a specific track | 23 |
| Using the CD MANAGER | 24 |
| Using GUI screens | 25 |

Radio operations

| | |
|--------------------------------|----|
| The radio: manual tuning | 28 |
| The radio: preset tuning | 29 |

Supplied accessories

Please check and identify the supplied accessories. Use numbers indicated in parentheses when asking for replacement parts.

(Only for U.S.A.)

To order accessories contact 1-800-332-5368 or web site (<http://www.panasonic.com>).

- ☐ AC power supply cord 1 pc.
For U.S.A. and Canada (RJA0065-A) For Australia and N.Z. (RJA0035-1X)



For China (RJA0055-1J)

For others (RJA0019-2K)



- ☐ FM indoor antenna 1 pc.
For China (RSA0007) For others (RSA0006-1J)



- ☐ Video cable 1 pc.
(RJA0016B15A)



Tape operations

| | |
|----------------------|----|
| Cassette tapes | 30 |
|----------------------|----|

Sound quality/sound field operations

| | |
|--|----|
| Adjusting the bass | 31 |
| Changing sound field and quality | 31 |
| Enjoying surround sound | 33 |

Recording operations

| | |
|---------------------------|----|
| Before recording | 37 |
| Recording discs | 38 |
| Recording the radio | 39 |

Karaoke operations

| | |
|---|----|
| (For China, the Middle East, South Africa and Asia) | |
| Enjoying karaoke | 39 |


Timer and others

| | |
|---------------------------------------|----|
| Using the timers | 43 |
| Convenient functions | 46 |
| Using headphones (not included) | 46 |
| External unit connections | 47 |
| Using other equipment | 48 |
| Initial settings | 49 |

References

| | |
|--|----|
| Troubleshooting guide | 56 |
| Maintenance /Product Service | 57 |
| Glossary | 58 |
| Warranty (Only for U.S.A.) | 59 |
| Servicenter List (Only for U.S.A.) | 60 |
| Specifications | 61 |

 - ☐ AM loop antenna 1 pc.
(RSA0033-1)



- ☐ Remote control transmitter 1 pc.
For Australia and N.Z. (N2QAJB000025)
For China, the Middle East, South Africa and Asia
(N2QAJB000024)
For U.S.A., Canada and others (N2QAJB000023)



- ☐ Remote control batteries 2 pcs.



- ☐ Power plug adaptor 1 pc.
For areas except U.S.A., Canada, Australia, N.Z.,
China and Asia (SJP5213-2)

**CAUTION:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE FOLLOWING APPLIES ONLY IN THE U.S.A. AND CANADA:

CAUTION:

**TO PREVENT ELECTRIC SHOCK MATCH
WIDE BLADE OF PLUG TO WIDE SLOT,
FULLY INSERT.**

**CAUTION**

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFETY INSTRUCTIONS

Read these operating instructions carefully before using the unit. Follow the safety instructions on the unit and the applicable safety instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

In the U.S.A., contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail consumerproducts@panasonic.com, or web site (<http://www.panasonic.com>).
In Canada, contact Panasonic Canada Inc. Customer Care Centre at 1-800-561-5505, or web site (www.panasonic.ca), or an authorized Servicentre nearest you.

Listening caution



Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion—and, most importantly, without affecting your sensitive hearing.

We recommend you to avoid prolonged exposure to excessive noise.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing.

Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:


- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

The remote control

Batteries

R6/LR6, AA, UM-3

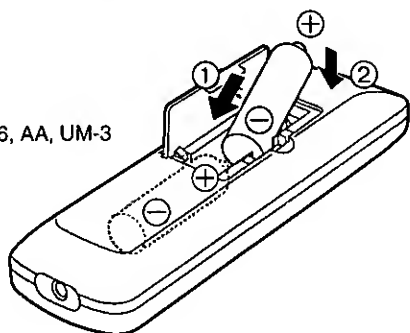


- Insert so the poles (+ and -) match those in the remote control.
- Do not use rechargeable type batteries.

Do not;

- mix old and new batteries.
 - use different types at the same time.
 - heat or expose to flame.
 - take apart or short circuit.
 - attempt to recharge alkaline or manganese batteries.
 - use batteries if the covering has been peeled off.
 - keep together with metallic objects such as necklaces.
- Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire. If electrolyte leaks from the batteries, consult your dealer. Wash thoroughly with water if electrolyte comes in contact with any part of your body.

Remove if the remote control is not going to be used for a long period of time. Store in a cool, dark place. Replace if the unit does not respond to the remote control even when held close to the front panel.

Use

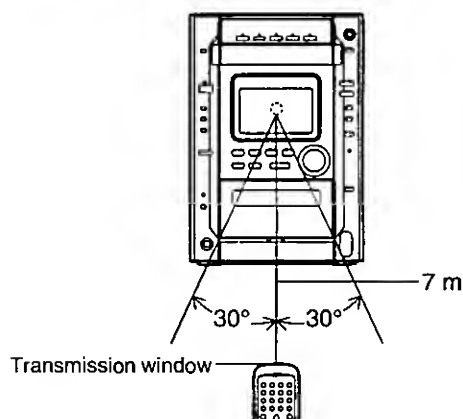

Aim at the sensor, avoiding obstacles, at a maximum range of 7 meters directly in front of the unit.

- Keep the transmission window and the unit's sensor free from dust.
- Operation can be affected by strong light sources, such as direct sunlight, and the glass doors on cabinets.

Do not;

- put heavy objects on the remote control.
- take the remote control apart.
- spill liquids onto the remote control.

Disc information


Region numbers

Region numbers are allocated to DVD players and software according to where they are sold.

DVDs can be played on this unit if their region number is the same or includes the same number, or if the DVD is marked "ALL".

Confirm the region number for this unit before choosing discs. The number for this unit is indicated on the rear panel.

(For example)

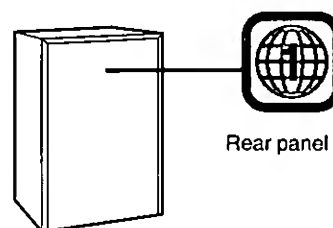

For U.S.A., Canada, and units with PX printed on the outer packaging

- The region number of this unit is "1".
- You can play DVDs marked with labels containing "1" or "ALL".



For the Middle East and South Africa

- The region number of this unit is "2".
- You can play DVDs marked with labels containing "2" or "ALL".



For Asia

- The region number of this unit is "3".
- You can play DVDs marked with labels containing "3" or "ALL".



For Australia, N.Z., and Latin America

- The region number of this unit is "4".
- You can play DVDs marked with labels containing "4" or "ALL".



For China

- The region number of this unit is "6".
- You can play DVDs marked with labels containing "6" or "ALL".



Disc symbols used in these operating instructions

The functions you can use depend on the type of disc you play. These marks are used to indicate which type of disc is available for use.

DVD: Feature can be used with DVD-Video

VCD: Feature can be used with Video CD

CD: Feature can be used with Audio CD

 
Playing DVDs and Video CDs

The producer of the material can control how these discs are played. This means that you may not be able to control play of a disc with some operations described in these operating instructions. Read the disc's instructions carefully.

Before use

Types of discs

This unit can playback discs bearing any of the marks:

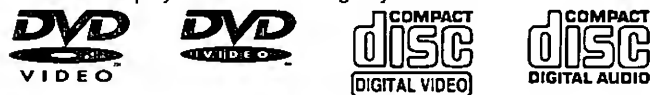

This unit does not have a DTS decoder so it cannot play audio encoded with DTS.

This unit cannot play the following discs:

- DVD with an unsuitable region number (⇒ page 5)
- DVD-Audio
- DVD-ROM
- DVD-R
- DVD-RAM
- +RW
- DVD-RW
- DIVX Video Disc
- VSD
- CD-ROM
- CDV
- CVD
- CD-G
- SACD
- SVCD
- Photo CD, etc.

This unit can play CD-DA and video CD format audio CD-R and CD-RW that have been finalized* upon completion of recording.

It may not be able to play some CD-R or CD-RW due to the condition of the recording.

*Finalizing is a process that enables CD-R/CD-RW players to play audio CD-R and CD-RW.


MP3 playback

(For areas except Australia, N.Z., and China)

You can use this unit to play MP3 format audio recorded for personal use with a computer, etc., onto CD-R or CD-RW. Play may not be possible in some cases due to the condition of the recording.

Discs recorded using MP3 differ to CDs in the following ways.

• Structure of the disc (example)

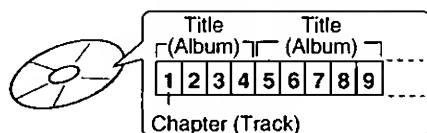

• Starting play from a selected chapter

Press the numbered buttons and press [ENTER].

Example: Chapter 23 [2]→[3]→[ENTER]

(Pressing [≥10] is unnecessary.)

• Repeat play

You can use chapter repeat or title repeat.

• Program play, random play and CD MANAGER

You cannot use program play, random play and CD MANAGER.

Note

• Not compatible with multi-session recordings

If you record MP3 onto CD-R/CD-RW over a number of sessions, this unit can play only the recordings made in the first session.

• Recordings will not necessarily be played in the order you recorded them.

The recordings will be reordered according to their titles: numbers in numerical order first, upper case in alphabetical order next, and lower case in alphabetical order last.

• If you play an MP3 track that includes still picture data, it will take some time before the music itself starts playing and the elapsed time will not be displayed during this time.

Even after the track starts, the correct play time will not be displayed.


Type of disc for the type of TV

DVDs and Video CDs are recorded using either PAL or NTSC.

For Australia, N.Z., China, the Middle East, South Africa and Asia

Refer to this table when selecting discs.

Example of how the picture appears on the screen

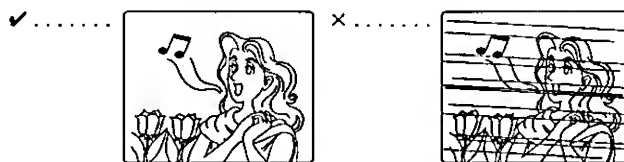

| TV type | Disc | TV Monitor | |
|-----------------|------|---|--------------------|
| | | For the Middle East, South Africa, Australia and N.Z. | For China and Asia |
| Multi-system TV | PAL | ✓ | ✓ |
| | NTSC | ✓*1 | ✓ |
| NTSC TV | PAL | × | × |
| | NTSC | × | ✓*3 |
| PAL TV | PAL | ✓ | ✓ |
| | NTSC | ✓*2 | ✓*4 |

*1 If you select "NTSC" in "NTSC Disc Output" (⇒ page 50), the picture may be clearer.

*2 The factory preset for "NTSC Disc Output" is "PAL60", so no changes to the initial settings are necessary.

(If your television is not equipped to handle PAL 525/60 signals the picture will not be shown correctly.)

*3 The factory preset for "NTSC Disc Output" is "NTSC", so no changes to the initial settings are necessary.

*4 Select "PAL60" in "NTSC Disc Output" (⇒ page 50).

(If your television is not equipped to handle PAL 525/60 signals the picture will not be shown correctly.)

For U.S.A., Canada, Latin America and others

The unit can playback only NTSC system discs.

Note


The bottom part of the picture may be cut off if the Video CD played does not comply with standards.

Simple set-up

STEP 1 Locating

Optimum location

Distance: A=B=C=D=E

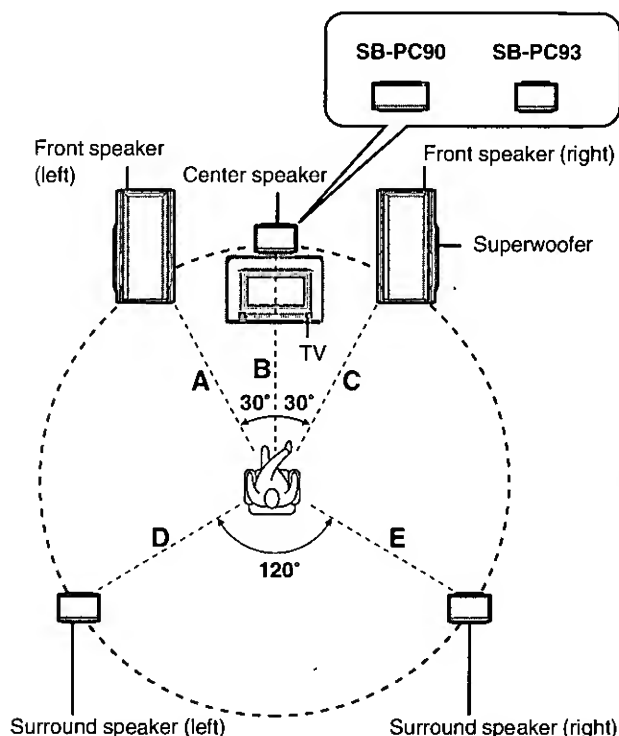

Front speakers (SB-DK10)

Place so that the superwoofers face out.

Center speaker

•(For the Middle East, South Africa and Asia)

The medium-sized speaker is the center speaker (SB-PC90).

•(For U.S.A., Canada and others)

The small speaker with the short cord is the center speaker (SB-PC93).

The model numbers are printed on the back of the speakers.

Surround speakers (SB-PS90)

The small speakers with the long cords are surround speakers.

Place either side of listening position, or slightly to the rear, about 1 meter higher than ear level with the Panasonic logo facing toward the listening position.

The effect varies with the type of music and music source.

Note

- Keep your speakers at least 10 mm (13/32") away from the system for proper ventilation.
- The superwoofers are located on the sides of the speakers. Leave 10-cm clearance for them to be effective.
- Do not place the center speaker on the main unit as sound quality will be affected.


Use only supplied speakers

Using other speakers can damage the unit and sound quality will negatively affected.

Attaching to a wall

Surround speakers can be attached to a wall.

Set the speaker onto screws and slide through bracket to lock into position.

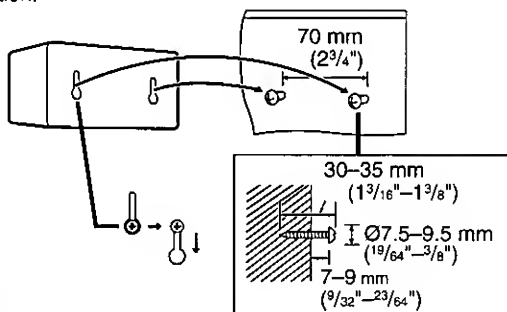

Note

The wall or pillar on which the speakers are to be attached should be capable of supporting 5 kg (11 lb.) per screw.

Caution

- Use the speakers only with the recommended system. Failure to do so may lead to damage to the amplifier and/or the speakers, and may result in the risk of fire. Consult a qualified service person if damage has occurred or if you experience a sudden change in performance.
- Do not attempt to attach these speakers to walls using methods other than those described in this manual.

Notes on speaker use

- You can damage your speakers and shorten their useful life if you play sound at high levels over extended periods.
- Reduce the volume in the following cases to avoid damage.
 - When playing distorted sound.
 - When the speakers are receiving howling from a microphone or record player, noise from FM broadcasts, or continuous signals from an oscillator, test disc, or electronic instrument.
 - When adjusting the sound quality.
 - When turning the unit on or off.

Positioning for best effect

How you set up your speakers can affect the bass and the sound field. Note the following points.

- Place speakers on flat secure bases.
- Placing speakers too close to floors, walls, and corners can result in excessive bass. Cover walls and windows with thick curtain.
- Place tweeters and other treble effect units at ear height.
- Place the front speakers at least 5 cm from walls as they have bass reflex ports in the rear.

If irregular coloring occurs on your television

These speakers are designed to be used close to a television, but the picture may be affected with some televisions and set-up combinations.

If this occurs, turn the television off for about 30 minutes.

The television's demagnetizing function should correct the problem. If it persists, move the speakers further away from the television.

Simple set-up

STEP 2 Speakers and TV

The illustrations show the model for U.S.A., Canada, Australia and N.Z.

Connect the cords to the terminals of same color.

- Never short-circuit positive (+) and negative (-) speaker wires.
- Be sure to connect only positive (red or gray) wires to positive (+) terminals and negative (black, blue or gray with blue line) wires to negative (-) terminals.


Incorrect connection can damage the speakers.

TV (not included)



You can connect through the S-VIDEO terminal if your TV has an S-VIDEO terminal (→ page 47).

Connect directly to your TV.

Do not connect the unit through a video cassette recorder, because the picture may not be played correctly due to the copy guard.

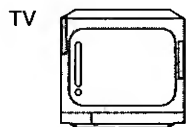


Center and surround speakers

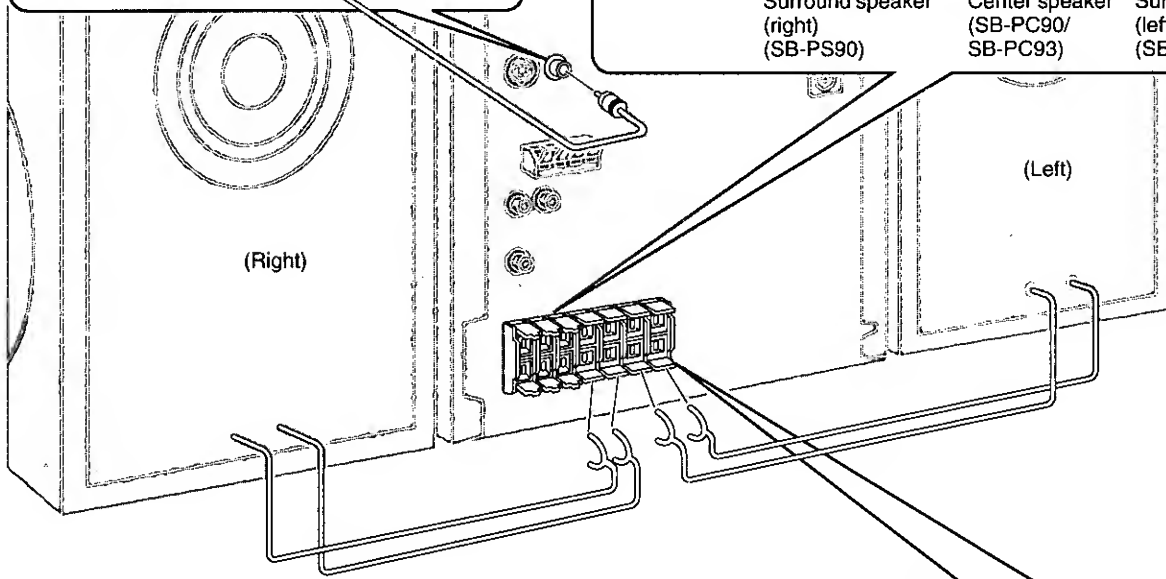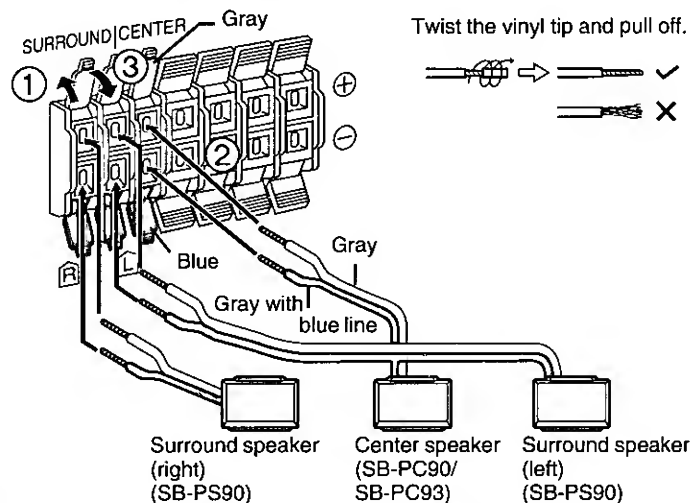

Front speakers

LF stands for low frequency.
The low frequency cords are red and black.
HF stands for high frequency.
The high frequency cords are gray and blue.

Twist the vinyl tip and pull off.

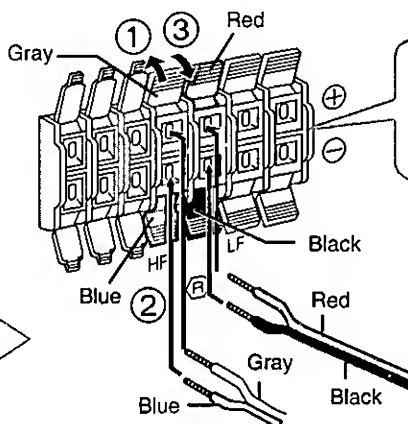

Connect the left (L) side in the same way.

STEP 3

Antennas and AC power supply cord


FM indoor antenna

Twist the vinyl tip and pull off.

Fix the other end of the antenna where reception is best.

Adhesive tape

Only for China

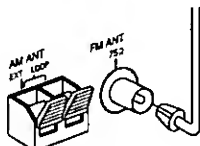


For areas except U.S.A., Canada, Australia, N.Z. and China

Set the voltage before connection
(→ below).

AC power supply cord

For areas except U.S.A., Canada, Australia, N.Z., China and Asia

 If the power plug will not fit your socket, use the power plug adaptor (included).

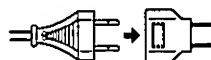

Note

The included AC power supply cord is for use with this unit only. Do not use it with other equipment.

Conserving power

The unit consumes power even when it is turned off with [POWER ⏻]. To save power when the unit is not to be used for a long time, unplug it from the household AC outlet. Remember to reset the radio stations and any other memory items before using the unit again.

U.S.A. and Canada: 0.25 W

Australia, N.Z. and China: 0.6 W

 
Others: 0.8 W

For your reference


Information you enter into the unit's memory, except for time, remains intact for up to a week after the AC power supply cord is disconnected.

AM loop antenna

Twist the vinyl tip and pull off.

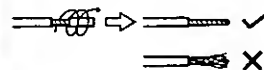

Stand the antenna up on its base. Keep loose antenna cord away from other wires and cords.

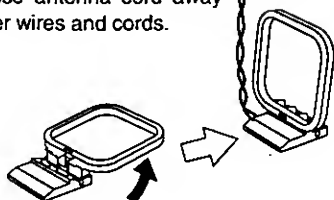

Voltage setting

For areas except U.S.A., Canada, Australia, N.Z. and China

Use a flat-head screwdriver to turn the voltage selector to the appropriate position for your area.



127 V ↔ 110 V ↔ 220 V-230 V ↔ 240 V

VOLT ADJ

If the power supply in your area is 115 V or 120 V, please set the voltage selector as follows.



For 115 V: Set to 110 V.

For 120 V: Set to 127 V.

Note that the unit will be seriously damaged or fail to operate correctly if this setting is not made correctly.

Main unit

The illustration is the model for China, the Middle East, South Africa and Asia.

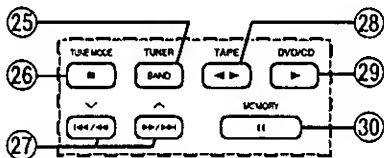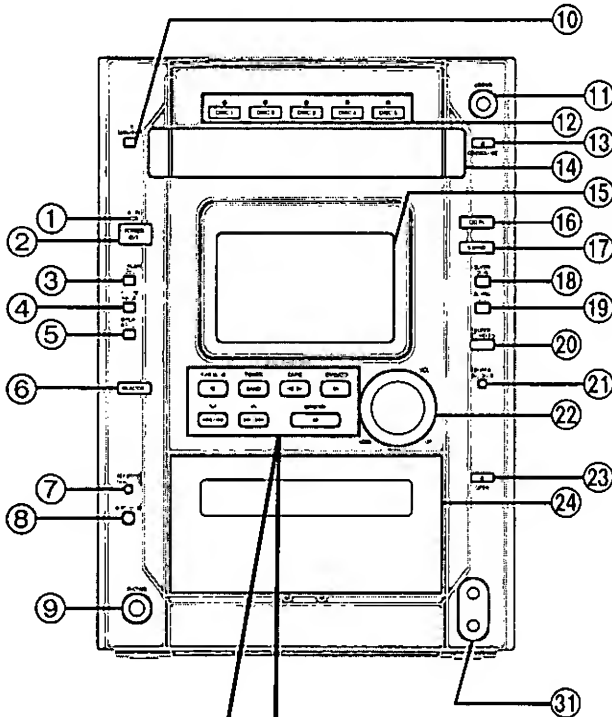

- ① **AC supply indicator (AC IN)**
This indicator lights when the unit is connected to the AC mains supply.
- ② **Standby/on switch (POWER ⏻/⏻)**
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ③ **Display select/demonstration button (-DISPLAY/-DEMO)** 12, 46
- ④ **Clock/timer button (CLOCK/TIMER)** 12, 43, 44
- ⑤ **Timer button (⏻PLAY/⏻REC)** 43, 44
- ⑥ **Source select button (SELECTOR)** 12, 48
Each time you press the button:
TUNER→TAPE→DVD/CD→AUX
- ⑦ **Tape reverse mode, FM mode, AM beat proof button (REV MODE/FM MODE/BP)** 28, 30, 39
- ⑧ **Recording start/stop button (●REC/STOP)** 38
- ⑨ **Headphones jack (PHONES)** 46
- ⑩ **CD MANAGER button (CD MANAGER)** 24
- ⑪ **CINEMA mode button and indicator (CINEMA)** 18
- ⑫ **Disc direct select buttons and disc indicators (DISC 1 - DISC 5)**
- ⑬ **Disc tray open/close button (▲ OPEN/CLOSE)** 14
- ⑭ **Disc tray**
- ⑮ **Display**
- ⑯ **DOLBY PRO LOGIC button and indicator (□□ PL)** 34
- ⑰ **Super surround button and indicator (S.SRND)** 36
- ⑱ **Super 3D AI EQ button (SUPER 3D AI)** 32
- ⑲ **Sound EQ button (SOUND EQ)** 31
- ⑳ **Super sound EQ button and indicator (SUPER SOUND EQ)** 32
- ㉑ **Super woofer button and indicator (SUPER WOOFER)** 31, 34
- ㉒ **Volume control (VOL)** 14, 28, 30
- ㉓ **Cassette holder open button (▲ OPEN)** 30
- ㉔ **Cassette holder**
- ㉕ **Tuner, band select button (TUNER, BAND)** 28
Press to select TUNER as the source.
Lights when TUNER is selected as the source.
- ㉖ **Disc/tape stop, tuning mode select button (■, TUNE MODE)** 14, 28, 30
- ㉗ **Disc skip/search, tape fast-forward/rewind/TPS, tune/time adjust buttons (⏮/⏮, ⏮, ⏭/⏭, ⏭)** 12, 15, 28, 30
- ㉘ **Tape play button (TAPE ◀▶)** 30
Press to select TAPE as the source.
Lights when TAPE is selected as the source.
- ㉙ **Disc play button (DVD/CD ▶)** 14
Press to select DVD/CD as the source.
Lights when DVD/CD is selected as the source.
- ㉚ **Disc pause, memory button (⏸, MEMORY)** 15, 29

For China, the Middle East, South Africa and Asia



- ① **Microphone jacks** 39

Front panel controls

Remote control

The illustration shows the remote control for areas except Australia, N.Z., China, the Middle East, South Africa and Asia.

Buttons such as ③ function in the same way as the controls on the main unit.

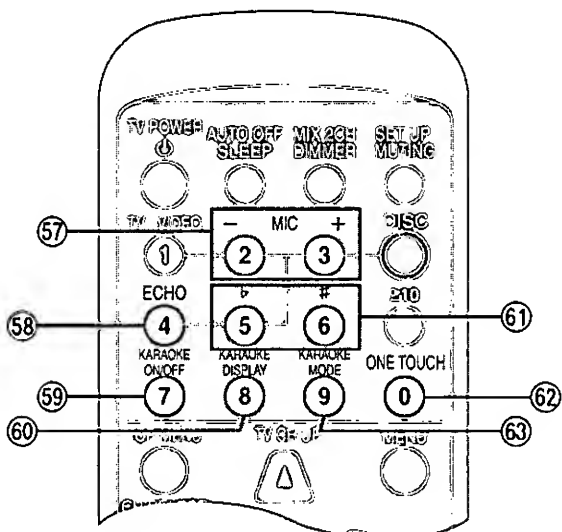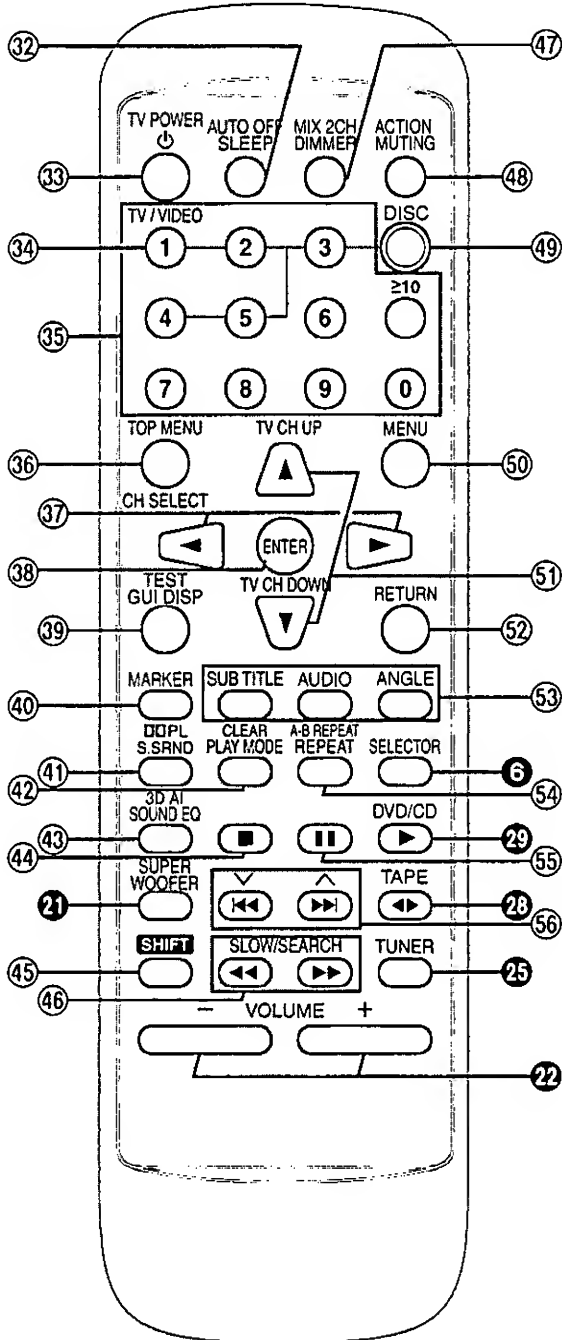







- ③ Sleep button (SLEEP) 45
- ④ Standby/on switch (⏻)
- ⑤ Numbered buttons (0-9, ≥10) 22, 29
- ⑥ Top menu button (TOP MENU) 14
- ⑦⑧ Cursor buttons (◀, ▶, ▲, ▼) 13, 17, 31
- ⑨ Enter button (ENTER) 13, 20
- ⑩ GUI display button (GUI DISP) 25
- ⑪ Marker button (MARKER) 20
- ⑫ Super surround button (S.SRND) 36
- ⑬ Play mode select button (PLAY MODE) 22, 23
- ⑭ Sound EQ button (SOUND EQ) 31
- ⑮ Stop button (■) 15, 30
- ⑯ Shift button (SHIFT)
See below.
- ⑰ Disc slow/search button
(SLOW/SEARCH ◀▶) 15, 17
- ⑱ Display dimmer button (DIMMER) 46
- ⑲ Muting button (MUTING) 46
- ⑳ Disc button (DISC) 22
- ㉑ Menu button (MENU) 14
- ㉒ Return button (RETURN) 13, 14, 25
- ㉓ Subtitle/audio/angle buttons
(SUB TITLE) (AUDIO) (ANGLE) 18, 19
- ㉔ Repeat button (REPEAT) 21
- ㉕ Pause button (⏸) 15
- ㉖ Disc skip, tape fast-forward/rewind/TPS,
tuning button (◀◀, ▶▶, ▲, ▼) 15, 28, 30

To operate functions labeled in orange, press [SHIFT] (⑯) and the corresponding button at the same time.

- ③ Auto power-off button (AUTO OFF) 12
- ④ TV power on/off button (TV POWER) 48
- ⑤ TV/video input mode select button (TV/VIDEO) 48
- ⑥ Channel select button (CH SELECT) 35
- ⑦ Test signal button (TEST) 35
- ⑧ DOLBY PRO LOGIC button (DOLPL) 34
- ⑨ Clear button (CLEAR) 20, 22
- ⑩ Super 3D AI EQ button (3D AI) 32
- ⑪ 2 channel down-mixing button (MIX 2CH) 34
- ⑫ Initial settings button (ACTION) 13
This button is labeled "SET UP" on the remote control for Australia, N.Z., China, the Middle East, South Africa and Asia.
- ⑬ TV channel select buttons (TV CH UP, TV CH DOWN) ... 48
- ⑭ A-B repeat button (A-B REPEAT) 21

The numbered buttons are also used for karaoke functions on the remote control for China, the Middle East, South Africa and Asia.

 - ⑦ Microphone volume buttons (- MIC +) 39
- ⑧ Echo button (ECHO) 42
- ⑨ Karaoke on/off button (KARAOKE ON/OFF) 40
- ⑩ Karaoke GUI display button (KARAOKE DISPLAY) 40
- ⑪ Key control buttons (b, #) 42
- ⑫ One touch karaoke button (ONE TOUCH) 41
- ⑬ Karaoke mode select button (KARAOKE MODE) 41

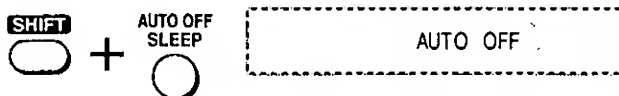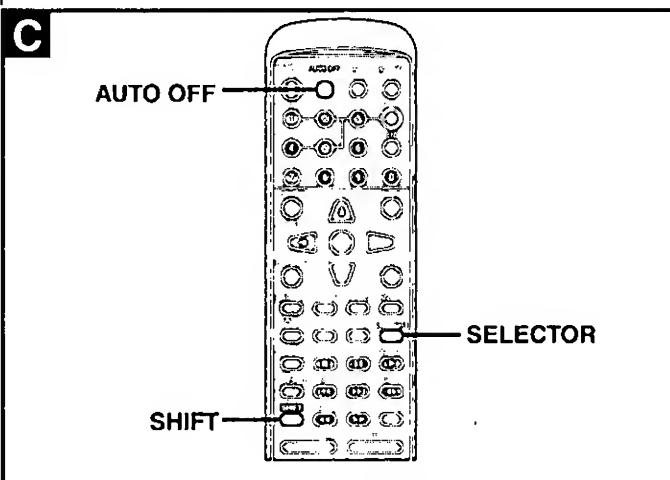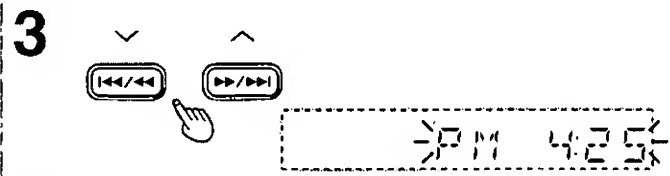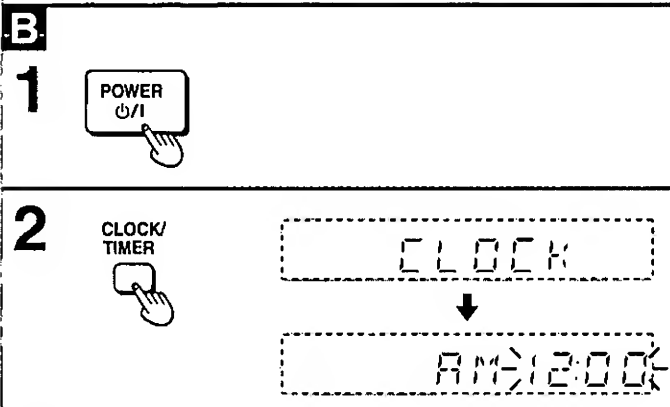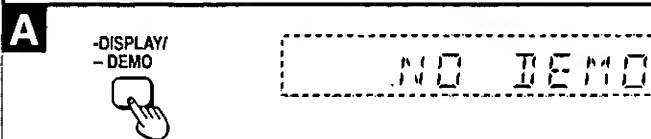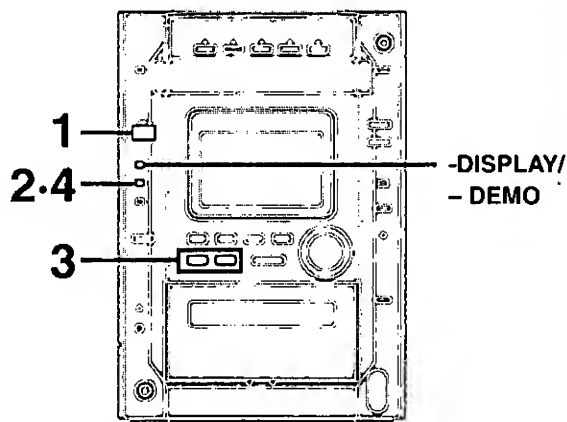

A Turning DEMO off

A demonstration of the display is shown if you have not set the clock. You can reduce the power consumed in standby mode by turning it off.

Press and hold [-DISPLAY/-DEMO] until "NO DEMO" is displayed.

Each time you press the button:
NO DEMO (off) ↔ DEMO (on)

B Setting the time

For U.S.A. and Canada: 12-hour clock

For others: 24-hour clock

The example shows how to set the 12-hour clock for 4:25 p.m.

1 Press [POWER] to turn the unit on.

2 Press [CLOCK/TIMER] to display "CLOCK".

Each time you press the button:
CLOCK → PLAY → REC → Original display

3 (Within 5 seconds or so) Press [/◀, ▼] or [/▶, ▲] to set the time.

The time display can be changed in one minute units by tapping the buttons, and quickly by holding down the buttons.

4 Press [CLOCK/TIMER].
The time is set and the original display is restored.

Displaying the clock

Press [CLOCK/TIMER] to display "CLOCK".

The clock is shown for about 5 seconds then the previous display is restored.

Reset the clock regularly to maintain accuracy.

C Auto power-off

Remote control only

When disc or tape is selected as the source

To save power, the unit turns off if it is left unused for 10 minutes.

This function does not work if the source is tuner or AUX or if a disc menu is being displayed.

1 Press [SELECTOR] to select "DVD/CD" or "TAPE".

2 Press [SHIFT] + [AUTO OFF].
"AUTO OFF" is displayed.

The setting is maintained even if the unit is turned off.

If you select tuner or AUX as the source, "AUTO OFF" goes out. It comes on again when you select disc or tape.

To cancel

Press [SHIFT] + [AUTO OFF] again.

Selecting TV screen type

Remote control only

Change the setting to suit the aspect ratio of your television.

The menu language is set to English, but you can change it to other languages (⇒ Display–Menu Language, pages 50–53).

Preparation

- Turn on the television and switch the video-input mode on the television to suit the connection.
- Press [SELECTOR] to select "DVD/CD".

1 Display the menus on the television.

For Australia, N.Z., China, the Middle East, South Africa and Asia

Press [SHIFT] + [SET UP].

For U.S.A., Canada and others

Press [SHIFT] + [ACTION].

2 Press [◀], [▶] to select the video tab.

3 Press [▲], [▼] to select "TV Aspect" and press [ENTER].

4 Press [▲], [▼] to select the item and press [ENTER].

- 4:3 Pan&Scan (Factory setting)

Select if you have a regular television and to view 16:9 software* in the pan and scan style.



- 4:3 Letterbox

Select if you have a regular television and to view 16:9 software* in the letterbox style.



- 16:9

Select you have a widescreen television.

*16:9 software prohibited from being shown in the pan and scan style will appear in the letterbox style despite the setting here.

The video menu is shown.


5 Press [SHIFT] + [ACTION] (or [SET UP]).

To return to the previous screen



Press [RETURN].

For your reference


DVDs are recorded in a variety of aspect ratios. You can change the way software is shown on a regular television (4:3) with the above operation. If you have a widescreen television (16:9), use the television's picture modes.

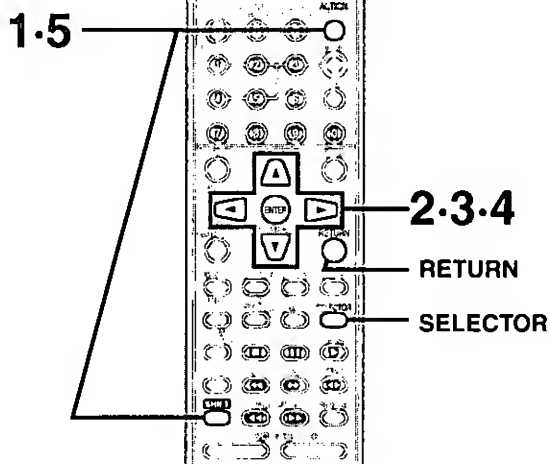



1

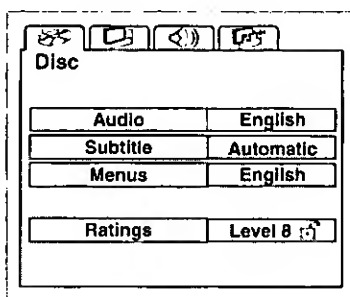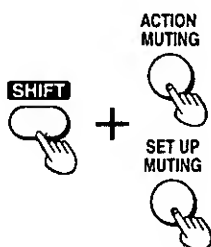


2

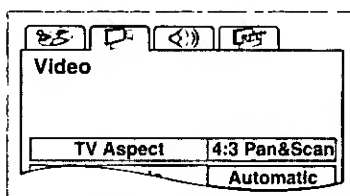

3.4

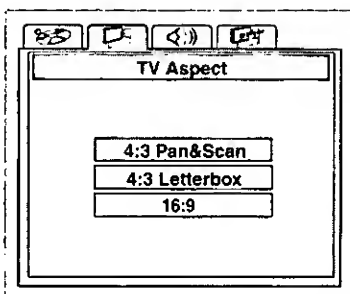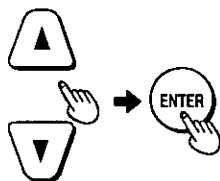


5

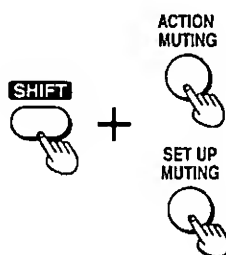

DISC 1-DISC 5


■, TUNE MODE

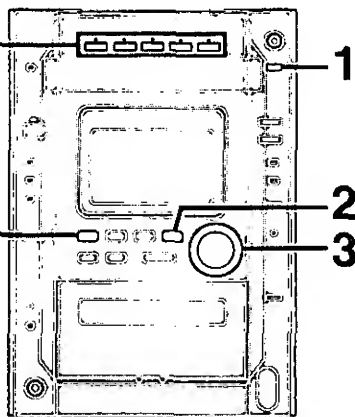


1



OPEN/CLOSE

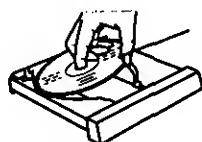

Label must face upward

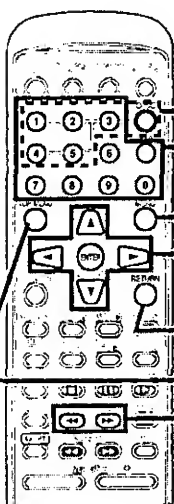



DISC 1-5
Numbered buttons

MENU
<, >, ▲, ▼,
ENTER

RETURN

TOP MENU
◀, ▶

 Example

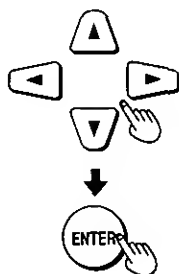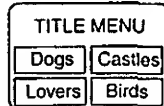



Birds

2



DVD/CD



3

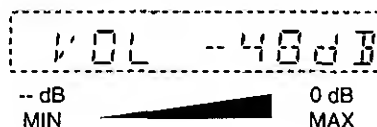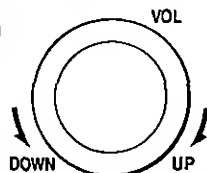

A

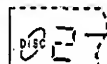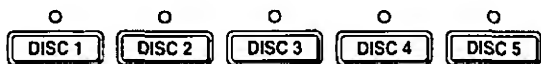  

Disc number

Discs

Normal play

DVD VCD CD

Preparation: Turn on the television and switch the video-input mode on the television to suit the connection.

1 Press [▲OPEN/CLOSE] to open the tray.

The unit comes on automatically.

Insert a disc and press [▲OPEN/CLOSE] to close the tray.

If a menu screen appears on the television

Remote control only

Use the cursor buttons (◀, ▶, ▲, ▼) to highlight an item and press [ENTER].

You can also select the desired item by pressing the numbered buttons with some discs.

To select title No. 10 or over, press [≥10] then the two digits. e.g. Title No. 12: [≥10] → [1] → [2]

Items can only be selected with the numbered buttons when playing Video CDs.

See below for other menu operations.

2 If play does not start after step 1 Press [DVD/CD ▶].

3 Adjust the volume.

Use the CD MANAGER's ALL-DISC mode to play CDs and Video CDs in succession (⇒ page 24).

To stop the disc

Press [■, TUNE MODE] (the resume function is activated, ⇒ page 15).

- The disc continues to rotate while the menu is displayed even after a particular item has finished. When no more items are to be selected, be sure to press [■, TUNE MODE] to clear the menu display.

"⊘" is displayed on the TV

When the operation is prohibited by the unit or the disc.

Other buttons used to operate menus

Read the disc's instructions for further details about operation.

[◀◀]: Shows the previous menu.


[▶▶]: Shows the next menu.

[RETURN]: Shows the menu screen.

[TOP MENU]: Shows the first menu screen. **DVD**

[MENU]: Shows the menu screen. **DVD**

DVDs can have several menus. The menu displayed when you press [TOP MENU] may be different from the menu displayed when you press [MENU].

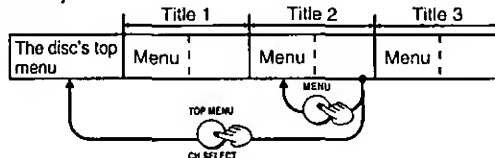


How the changer works

The tray closed when you press [▲OPEN/CLOSE] is in the play position.

The disc in the play position is ready to play immediately when you press [DVD/CD ▶].

The indicator for the tray in the play position lights.

To listen to another disc or open another tray, press [DISC 1]-[DISC 5] (remote control: [DISC] then [1]-[5]) to put the tray in the play position. **A**

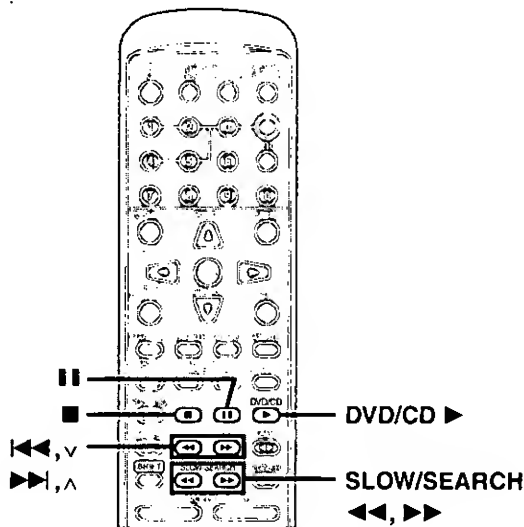

A To resume play (resume function)

When [■] (on the main unit: [■, TUNE MODE]) is pressed, the unit remembers the position.

While "RESUME" is displayed, press [DVD/CD ►] to start play from where you stopped it.

If you are playing DVD, the message "Press PLAY to Preview Chapters" (or "Press PLAY to Chapter Review") appears on the TV. Press [DVD/CD ►] while the message is displayed and the beginning portions of each chapter up to the current one are played. Full play resumes from the point where you stopped play. (This feature works only within a title.)

If you do not press [DVD/CD ►], the message disappears and play starts from where you stopped it.

To cancel resume function

Press [■] ([■, TUNE MODE]).

Note

- The resume function does not work if the disc's play time is not displayed.
- The position is saved even if the unit is turned off.
- The position is cleared when the tray is opened or if you change discs.

B Pause (Still picture)

Press [II] (on the main unit: [II, MEMORY]) during play. Press [DVD/CD ►] to resume play.

C Skip

Chapters/titles on DVD and tracks on Video CD and CD can be skipped.

Remote control:

Press [◀◀, v] or [▶▶, ^] during play.

On the main unit: [◀◀/◀◀, v] or [▶▶/▶▶, ^]

◀◀, v (◀◀/◀◀, v): Backward

▶▶, ^ (▶▶/▶▶, ^): Forward

Each press increases the number of skips.

D Search

Remote control:

Press [SLOW/SEARCH (◀◀ or ▶▶)] during play.

Each press increases the speed of the search up to 5 steps.

On the main unit: [◀◀/◀◀, v] or [▶▶/▶▶, ^]

The speed increases if you press and hold the button.


 
 

◀◀ (◀◀/◀◀, v): Backward



▶▶ (▶▶/▶▶, ^): Forward

Press [DVD/CD ►] to resume play.

When playing Video CDs with playback control

Pressing buttons to perform skip or search may take you to a menu screen.

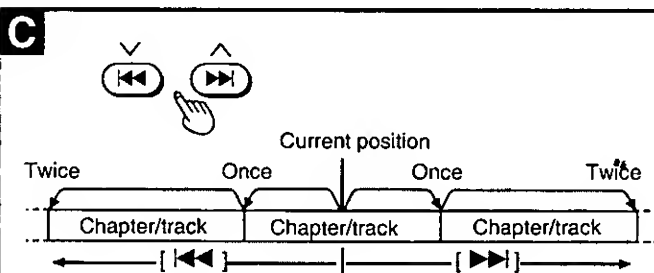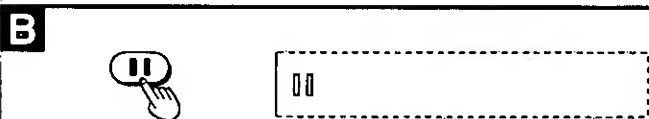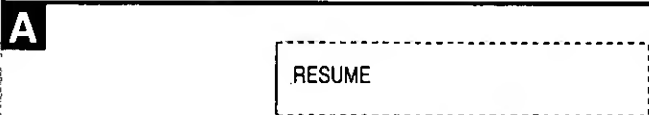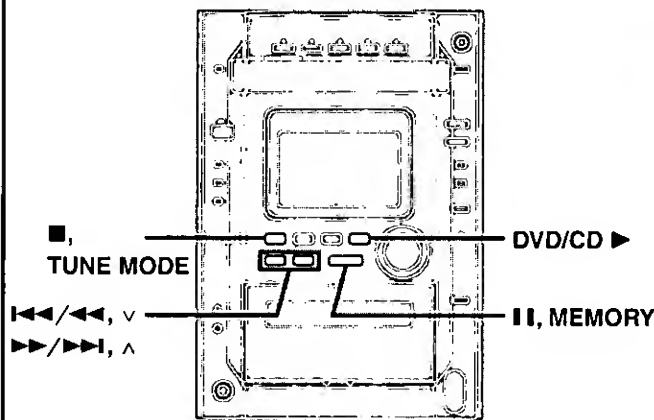

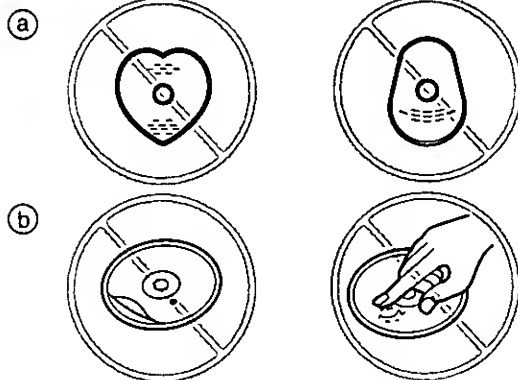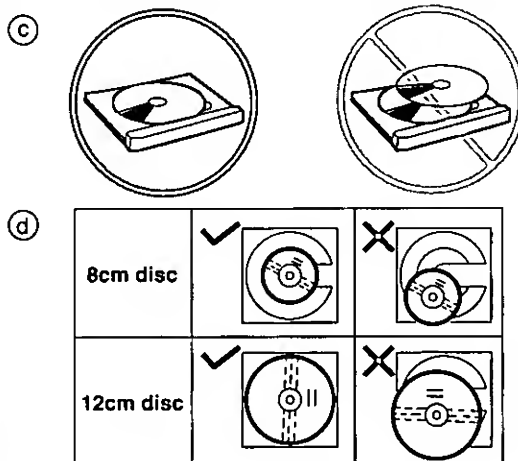A**B****Discs****Information about discs that appears on the unit display****">"**

When there are 16 or more tracks on the disc (CD and Video CD without PBC).

"DVD"

When a DVD is in the play position tray.

"VCD"

When a Video CD is in the play position tray.

"NO DISC"

When there is no disc on the selected tray or the disc is set incorrectly.

"NO PLAY"

When the disc does not correspond to the unit and cannot be played.

"96kHz 24bit"

When the disc is one with high quality sound recorded with a sampling frequency of 96 kHz and 24 bits.

A**Disc selection**

Choose discs with these marks:

**Do not;**

- use irregularly shaped discs (a).
- attach extra labels and stickers.
- use discs with labels and stickers that are coming off or with adhesive exuding from under labels and stickers (b).
- attach scratch-proof covers or any other kind of accessory.
- write anything on the disc.
- clean discs with liquids. (Wipe with a soft, dry cloth.)
- use discs printed with label printers available on the market.


B**To prevent damage**

Always observe the following points.

- Load only 1 disc per tray (c).
- Load discs as shown in figure d.
- An adaptor is not needed with 8 cm discs (singles).
- Set the system on a flat, level surface.
- Always unload all discs before moving the unit.

Do not;

- set the unit on top of magazines, inclined surfaces, etc.
- move the unit while a tray is opening/closing, or when loaded.
- put anything except discs in trays.
- use cleaning discs or discs which are badly warped or cracked.

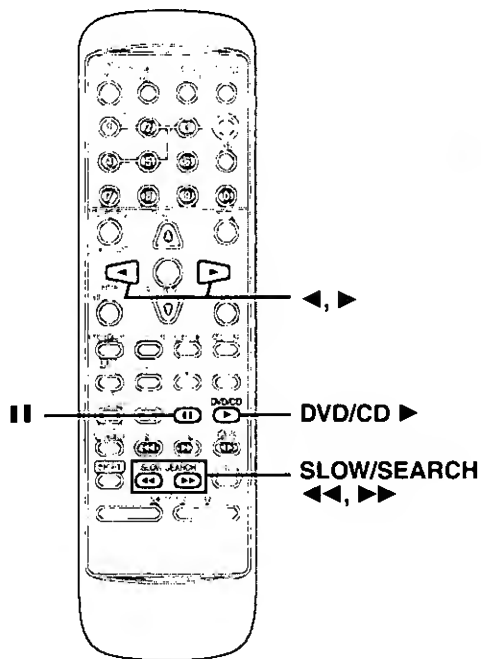

A Frame-by-frame viewing

DVD **VCD**

Remote control only

- ① Press **[II]** during play.
- ② Press the cursor buttons **[◀]** (backward) or **[▶]** (forward).
The frame changes each time you press a cursor button.

- The frames change in succession if you press and hold a cursor button.
- The frame also advances each time you press **[II]**.
- You cannot move backwards with Video CD.

Press **[DVD/CD ▶]** to resume play.

B Slow-motion play

DVD **VCD**

Remote control only


- ① Press **[II]** during play.
- ② Press **[SLOW/SEARCH (◀◀ or ▶▶)]**.
◀◀: Backward
▶▶: Forward
Each press increases the speed of the slow motion. There are 5 speeds.

- You cannot move backwards with Video CD.


To resume play




Press **[DVD/CD ▶]** to resume play.

A

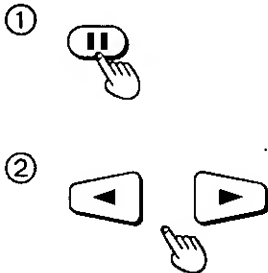


B

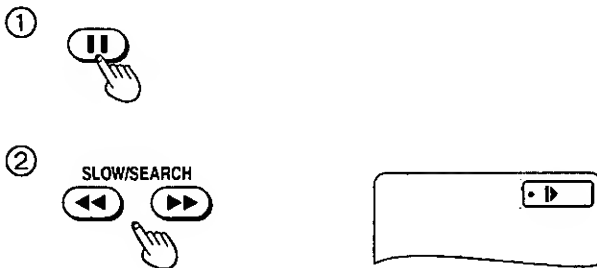

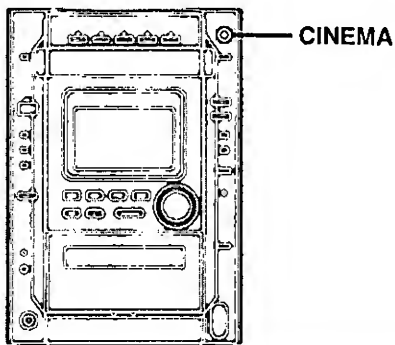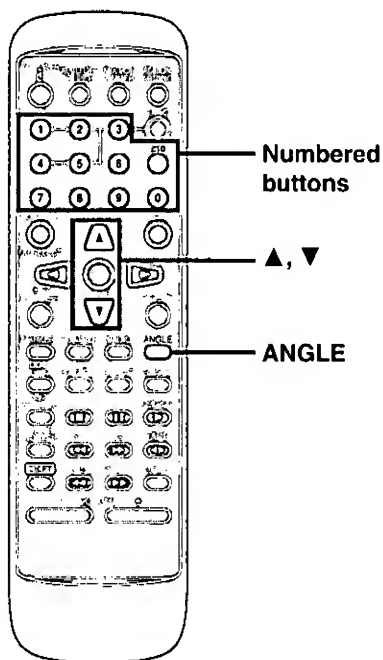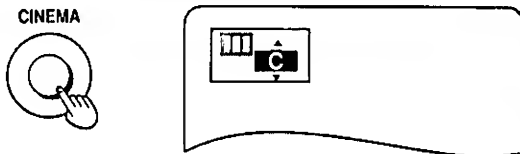**A****B**

ANGLE

Angle number

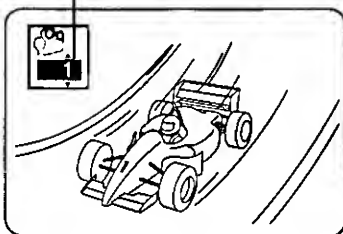**Discs****A Changing the picture quality for movie viewing****DVD VCD**

You can better enjoy pictures by changing the picture quality.

Press [CINEMA].

The button lights and the CINEMA display appears on the screen.

Each time you press the button:

C (on) → N (off)

B Switching angles**DVD****Remote control only**

Some DVDs allow you to view the same scene from different angles. "ANGLE" lights up on the unit's display during scenes recorded with multiple angles to indicate this feature is available.

Press [ANGLE] during play.

The angle display appears.

The angle number changes each time you press the button.

The number can also be changed with the cursor buttons (▲ or ▼) or the numbered buttons.

Some discs allow you to set angles before multi-angle scenes are played. Read the instructions that come with the disc.

Note

Some discs allow changes to angles only by using the disc's menus.

Changing soundtrack and subtitle languages

DVD

Remote control only

Some DVDs have multiple soundtracks and subtitle languages recorded on them. You can change these during play.

To change the soundtrack

Press [AUDIO] during play.

The soundtrack display appears.

The number changes each time you press the button.

To change the subtitle language

Press [SUB TITLE] during play.

The subtitle display appears.

The number changes each time you press the button.

The number can also be changed with the cursor buttons (▲ or ▼) or the numbered buttons.

See page 26 for a key to language abbreviations.

To clear/display the subtitles

- 1 Press [SUB TITLE].
- 2 Press [▶].
- 3 Press [▲] or [▼] to select "ON" or "OFF".

For your reference

Soundtrack and subtitle languages can be set before play with the unit's menus (→ pages 50–53).

(Some discs are designed to start in a certain language despite the setting.)

You can only select the languages recorded on the disc.

Note

- Some discs allow changes soundtrack and subtitle languages only by using the disc's menus.
- "—" or "—" is displayed instead of the language number in circumstances such as when no language is recorded on the disc.
- In some cases, the subtitle language is not changed to the selected one immediately.
- (For areas except Australia, N.Z., China, the Middle East, South Africa, and Asia)
If the subtitles overlap closed captions recorded on discs, turn the subtitles off.

A

Switching vocals on/off for karaoke discs

DVD

Remote control only

- 1 Press [AUDIO] during play.
- 2 Press the cursor buttons [◀], [▶] to highlight the illustrated icon.
- 3 Press the cursor buttons [▲], [▼] to turn the vocals on or off.


• Solo
OFF: No vocal
ON: Vocal

• Duet
OFF: No vocal
V1+V2: Vocal 1 and 2
V1: Vocal 1
V2: Vocal 2

Choose "OFF" for karaoke.

Choose "V1" or "V2" to duet with the player.


Actual operations depend on the disc. Read the disc's instructions for details.

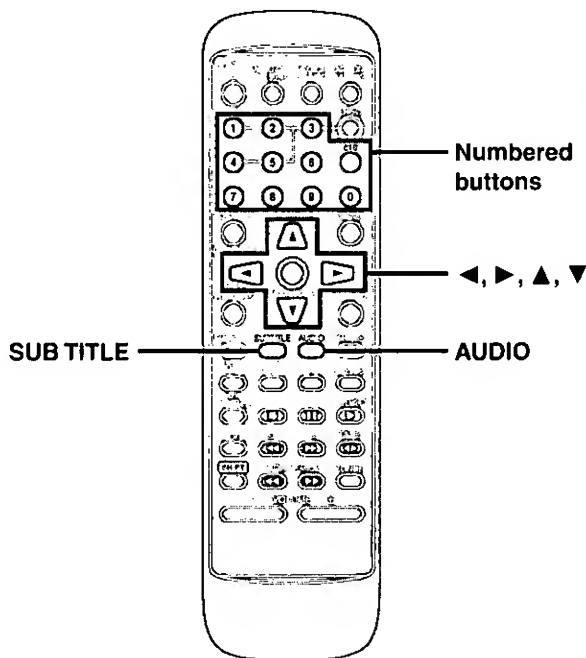

To change the soundtrack



Soundtrack number

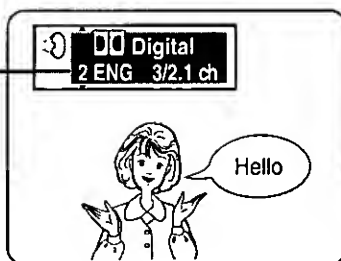

To change the subtitle language




Subtitle number




A



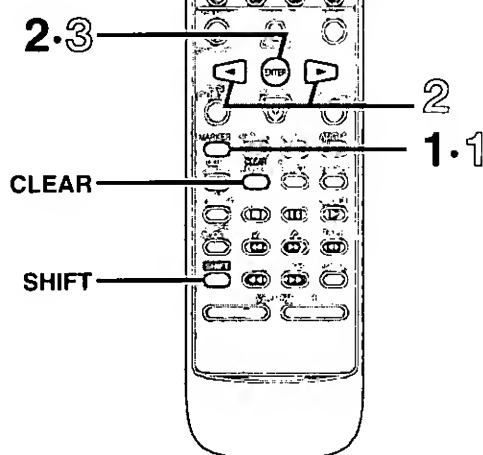


A

1

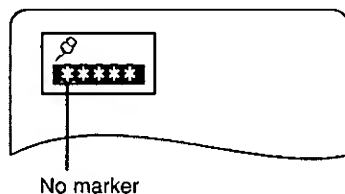


2

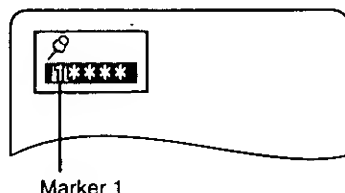


B

1

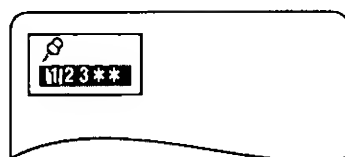

2

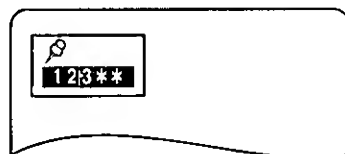

3



Discs

Marking a position

DVD VCD CD

Remote control only

This feature allows you to mark up to 5 points on a disc so you can return to them easily at a later time.

A To mark a position

- 1 Press [MARKER] during play.**
The marker display appears.
- 2 Press [ENTER] at the point you want to mark.**

To mark another position

- ① Press [MARKER] to display the marker display.
- ② Press the cursor buttons [◀] or [▶] to select another “*”.
- ③ Press [ENTER].

B Recalling a marked position

- 1 Press [MARKER].**
The marker display appears.
- 2 Press the cursor buttons [◀] or [▶] to highlight the required marker.**
- 3 Press [ENTER] to recall the position.**

To clear a marker

- ① Press [MARKER] to display the marker display.
- ② Press the cursor buttons [◀] or [▶] to highlight the marker you want to clear.
- ③ Press [SHIFT] + [CLEAR].

Note

- This feature cannot be used;
 - If the play time for the disc is not displayed.
 - During program (⇒ page 22) and random play (⇒ page 23).
 - While CD MANAGER (⇒ page 24) is on.
- Some subtitles may fail to appear around the marker (DVD).
- Markers clear in the following situations:
 - The unit is turned off.
 - The disc is changed or removed.
 - A source other than DVD/CD is selected.

Repeat function

DVD **VCD** **CD**

Remote control only

A Repeating chapters, titles and tracks

Press [REPEAT] during play.

Each time you press the button:

DVD

Ⓐ CHAPTER REPEAT (): Current chapter is repeated.

Ⓑ TITLE REPEAT (): Current title is repeated.

Ⓒ REPEAT OFF: Repeat mode is canceled.

Video CD, CD

Ⓓ : All tracks on the disc are repeated.

Original display: Repeat mode is canceled.

To cancel repeat play

Press [REPEAT] to clear " ".

- When playing Video CDs and CDs, you can combine random play (⇒ page 23) or the CD MANAGER (⇒ page 24) and repeat play.

Note

Repeat play does not work if the play time for the disc is not displayed.

To repeat only your favorite tracks

Video CD and CD only

- ① Program the tracks you want (⇒ page 22).
- ② Press [DVD/CD ▶].
- ③ Press [REPEAT] to display " ".

B Repeating a specific section (A-B REPEAT)

1 Press [SHIFT] + [A-B REPEAT] during play at the starting point (A).


2 Press [SHIFT] + [A-B REPEAT] at the finishing point (B).

To cancel A-B repeat play


Press [SHIFT] + [A-B REPEAT] to display "••" on the screen.

Note



- This feature cannot be used if the play time for the DVD is not displayed.
- The player automatically determines the end of a title or track as point B.
- Subtitles may not appear around A and B.

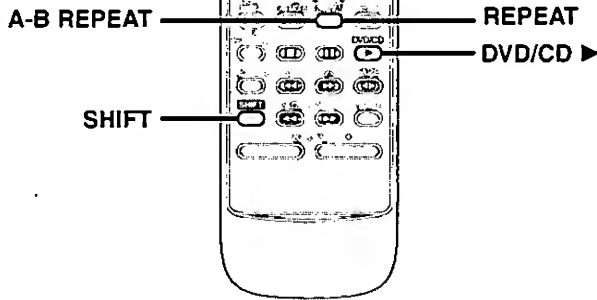


A

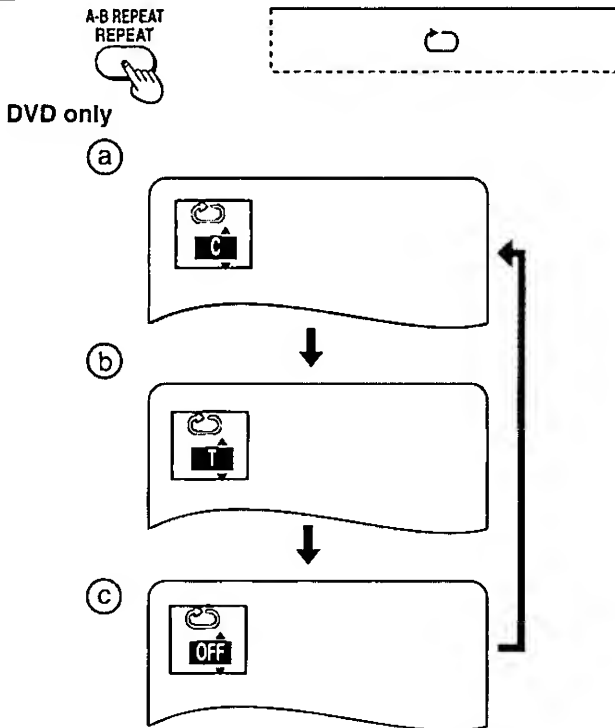


B

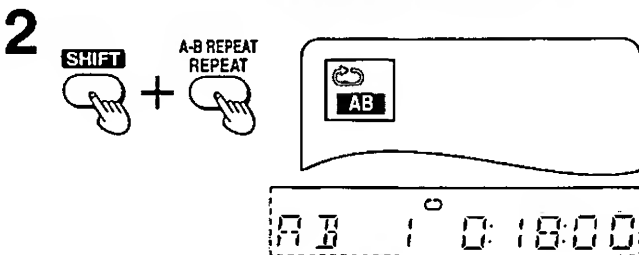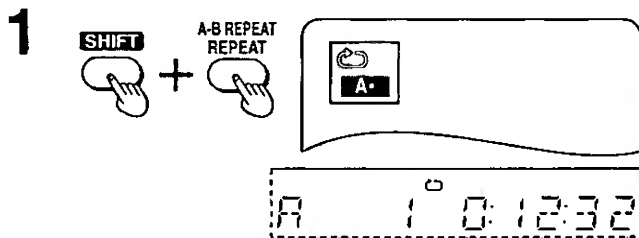

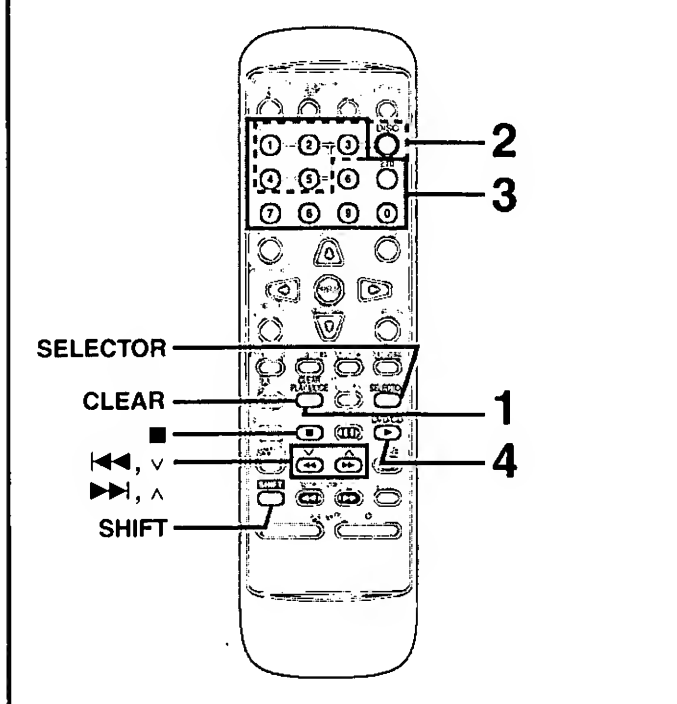


1

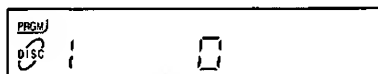 CLEAR
PLAY MODE

2



 
TV / VIDEO

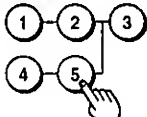


Disc number

3

TV / VIDEO

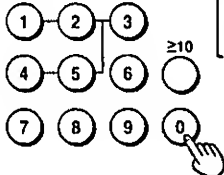

Programmed track number

 


Programmed order

4

DVD/CD



 A



Other methods of disc play

Program play

VCD CD

Remote control only

You can select up to 24 tracks to play in the order you choose.

Preparation:

- Press [SELECTOR] to select "DVD/CD".
- Ensure a Video CD or CD is in the play position tray.
(Program play is not possible if the play position tray contains a DVD or is empty.)

1

While stopped

Press [PLAY MODE] to select "PRGM".

Each time you press the button:

PRGM → RANDOM 1 DISC → RANDOM ALL DISC

↑ Original display ←

2

Press [DISC] and (within 10 seconds) [1]–[5] to select the disc.

3

Select the track with the numbered buttons.

To select tracks numbered 10 and over

Press [≥10] then the two digits.

e.g. To select track 21: [≥10] → [2] → [1]

Repeat steps 2 and 3 to program all tracks you want in the required order.

Step 2 is not necessary when selecting a track from the disc currently displayed.

4

Press [DVD/CD ▶].

All the tracks are played in the selected order.

To exit program mode

Press [PLAY MODE] to clear "PRGM".

Program contents will be saved in the memory.

You can do the following while the disc is stopped

Press [■] to cancel the resume function if it is on.

• To check program contents

While "P" is displayed (A), press [◀◀, v] or [▶▶, ^].

Each time you press a button, the disc number, track number and program order are displayed.

• To add to the program

Repeat steps 2 and 3.

• To cancel tracks

From the last programmed track Press [SHIFT] + [CLEAR].

A particular track While "P" is displayed (A) Select the track with [◀◀, v] or [▶▶, ^] then press [SHIFT] + [CLEAR].


All tracks Press [■]. "CLEAR" is displayed.

When "CD FULL" is displayed

24 tracks have been programmed. No further tracks can be programmed.

Note

- Discs and tracks the unit cannot find can be programmed but are canceled during play. This is also the case if you program a DVD.
- You can program individual tracks even if the disc is a Video CD with PBC (→ page 58).
- Skipping is done in the programmed order.

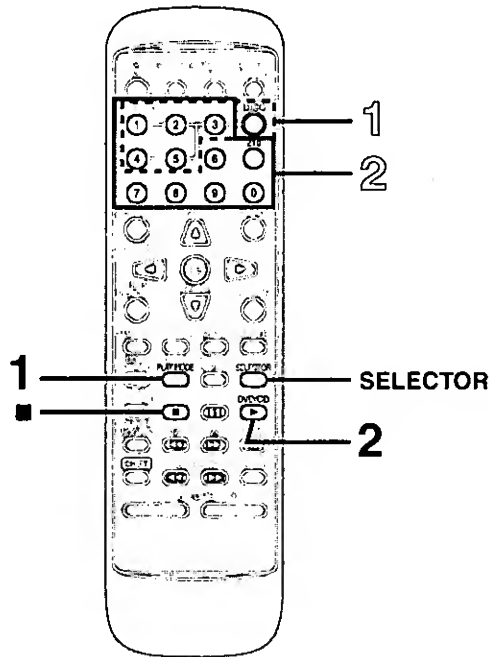

A Random play

VCD CD

Remote control only

Plays all tracks on the selected disc or on all discs once each in random order.

Select one of two ways to play tracks.

1-DISC: Plays all the tracks on the current disc in random order.

ALL-DISC: Plays all the tracks on all loaded discs in random order.

Preparation:

- Press [SELECTOR] to select "DVD/CD".

- Ensure a Video CD or CD is in the play position tray.

(Random play is not possible if the play position tray contains a DVD or is empty.)

1 While stopped

Press [PLAY MODE] to select "RANDOM 1 DISC" or "RANDOM ALL DISC".

Each time you press the button:

PRGM → RANDOM 1 DISC → RANDOM ALL DISC
 ↑ Original display

2 Press [DVD/CD ▶].

Random play starts.

Random play is canceled when play stops.

To stop

Press [■].

Random play is also canceled. (The resume function is activated and if [DVD/CD ▶] is pressed, normal play resumes from that point.)

Note

- This function skips DVD when ALL-DISC mode is selected.
- If the disc is a Video CD with PBC, menu play is automatically canceled during random play.
- You cannot skip to tracks already played.

B Starting play from a specific track

VCD CD

Remote control only

1 Press [DISC] and (within 10 seconds) [1]–[5] to select the disc.

2 After the first track starts playing Select the track with the numbered buttons.

To select track 10 or over, press [≥10] then the two digits.
Play starts from the selected track.

 
- When playing Video CDs with PBC, press [■] to stop the disc, then select the track number. PBC is canceled.

This does not work with some Video CDs with PBC.

A

1

CLEAR
PLAY MODE

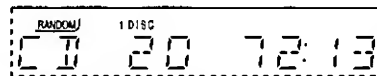


2

DVD/CD





B

 1

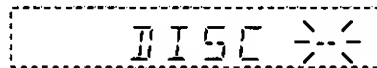


TV/VIDEO

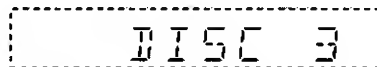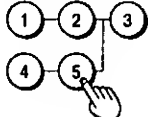  

2

TV/VIDEO

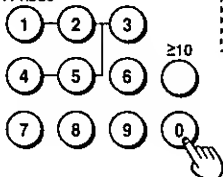

Selected track number

Using the CD MANAGER

VCD CD

Use this function to select specific discs and tracks to play. There are 3 modes.

1-track mode: Plays one selected track on the current disc.

1-disc mode: Plays the current disc.

All disc mode: Plays all loaded discs in succession from the current disc to the final disc*.

These modes make recording CDs easier (⇒ page 38).

Preparation:

- Press [SELECTOR] to select "DVD/CD".
- Ensure a Video CD or CD is in the play position tray. (You cannot use CD MANAGER if the play position tray contains a DVD or is empty.)

1 While stopped

Press [CD MANAGER] to select the desired mode.

Each time you press the button:

1-TRACK → 1-DISC → ALL-DISC → NORMAL

1-TRACK: 1-track mode

1-DISC: 1-disc mode

ALL-DISC: All-disc mode

NORMAL: The function is canceled.

You can choose the disc after step 1.

Press [DISC 1]–[DISC 5] on the main unit to select the disc.

Remote control: Press [DISC] then (within 10 seconds) [1]–[5].

2 Only when you selected "1-TRACK" in step 1

Press [1◀◀/◀◀, ∨] or [▶▶/▶▶, ∧] to select the track.

Remote control: Select with the numbered button(s).

To select track 10 or over, press [≥10] then the two digits.

e.g. To select track 21: [≥10] → [2] → [1]

3 Press [DVD/CD ▶] to start play.

The CD MANAGER is canceled after play finishes.

To stop

Press [■, TUNE MODE].

The CD MANAGER is canceled.

(The resume function is activated and if [DVD/CD ▶] is pressed, normal play resumes from that point.)

*Final disc

For example, if play starts from disc 4, disc 3 will be the "final disc".

Order of progression: Disc 4 → 5 → 1 → 2 → 3

A You can use the CD MANAGER with repeat play.

① Do steps 1–3 above.




② Press [REPEAT] on the remote control to display "⏮".


Note

• If the disc is a Video CD with PBC, the PBC function is automatically canceled when you select modes other than NORMAL.

• This function skips DVD.

• The CD MANAGER, program play (⇒ page 22) and random play (⇒ page 23) cannot be used together.

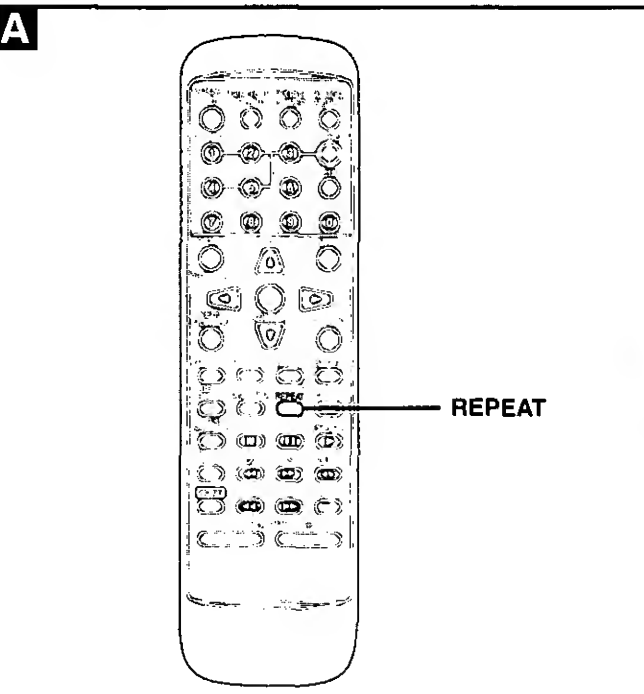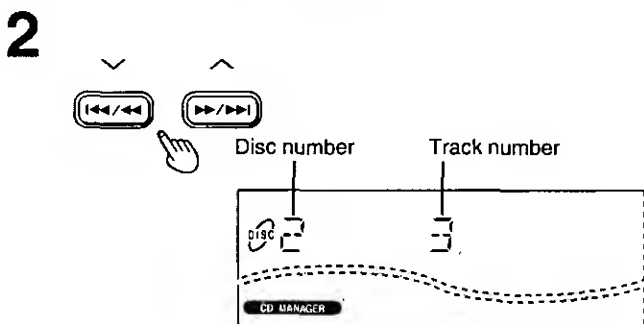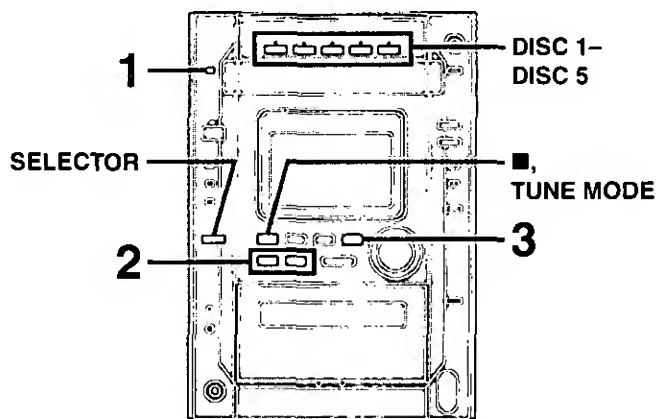

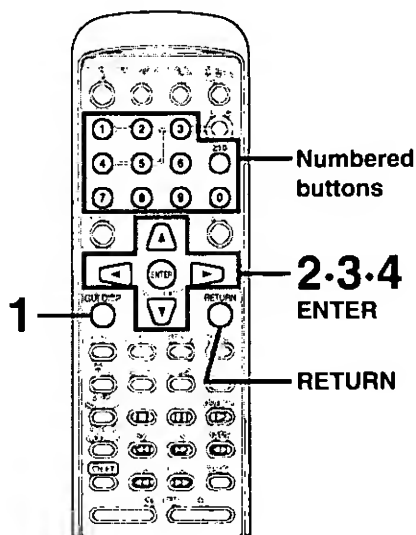


DVD

Remote control only

GUI (Graphic User Interface) are icons that contain information about the disc or unit. These icons allow you to perform operations by changing this information.

1 Press [GUI DISP].

Each time you press the button:

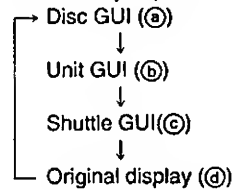


Actual GUI depend on the disc contents.

2 [Unit GUI] only

While the leftmost icon is highlighted

Press [▲], [▼] to select the menu.

Each time you press the button:

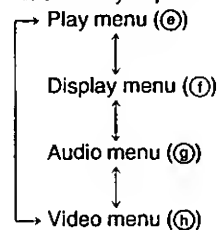

3 Press [◀], [▶] to select the item.

4 Press [▲], [▼] to select the setting.

Items with "▲" or "▼" above and below can be changed by [▲], [▼]. Other items use different buttons. See pages 26 and 27 for details.

For your reference

- Some functions cannot be accessed from the stop mode (e.g. changing the soundtrack language).
- Press [ENTER] if the setting does not change after pressing [▲], [▼].
- When numbers are displayed (e.g. title No.), the numbered buttons are also effective for setting. When numbers are entered with the numbered buttons, press [ENTER] to register the setting.

To clear the GUI

Press [RETURN] until the GUI are cleared.

To change the position of the icons


You can lower the position of the icons on the screen if they are cut off for some reason.

1. Press [◀], [▶] to select the rightmost icon.
2. Press [▲], [▼] to move the icon.




1

TEST
GUI DISP

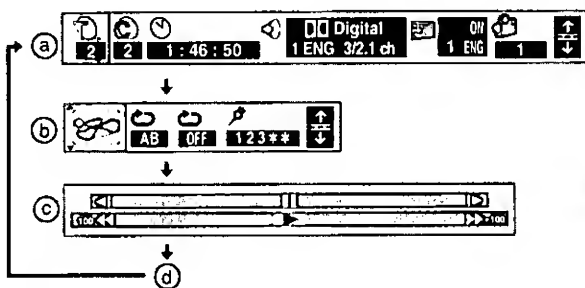

2

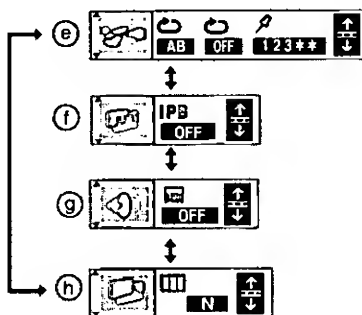

3



4



GUI icon descriptions

Disc GUI

| Icon | Content |
|------|--|
| | Title number |
| | Chapter number |
| | Time (select a position to start play by specifying a time with the numbered buttons.) |
| | Soundtrack language (See A at right for language abbreviations.) |
| | Audio signal type (See B at right for details.) |
| | (Karaoke DVD only) Karaoke vocal on/off Solo: OFF or ON Duet: OFF, V1 + V2, V1 or V2 |
| | Subtitle language (See A at right for language abbreviations.) |
| | Subtitles on/off ON ↔ OFF |
| | Angle number |

A Audio/Subtitle language

| | | |
|--------------|-----------------|-----------------|
| ENG: English | SVE: Swedish | CHI: Chinese |
| FRA: French | NOR: Norwegian | KOR: Korean |
| DEU: German | DAN: Danish | MAL: Malay |
| ITA: Italian | POR: Portuguese | VIE: Vietnamese |
| ESP: Spanish | RUS: Russian | THA: Thai |
| NLD: Dutch | JPN: Japanese | *: Others |

B Signal type/data

LPCM/□□ Digital: Signal type

k (kHz): Sampling frequency

b (bit): Number of bits

ch (channel): Number of channels

Example:

3/2.1ch

.1: Subwoofer signal
(not displayed if there is no subwoofer signal)

0: No surround
1: Mono surround
2: Stereo surround (left/right)

1: Center
2: Front left + Front right
3: Front left + Front right + Center

Unit GUI

Play menu



| Icon | Content |
|------|--|
| | A-B repeat (⇒ page 21) [ENTER] (start point)→[ENTER] (finish point) To cancel [ENTER] |
| | Repeat play (⇒ page 21) C (Chapter)↔T (Title)↔OFF ↑ |
| | Marker (⇒ page 20) [ENTER] so the unit is ready to accept marks. ----- To mark a position [ENTER] (at the desired point) To mark another position [◀], [▶]→[ENTER] ----- To recall a marker [◀], [▶]→[ENTER] ----- To erase a marker [◀], [▶]→[SHIFT] + [CLEAR] |

Video menu



| Icon | Content |
|------|--|
| | Cinema mode (⇒ page 18) C: Cinema mode N: Normal mode |

Audio menu



| Icon | Content |
|------|---|
| | (Dolby Digital, 3-channel or over only) Dialogue Enhancer Makes the dialogue in movies easier to hear. ON↔OFF (Actual result depends on discs) |

Display menu



| Icon | Content |
|------|--|
| | IPB display (⇒ page 58) Displays the picture type (I/P/B) in the still picture mode. ON↔OFF |

Shuttle GUI

| Icon | Content |
|------|--|
| | Pause |
| | Slow-motion play ◀I: Backward I▶: Forward |
| | Play |
| | Search ◀◀: Backward ▶▶: Forward |

There are five speeds for both backward and forward slow-motion and search.

The radio: manual tuning

Radio stations can be tuned manually by selecting the station's frequency or they can be preset into channels to make it easy to tune (→ page 29).

- 1 Press [TUNER, BAND] to select "FM" or "AM".

The unit comes on automatically.

Each time you press the button:

FM ↔ AM

- 2 Press [■, TUNE MODE] to select "MANUAL".

Each time you press the button:

MANUAL ↔ PRESET

- 3 Press [◀◀/▶▶, ∨] or [▶▶/▶▶, ∧] to select the frequency of the required station.

If you press and hold [◀◀/▶▶, ∨] or [▶▶/▶▶, ∧] for a moment, the frequency starts changing automatically and stops when a station is found. It may also stop if there is outside interference.

Press and hold [◀◀/▶▶, ∨] or [▶▶/▶▶, ∧] again to restart. You can also stop the frequency changing by pressing [◀◀/▶▶, ∨] or [▶▶/▶▶, ∧].

"TUNED" is displayed when a radio station is tuned.

"STEREO" is displayed when a stereo FM broadcast is being received.

- 4 Adjust the volume.

A If noise is excessive in FM

Press [REV MODE/FM MODE/BP] to display "MONO".

This mode improves sound quality if reception is weak but broadcasts are heard in monaural.

Press [REV MODE/FM MODE/BP] again to cancel the mode.

The mode is also canceled when you changed the frequency.

Leave "MONO" off for normal listening.

Stereo and monaural broadcasts are automatically played as they are received.

Allocation settings

(For areas except Australia and N.Z.)

Each country allocates broadcast bands according to their particular system.

For Latin America, China, the Middle East, South Africa, and Asia:

This unit can receive AM broadcasts allocated in 10- or 9-kHz steps.

For U.S.A., Canada, and others:

This unit can receive FM broadcasts allocated in 0.1- or 0.2-MHz steps.

To change the step







- ① Press and hold [TUNER, BAND].

After a few seconds the display changes to a flashing display of the current minimum frequency.

- ② Continue to hold [TUNER, BAND] down.

When the minimum frequency changes, release the button.

To return to the original step, repeat the above steps.

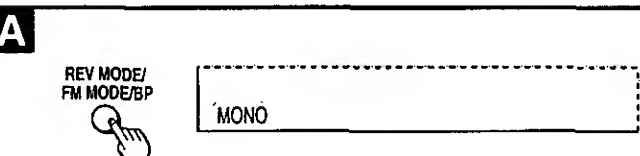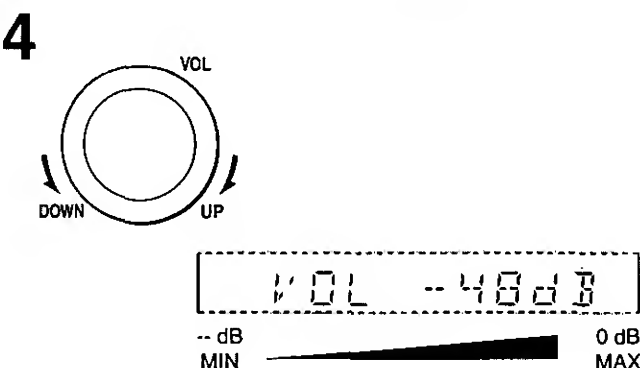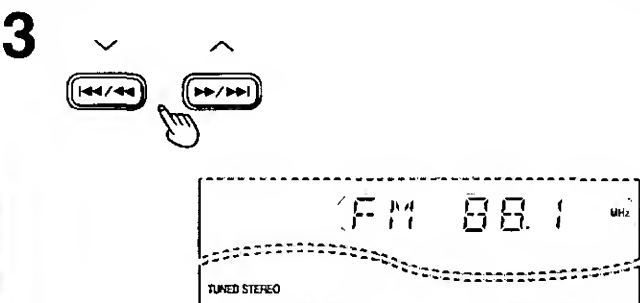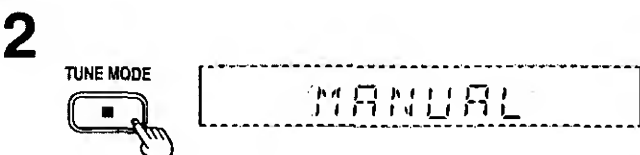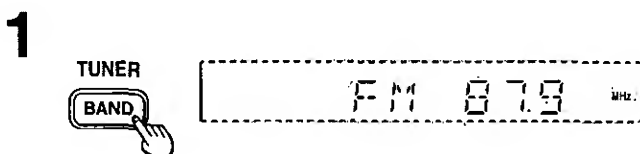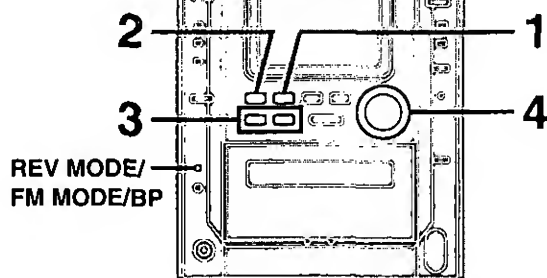

The radio: preset tuning

There are two methods of presetting stations.

Automatic presetting: The stations the tuner can receive are preset.

Manual presetting: You can select the stations to preset and the order they are preset in.

Up to 12 stations can each be set in the FM and AM bands.

A Automatic presetting

Do the following once each for FM and AM.

Preparation:

Tune to the frequency where presetting is to begin (→ page 28).

Press and hold [II, MEMORY].

Release the button when the frequency starts changing.

The tuner presets the stations it can receive into the channels in ascending order. When finished, the last station memorized is tuned in.

Manual presetting

Preset the stations one at a time.

1. Press [TUNER, BAND] to select "FM" or "AM".
2. Press [II, MEMORY] then press [◀/▶, v] or [▶/▶, ^] to tune to the required station.
3. Press [II, MEMORY] then press [◀/▶, v] or [▶/▶, ^] to select a preset channel.
4. Press [II, MEMORY].

The station occupying a channel is erased if another station is preset in that channel.

B Selecting channels

Remote control:

- 1 Press [TUNER] to select "FM" or "AM".

The unit comes on automatically.

Each time you press the button:

FM ↔ AM

- 2 Press [◀, v] or [▶, ^] to select the channel.

You can select the channel with the numbered button(s).

To select channel 10 or over

Press [≥10] then the two digits.

- 3 Adjust the volume.

Main unit:

- ① Press [TUNER, BAND] to select "FM" or "AM".






- ② Press [■, TUNE MODE] to select "PRESET".


Each time you press the button:

MANUAL ↔ PRESET

- ③ Press [◀/▶, v] or [▶/▶, ^] to select the channel.

- ④ Adjust the volume.

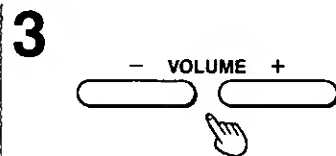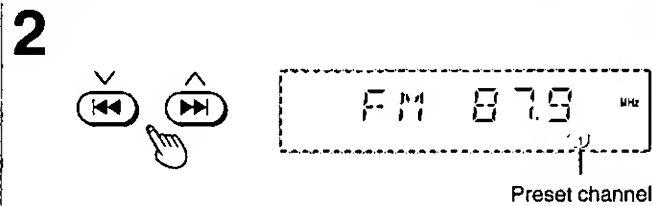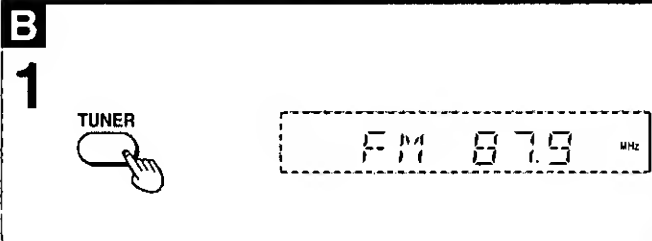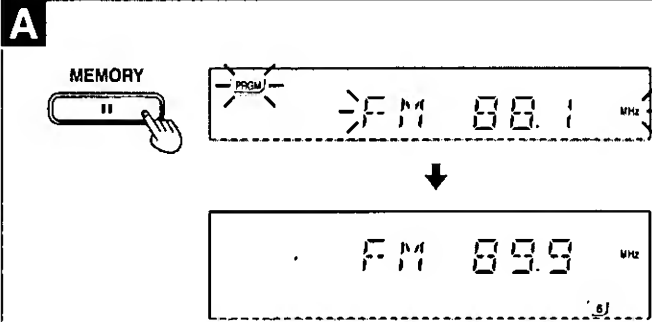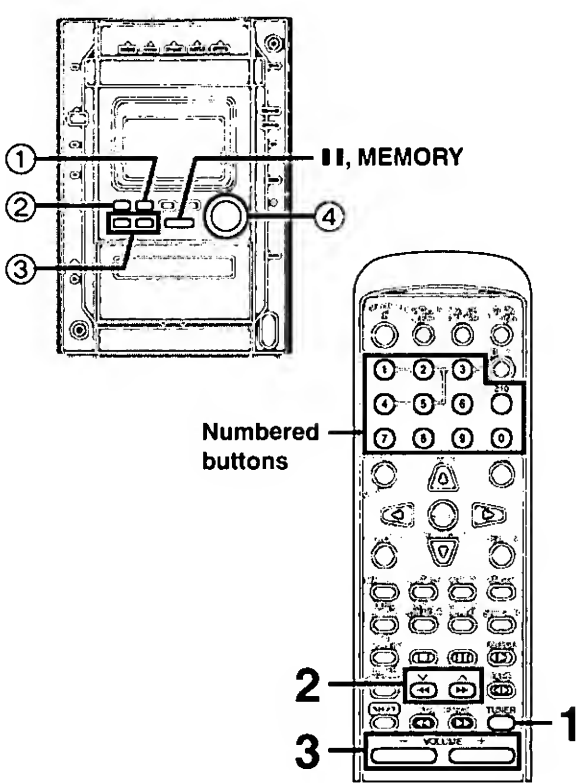

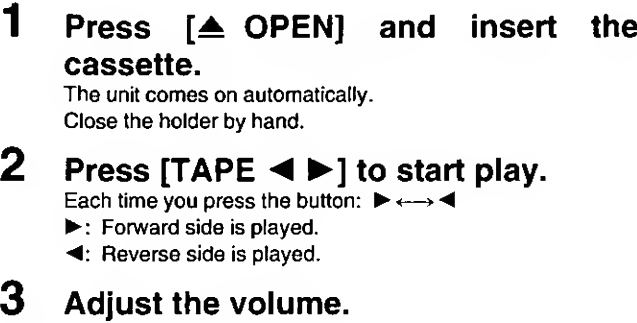

Press [■, TUNE MODE] (remote control: [■]).

While TAPE is selected as the source

Press [REV MODE/FM MODE/BP].

Each time you press the button: $\Rightarrow \rightarrow \Rightarrow \rightarrow \rightarrow \rightarrow \rightarrow$

⇒: One side is played.

→: Both sides are played. (forward→reverse)

Play stops at the end of the reverse side.

: Both sides are played repeatedly until [■, TUNE MODE] (■) is pressed.

B Finding a place on a tape

Press [**⏮**/**⏪**, **v**] or [**⏭**/**⏩**, **^**] while the tape is stopped.

Remote control: [◀◀, v] or [▶▶, ^]

To resume play, press [TAPE ◀ ▶]

Press [⏮/◀, v] or [⏭/▶, ^] during play.

Remote control: [, v] or [, ^]

Each press increases the number of tracks skipped, up to a maximum of 9.

The first skip backward takes you to the beginning of the current track.

| Tape direction | backward | forward |
|------------------|--------------------------------------|--------------------------------------|
| \triangleright | $\lll / \lll, \vee (\lll, \vee)$ | $\ggg / \ggg, \wedge (\ggg, \wedge)$ |
| \triangleleft | $\ggg / \ggg, \wedge (\ggg, \wedge)$ | $\lll / \lll, \vee (\lll, \vee)$ |

TPS may not operate correctly in the following situations:


- If the interval between tracks is less than 4 seconds.
- If there is noise between tracks.
- If there are silent segments within tracks.

Cassette tape selection and care

The unit can correctly play the following types. It identifies the type automatically.


| | |
|------------------------|---|
| Normal position/TYPE I | ✓ |
| High position/TYPE II | ✓ |
| Metal position/TYPE IV | ✓ |

- Tapes exceeding 100 minutes are thin and can break or get caught in the mechanism.
- Tape slack can get caught up in the mechanism and should be wound up before the tape is played.
- Endless tapes can get caught up in the deck's moving parts if used incorrectly. Use tapes appropriate to this unit's auto-reverse mechanism.

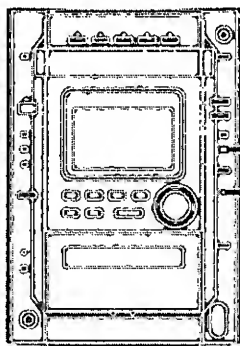

SOUND EQ

SUPER WOOFER

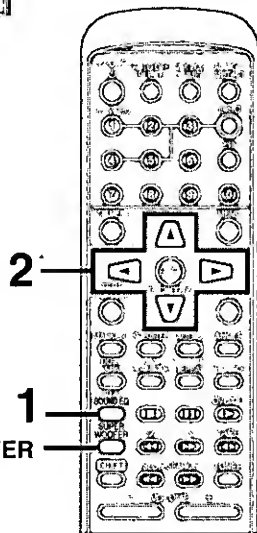

2

1

SUPER WOOFER

A Adjusting the bass

Press [SUPER WOOFER].

The button lights when the feature is on.

•When listening through speakers

Each time you press the button:

MID (medium) → MAX (high) → OFF (off)

•When listening through headphones

Each time you press the button:

Light on (on) ↔ Light off (off)

To cancel

Press [SUPER WOOFER] to turn the light off.

B Changing sound field and quality

Press [SOUND EQ] to select a setting.

Each time you press the button:

HEAVY: Adds punch to rock.

CLEAR: Clarifies higher sounds.

SOFT: For background music.

DISCO: Reverberates sound to make you feel like you were in a disco.

LIVE: Makes vocals more alive.

HALL: Expands sound to make you feel like you were in a hall.

MANUAL (M.EQ): Create your own effects (→ below).

AI EQ: Adjust sound with the acoustic image equalizer (→ page 32).

FLAT: Canceled (no effect is added).

Remote control: Press [SOUND EQ].

Note

SOUND EQ and SUPER SOUND EQ (→ page 32) cannot be used at the same time.

C Using the manual equalizer (MANUAL)

Create your own sound quality effects.

Remote control:

1 Press [SOUND EQ] to select "MANUAL".

2 (Within 10 seconds)
Change the sound quality with the cursor buttons.

① Select the sound range to be adjusted with [◀] or [▶].

② Adjust the level with [▲] or [▼].

Repeat step 2 to set the desired sound quality.

The original display is restored on the display panel in about 10 seconds.

 
To cancel

Press [SOUND EQ] to select "FLAT".

The changes you make are stored and automatically recalled the next time you select "MANUAL".


A

SUPER WOOFER

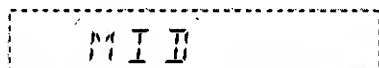

B


SOUND EQ

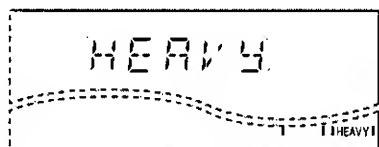

C


1

3D AI SOUND EQ

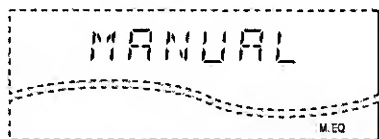

2


①

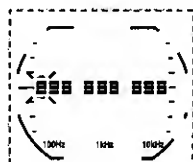

②



LOW ← MID → HIGH

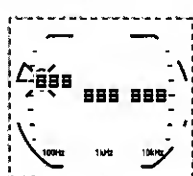

Using the acoustic image equalizer (AI EQ)

Achieve subtle sound quality settings with the soft, sharp, heavy, and light coordinates, and add surround effects with the three-dimensional settings.

Turning AI EQ on

Main unit: Press [SUPER 3D AI].
Remote control: Press [SHIFT] + [3D AI].
 The current AI EQ mode is displayed.
 Press again to select another 3D level.
 Each time you press the button:
 AI EQ → 3D AI 1 → 3D AI 2

3D AI 1: Adds a surround effect to the AI EQ.
 3D AI 2: Adds a stronger surround effect to the AI EQ.

A Adjusting the sound quality

Remote control only

- 1 Turn on AI EQ and select the level.
- 2 (Within 10 seconds)
 Change the sound quality with the cursor buttons.
 Adjust softness and sharpness with [◀] or [▶].
 Adjust heaviness and lightness with [▲] or [▼].
 The original display is restored on the display panel in about 10 seconds.

The level and changes you make are stored and recalled the next time you turn the AI EQ on as described above, or select it with [SOUND EQ] (⇒ page 31).

To cancel
 Press [SOUND EQ] to select "FLAT".

Note






- "3D AI 1" and "3D AI 2" cannot be selected when you are playing a DVD (except for MIX 2CH mode, ⇒ page 34) or listening to the radio.
- "3D AI 1" and "3D AI 2" cannot be selected while a surround system (⇒ page 33).

B Using the super sound equalizer

Turning on the super sound equalizer gives you a more powerful sound.

Press [SUPER SOUND EQ].
 The indicator lights.

To cancel
 Press [SUPER SOUND EQ] so the indicator turns off.

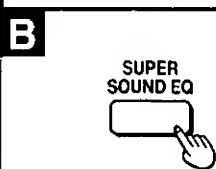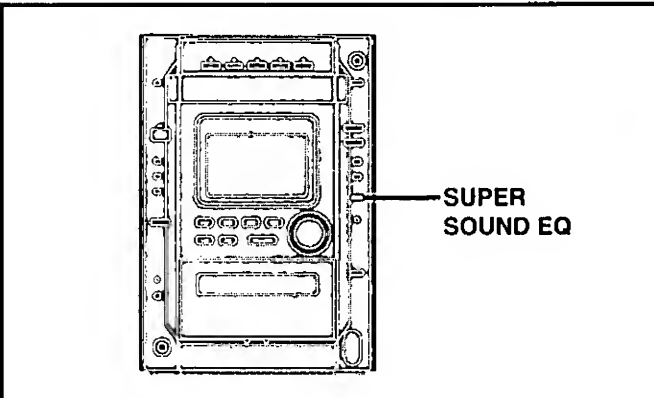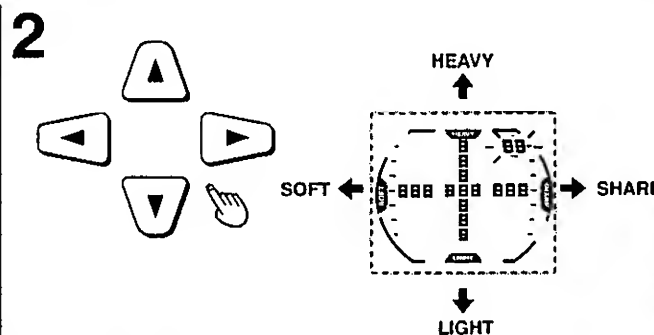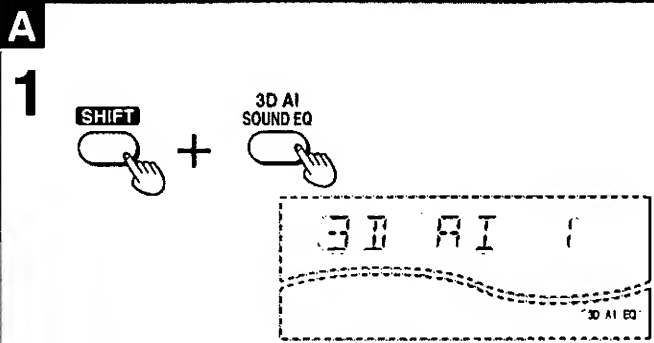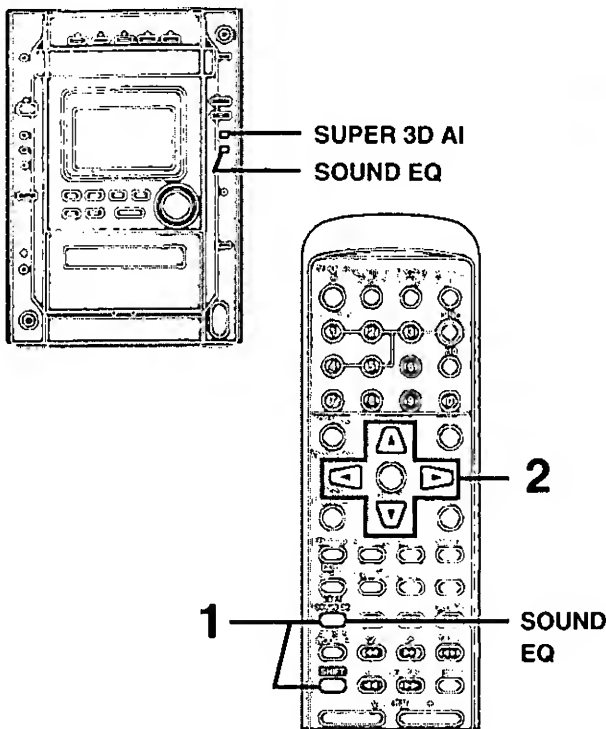



Enjoying surround sound

The following chart gives a summary of this unit's surround features.

Note

- All the features are only effective if speakers are used. No discernible effect will be heard through headphones.
- None of the features are effective when radio is selected as the source.
- You may experience a reduction in sound quality when these surround systems are used with some sources. If this occurs, turn the surround system off.

| Surround system | | Features | Software |
|---------------------------------------|--------------|---|---|
| DOLBY DIGITAL (→ page 34) | | <ul style="list-style-type: none"> • Dolby Digital is a discrete 5.1 (6) channel surround system developed for cinema use. The sound signals in Dolby Digital format are compressed to 1/10 their original size, allowing an entire movie to be recorded on a single DVD. • This unit automatically recognizes DVDs that have been recorded with Dolby Digital. • Not all Dolby Digital sources are recorded with 5.1 (6) channels. Some sources marked Dolby Digital may be recorded in Dolby Surround, a 2 channel system. | Software encoded with Dolby Digital can be identified with this mark.  <ul style="list-style-type: none"> • DVD |
| DOLBY PRO LOGIC (→ page 34) | | Dolby Pro Logic is a decoding system that was developed to get a better sense of presence from sources encoded with Dolby Surround. The feeling of position has been improved by the addition of a separate center speaker channel. | Software encoded with Dolby Surround can be identified with this mark.  <ul style="list-style-type: none"> • DVD • Video CD, CD • Laser Disc • Video tape |
| SUPER SURROUND (→ page 36) | MOVIE | <ul style="list-style-type: none"> • This mode adds surround effects to movie software that hasn't been recorded with the above systems. • You can adjust the volume of the surround speakers to get the best surround effect. | Any stereo sound source except for the radio. |
| | MUSIC | <ul style="list-style-type: none"> • This mode adds surround effects to stereo sources. • You can adjust the volume of the surround speakers to get the best surround effect. | |

Manufactured under license from Dolby Laboratories.
 "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.
 Confidential unpublished works. © 1992–1997 Dolby Laboratories. All rights reserved.

See page 35 for speaker level adjustment.

A DOLBY DIGITAL

Play a DOLBY DIGITAL source.

"DOLBY DIGITAL" is displayed.

Subwoofer

You can enhance the surround sound by connecting another subwoofer (→ page 47 for connection).

If you connect the subwoofer:

Press and hold [SUPER WOOFER] on the main unit until "SUB W ON" is displayed.

If you disconnect the subwoofer:

Press and hold [SUPER WOOFER] on the main unit until "SUB W OFF" is displayed.

B To down-mix Dolby Digital (5.1 ch) signals to 2 channels

Remote control only

Press [SHIFT] + [MIX 2CH].

To cancel, press [SHIFT] + [MIX 2CH] again.

C DOLBY PRO LOGIC

1 Press [DOLPL].

The button lights.

Remote control: Press [SHIFT] + [DOLPL].

2 Playback a Dolby Surround source.


To cancel

Press [DOLPL] ([SHIFT] + [DOLPL]).

The light turns off.

Note


Turn Dolby Pro Logic off when playing a DVD recorded with 5.1 channel Dolby Digital. The surround effects will not be reproduced correctly if this is left on.

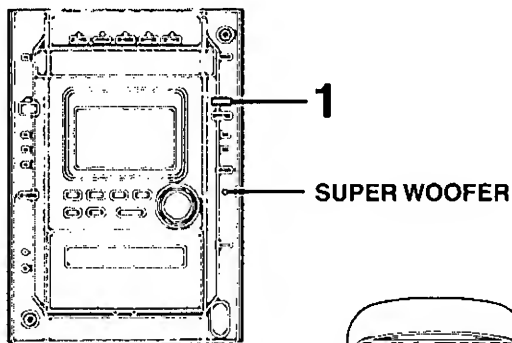

MIX 2CH

DOLPL


SHIFT

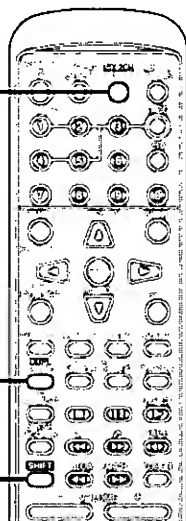

A

DOLBY DIGITAL

 
B

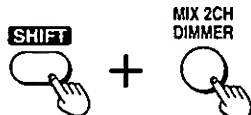

MIX 2ch

C

 1

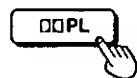

DOLBY



PRO LOGIC

Speaker level adjustments

If the level of the speakers appears to be different while listening to a source, adjust the level of the speakers to the same apparent level.

Remote control only

Preparation

DOLBY DIGITAL: Turn off the other surround systems.

DOLBY PRO LOGIC: Press [SHIFT] + [DOLPL] to turn the light on.

- Press [SHIFT] + [TEST] to output a test signal.

Lch: Front left

Cch: Center

Rch: Front right

RSch: Right surround

LSch: Left surround

•The surround channel for Dolby Pro Logic is monaural so the indicator appears as "Sch" instead.

- Press [▲] (to increase) or [▼] (to decrease).

To stop the test signal, press [SHIFT] + [TEST] again.

To select a specific speaker

- Press [SHIFT] + [CH SELECT] to select the speaker.



 

Lch→Cch→Rch→RSch→LSch→SWch


↑

•SWch: Subwoofer (Dolby Digital, only when connected)

•The surround channel for Dolby Pro Logic is monaural so the indicator appears as "Sch" instead.

- Press [▲] (to increase) or [▼] (to decrease).

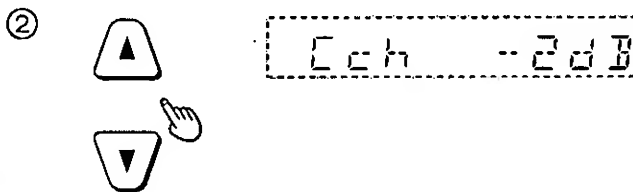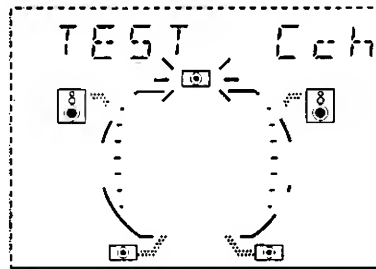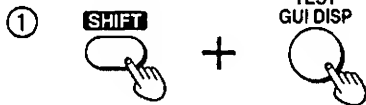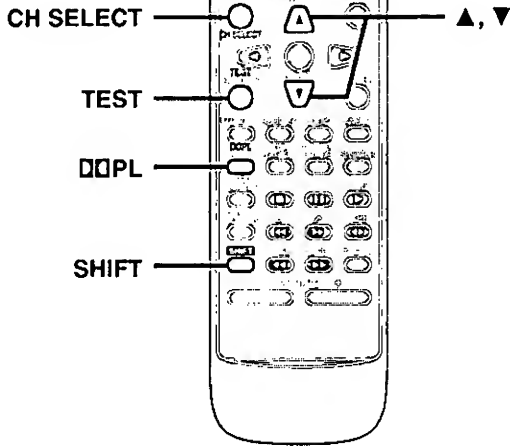

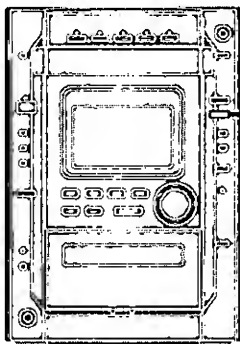


S.SRND

CH SELECT

▲, ▼

S.SRND

SHIFT

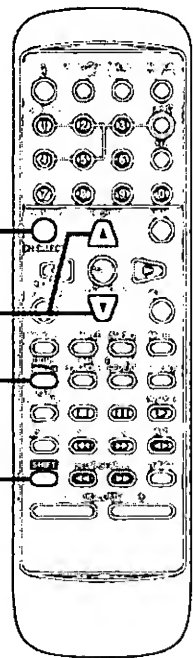

A SUPER SURROUND

Press [S.SRND] to select "MOVIE" or "MUSIC".

The button lights.

Each time you press the button:

MUSIC → MOVIE → STEREO SOUND (off)

To cancel

Press [S.SRND] so the indicator turns off.

Note

Turn super surround off when playing a DVD recorded with 5.1-channel Dolby Digital. The surround effects will not be reproduced correctly if this is left on.

 
B Surround speaker level adjustments

Remote control only

While playing a source

- ① Press [SHIFT] + [CH SELECT].
- ② Press the cursor buttons [▲] (to increase) or [▼] (to decrease).

A

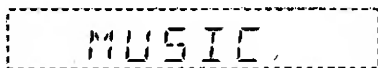

B

①

SHIFT

+

TOP MENU



CH SELECT



②



Before recording

Selection of tapes for recording

The unit automatically identifies the type of tape.

| | |
|-------------------------|---|
| Normal position/TYPE I | ✓ |
| High position/ TYPE II | ✓ |
| Metal position/ TYPE IV | × |

Metal position tapes can be used, but the unit will not be able to record or erase them correctly.

Volume, sound quality and surround effects

- Recording level is set automatically.
- Multi-channel sources (3 to 5.1 channels) are automatically down-mixed to 2 channels during recording.
- Turn on dynamic range compression if sound is distorted (⇒ Audio-D.Range Compression, pages 50–53).
- All sound effects are automatically set to flat.

A Erasure prevention

The illustration shows how to remove the tabs to prevent recording. To record on the tape again, cover as shown, being careful not to cover the high position discrimination hole.

B Erasing recordings

Preparation:

(For China, the Middle East, South Africa and Asia)
Disconnect the microphones.

- ① Press [SELECTOR] to select "TAPE".
- ② Press [REV MODE/FM MODE/BP] to select the reverse mode.
- ③ Press [● REC/STOP].

C Preparatory steps

Do these steps before each recording.

Wind up the leader tape so recording can begin immediately.

1 Press [▲ OPEN] and insert the cassette to be recorded on.

 
The tape direction is automatically set to "▷".

To record on the reverse side

Press [TAPE ◀▶] twice, then press [■, TUNE MODE].

2 Select "TAPE" with [SELECTOR], then Press [REV MODE/FM MODE/BP] to select the reverse mode.


Each time you press the button:

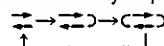

- ▷: One side only records.
- ◁▷ and ▷◁: Both sides record (forward→reverse). Recording stops at the end of the reverse side.

"◁▷" automatically changes to "▷◁" when [● REC/STOP] is pressed.

A

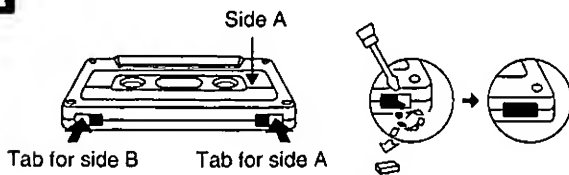

To re-record


Normal tape

High position tape




Discrimination hole



B

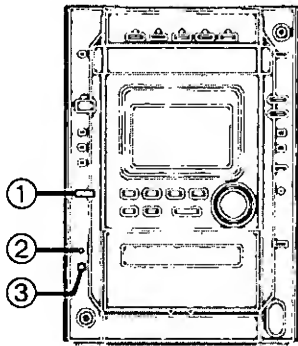

C

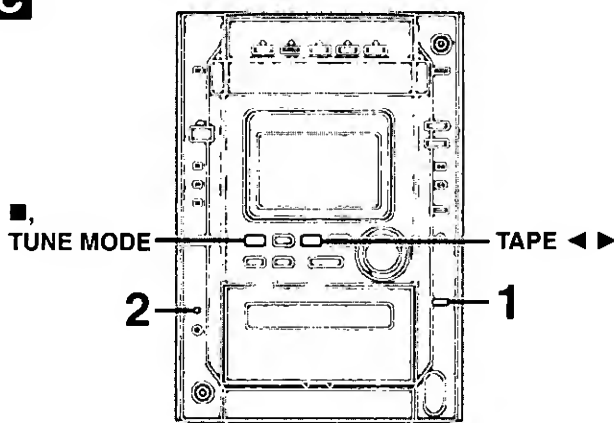



1

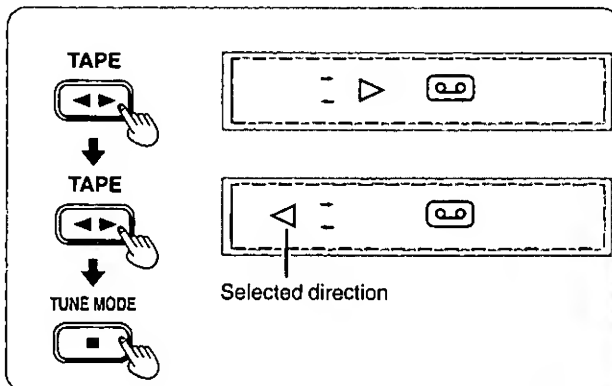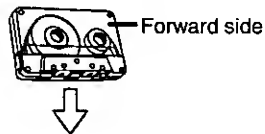


2

 REV MODE/
FM MODE/BP

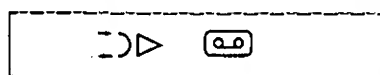

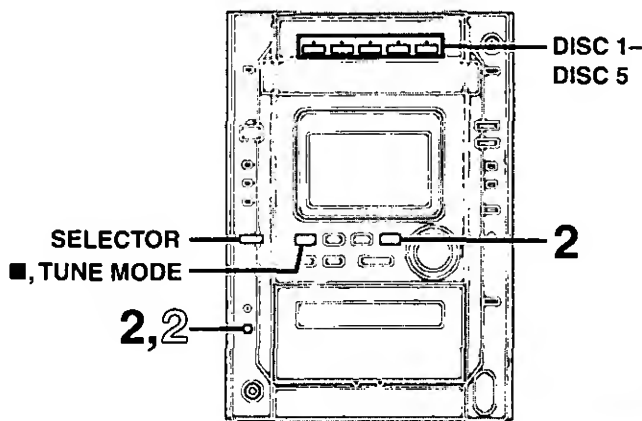


2

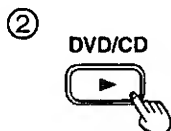

2



A

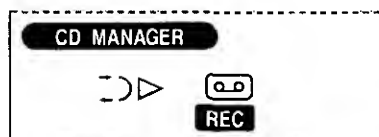

Recording discs

Preparation:

- Do the preparatory steps (⇒ page 37).
- Press [SELECTOR] to select "DVD/CD".

Normal recording

1,1 Insert the disc you want to record.

If play starts, press [■, TUNE MODE] twice to stop the disc.

If the disc is not in the play position (⇒ page 14), press [DISC 1]-[DISC 5] to select the disc, then press [■, TUNE MODE] twice.

DVD VCD

- 1 Press [●REC/STOP].
- 2 Press [DVD/CD ►] to start play.

CD

- 2 Press [●REC/STOP] to start recording.

The CD starts.

- With DVDs and Video CDs, play will not start when you press [●REC/STOP]. Press [DVD/CD ►] to start play.

To stop recording

EITHER: Press [●REC/STOP].

The DVD/Video CD keeps playing.

The CD stops automatically.

OR:

Press [■, TUNE MODE].

The CD stops, and the tape stops after making a 4 second silent interval.

To record programmed tracks

Video CD and CD only

- 1 Program the tracks (⇒ page 22, steps 1-3).

- 2 Press [●REC/STOP] to start recording.

Play starts.

To stop recording, press [●REC/STOP].

Disc play stops automatically.

A Recording with CD MANAGER (⇒ page 24)

VCD CD

Record discs after selecting the required CD MANAGER mode (1-TRACK, 1-DISC, ALL-DISC).

- If a track is cut off in the middle at the end of the front side while recording, the track will be recorded from the beginning on the reverse side.

- At the end of the reverse side, recording stops and the current track will be interrupted.

- Recording pauses while discs are changing and resumes when the disc is ready.

- 1 Insert the disc you want to record.

If play starts, press [■, TUNE MODE] twice to stop the disc.

- 2 Do steps 1 and 2 on page 24.

- 3 Press [●REC/STOP] to start recording.

Play starts.

To stop recording

Press [●REC/STOP].

Disc play stops automatically.

A Recording the radio

Preparation: Do the preparatory steps (⇒ page 37).

- 1 Tune to the required station.**
(⇒ page 28 or 29)
- 2 Press [●REC/STOP] to start recording.**

To stop recording

Press [●REC/STOP].

B To reduce noise while recording an AM broadcast (Beat proof function)

Press [REV MODE/FM MODE/BP] while recording.

Each time you press the button:

BP 1 → BP 2

Select the position where there is less noise.

C Enjoying karaoke

(For China, the Middle East, South Africa and Asia)

You can enjoy karaoke only while playing discs.

(You cannot use karaoke mode if you have selected a source other than DVD/CD.)

DVD

There are different kinds of karaoke DVD.

- There are DVD where the different parts for karaoke are recorded separately, as shown in the example (⇒ page 40 for operation).

Example

Channel 1: Stereo accompaniment (left)

Channel 2: Stereo accompaniment (right)

Channel 3: Guide melody

Channel 4: Vocal 1

Channel 5: Vocal 2

- There are discs that have audio for karaoke and audio with vocals recorded separately.

Press [AUDIO] to switch between the two when playing this type of disc (⇒ page 19).

- There are also discs where you can enjoy karaoke by pressing [ONE TOUCH] (⇒ page 41).

Video CDs and CDs

Follow the steps described on page 41.

Preparation:

- Press [POWER \odot/I] to turn the unit on.
- Turn on the television and switch the video-input mode on the television to suit the connection.
- Lower the microphone volume with [SHIFT] + [- MIC +], then connect the microphone to the microphone jacks. Use a dynamic microphone.


Plug type: 3.5 mm (1/8") stereo

Audio is automatically switched to stereo (2ch).

You cannot do karaoke with surround effects or 3D AI EQ.

Note

- If a strange noise (squealing or howling) is emitted during use, move the microphone away from the speakers, or turn down the microphone volume.
- When you are not using the microphone, disconnect it from the microphone jacks, and turn down the microphone volume level to 0.

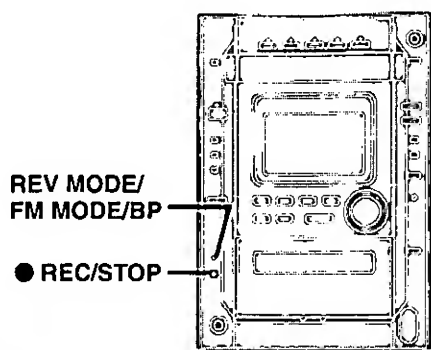


A

●REC/STOP




B

 REV MODE/
FM MODE/BP

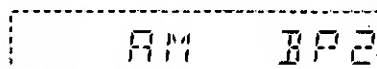


C

POWER
 \odot/I

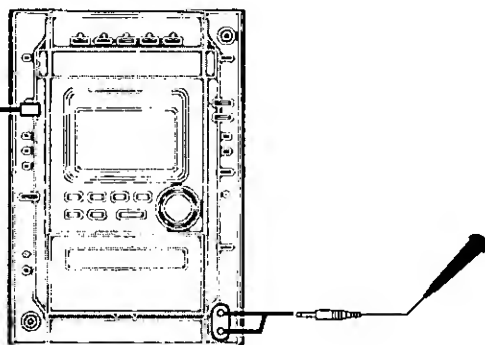

\odot/I

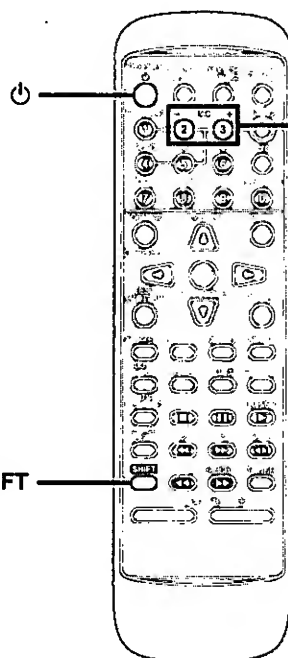


- MIC +

SHIFT

Enjoying karaoke

(For China, the Middle East, South Africa and Asia)

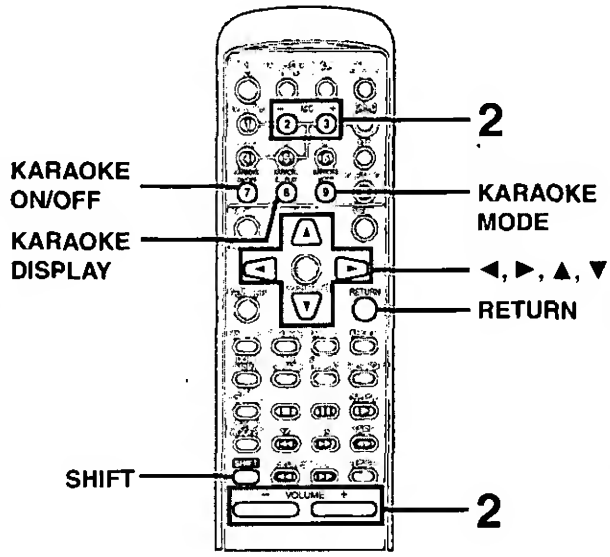

A Before karaoke

Press [SHIFT] + [KARAOKE ON/OFF] to display "KARAOKE ON".

Each time you press the button:
KARAOKE ON (on) ↔ KARAOKE OFF (off)
The illustrated microphone indicator lights while the karaoke mode is on.

B Enjoying karaoke with karaoke DVD

DVD

Remote control only

- 1 Insert the disc and start play (→ page 14).
- 2 Start singing and adjust volume with [- VOLUME +] and [SHIFT] + [- MIC +].
You can adjust the microphone volume level between 0 and 9.

C Changing the volume of the guide melody

DVD with the guide melody recorded only

You can sing along with the aid of a guide melody which plays the tune of the song.

- ① During play
Press [SHIFT] + [KARAOKE DISPLAY].
The karaoke GUI is displayed on the TV.
- ② Press the cursor buttons [◀], [▶] to select the guide melody icon.
- ③ Press the cursor buttons [▲], [▼] to select the setting.

To clear the karaoke GUI

Press [SHIFT] + [KARAOKE DISPLAY].
OR
Press [RETURN].

D Turning the vocals on and off







You can listen to vocals recorded on the disc.

During play
Press [SHIFT] + [KARAOKE MODE].
The karaoke GUI is displayed on the TV.
Each time you press the button:

- | | |
|----------------|-----------------------|
| •Solo | •Duet |
| OFF: Vocal off | OFF: Vocal off |
| ON: Vocal on | 1+2: Vocal 1 and 2 on |
| | V1: Vocal 1 on |
| | V2: Vocal 2 on |


To clear the karaoke GUI

Press [SHIFT] + [KARAOKE DISPLAY].
OR
Press [RETURN].

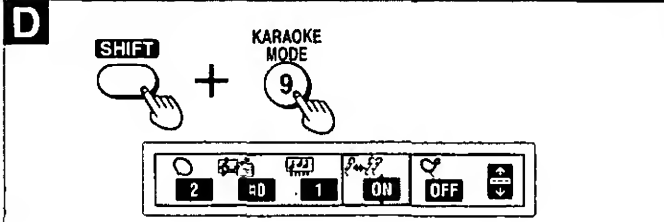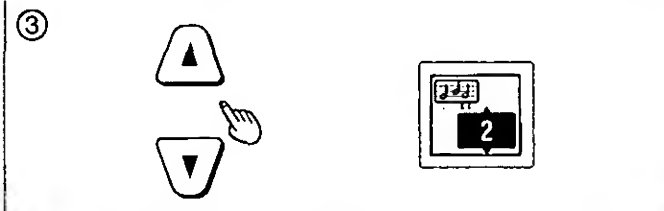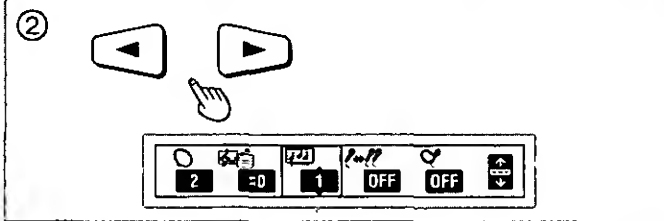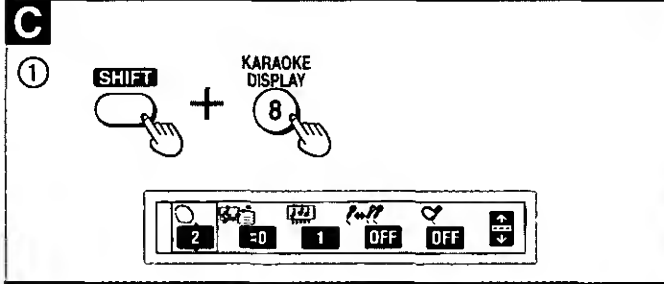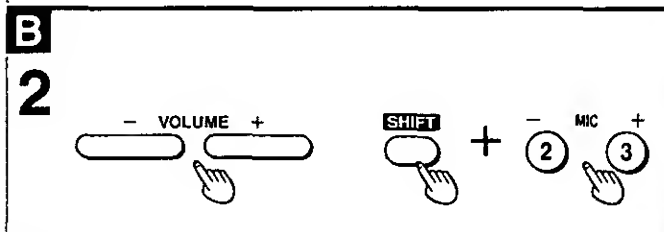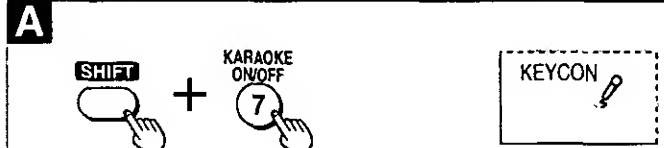

Enjoying karaoke

(For China, the Middle East, South Africa and Asia)

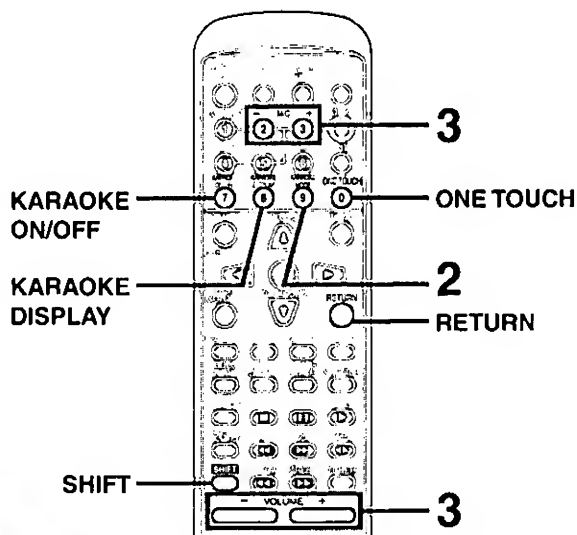

A Before karaoke

Press [SHIFT] + [KARAOKE ON/OFF] to display "KARAOKE ON".

Each time you press the button:

KARAOKE ON (on) ↔ KARAOKE OFF (off)

The illustrated microphone indicator lights while the karaoke mode is on.

B Enjoying karaoke with other karaoke discs

VCD CD

Remote control only

1 Insert the disc and start play (→ page 14).

2 Press [SHIFT] + [KARAOKE MODE].

The karaoke GUI is displayed on the TV.

Each time you press the button:

L → R → L+R → LR

L: Only left channel sound (No vocal)

R: Only right channel sound (Vocal)

L+R: Left and right channel sound is heard from both speakers. (Vocal and accompaniment)

LR: Left channel sound is heard from the left speaker and right channel sound is heard from the right speaker. (Vocal and accompaniment)

Select no vocal for karaoke.

Vocal and no vocal may be reversed.

3 Start singing and adjust volume with [– VOLUME +] and [SHIFT] + [– MIC +].

You can adjust the microphone volume level between 0 and 9.

To clear the karaoke GUI

Press [SHIFT] + [KARAOKE DISPLAY].

OR

Press [RETURN].

C Enjoying karaoke with non-karaoke discs

DVD VCD CD

This function reduces the vocal volume.

① Insert the disc and start play (→ page 14).

② Press [SHIFT] + [ONE TOUCH].

The karaoke GUI is displayed on the TV.

Each time you press the button:

ON (on) ↔ OFF (off)

③ Start singing and adjust volume with [– VOLUME +] and [SHIFT] + [– MIC +].

To clear the karaoke GUI



Press [SHIFT] + [KARAOKE DISPLAY].

OR

Press [RETURN].

Note

Depending on the type of prerecorded songs, vocal volume cannot be reduced.

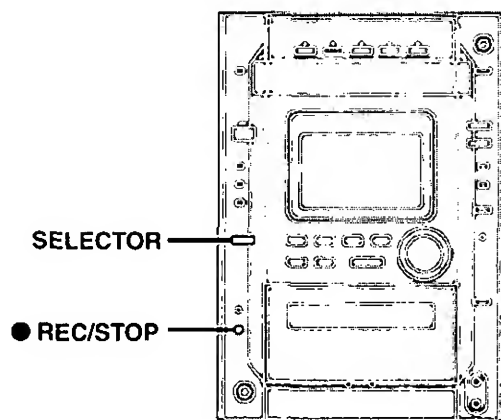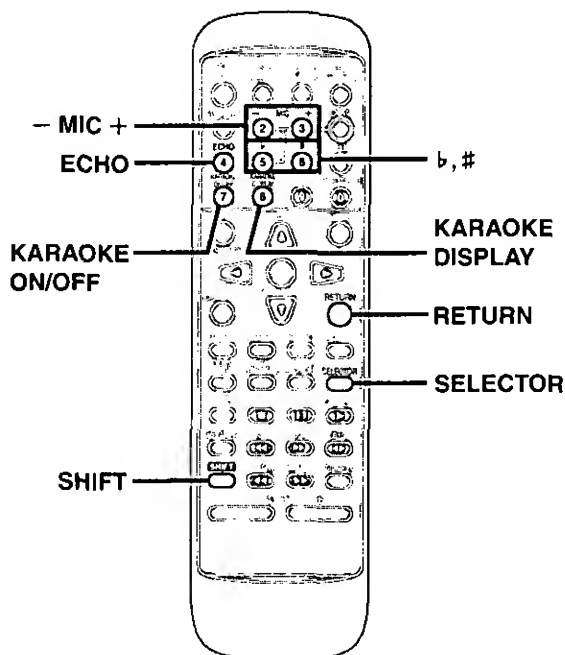

Enjoying karaoke

(For China, the Middle East, South Africa and Asia)

A Before karaoke

Press [SHIFT] + [KARAOKE ON/OFF] to display "KARAOKE ON".

Each time you press the button:

KARAOKE ON (on) ↔ KARAOKE OFF (off)

The illustrated microphone indicator lights while the karaoke mode is on.

B Changing the key

Remote control only

Press [SHIFT] + [b], [#].

The karaoke GUI is displayed on the TV.

b: Lower the key.

#: Raise the key.

You can raise or lower the key by 6 steps.

To cancel

Press [SHIFT] + [b], [#] to display "0".

To clear the karaoke GUI

Press [SHIFT] + [KARAOKE DISPLAY].

OR

Press [RETURN].

C Adding an echo effect

Remote control only

Press [SHIFT] + [ECHO].

Each time you press the button:

ECHO1 → ECHO2 → ECHO3 → ECHO OFF (off)

The effect increases with the level.

To record your karaoke performance

Preparation: Do the preparatory steps (⇒ page 37).

Press [●REC/STOP] and start your karaoke performance.

Note

 
 
- The karaoke mode is off when you playback the recorded tape.
- You cannot record in karaoke mode using sound quality effects.

Recording sound from the microphone



Preparation: Do the preparatory steps (⇒ page 37).

- ① Press [SELECTOR] to select "TAPE".
- ② Press [●REC/STOP] to start recording.
- ③ Speak through the microphone and adjust the microphone volume with [SHIFT] + [- MIC +].


A

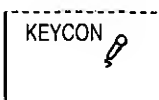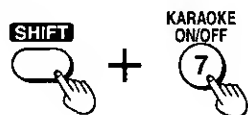


B

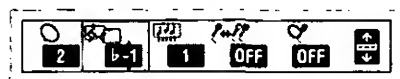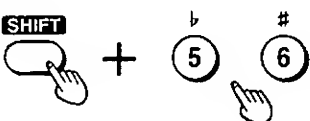 

C

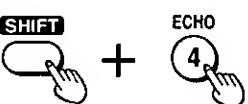 

(On the unit's display)

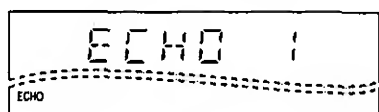 

The play timer

This timer starts play of the selected source at the selected time.

For U.S.A. and Canada: 12-hour clock

For others: 24-hour clock

The example shows settings on the 12-hour clock for play between 6:30 a.m. and 7:40 a.m.

Preparation:

● Press [POWER \odot /I] to turn the unit on, set the time (\Rightarrow page 12).

● Select the desired source for timer play.

Disc

Press [SELECTOR] to select "DVD/CD" and insert an Audio CD, etc.

If more than one disc is loaded

Press [DISC 1]–[DISC 5] to select the disc you want to play and press [■, TUNE MODE].

Tape

Press [SELECTOR] to select "TAPE" and insert a cassette.

The radio

Press [TUNER, BAND] and tune in the desired station.

● Set the volume for timer play.

1 Press [CLOCK/TIMER] to select "⊙PLAY".

Each time you press the button:

CLOCK \rightarrow ⊙PLAY \rightarrow ⊙REC \rightarrow Original display

2 ON time setting

① (Within 8 seconds)

Press [I◀◀/◀◀, v] or [▶▶/▶▶I, ^] to select the start time.

② Press [CLOCK/TIMER].

3 OFF time setting

① Press [I◀◀/◀◀, v] or [▶▶/▶▶I, ^] to select the finish time.

② Press [CLOCK/TIMER].

4 Press [⊙PLAY/⊙REC] to display "⊙PLAY".

Each time you press the button:

⊙PLAY \rightarrow ⊙REC \rightarrow Original display

5 Press [POWER \odot /I] to turn the unit off.

The timer will start in the set condition at the set time.


The volume increases gradually to the set level.







If you set the timer incorrectly

Repeat the procedure from step 1.

To cancel the timer

Press [⊙PLAY/⊙REC] to clear "⊙PLAY".

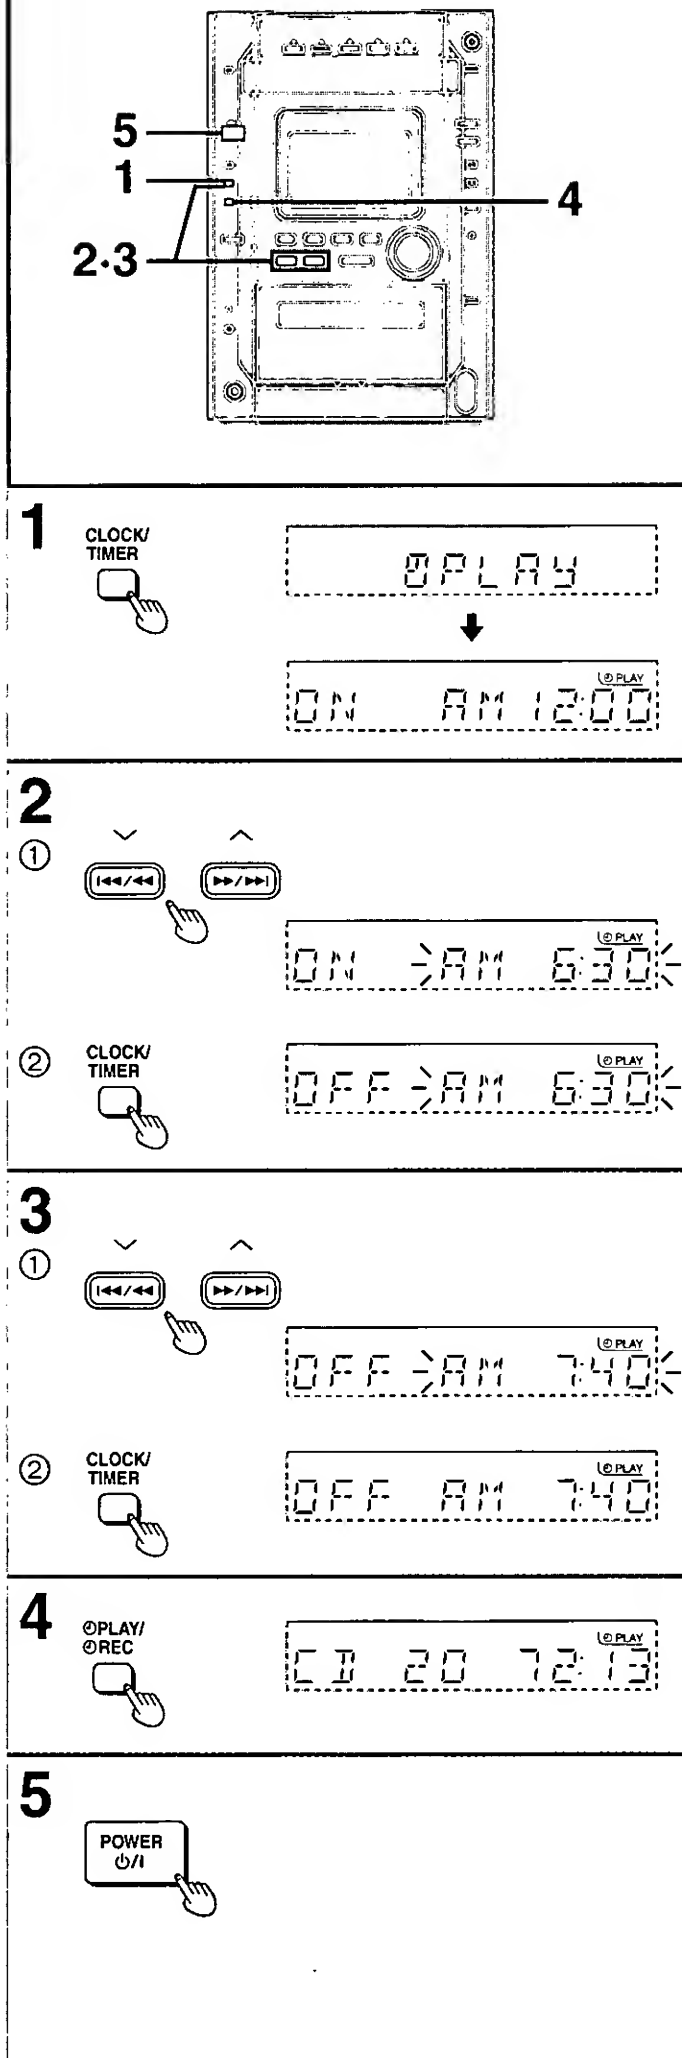

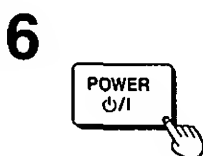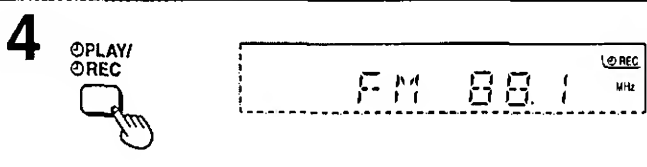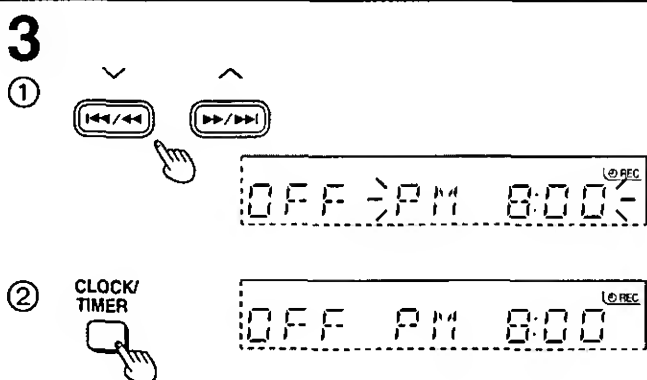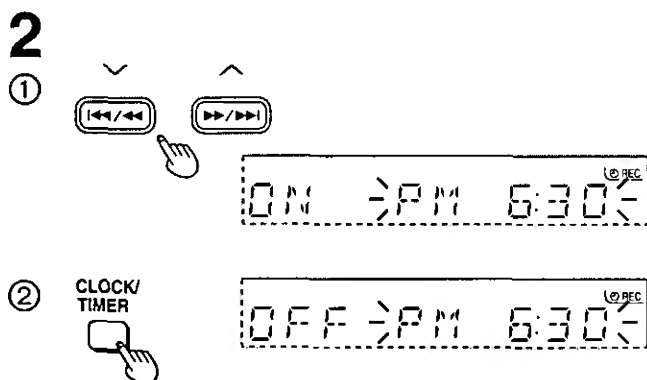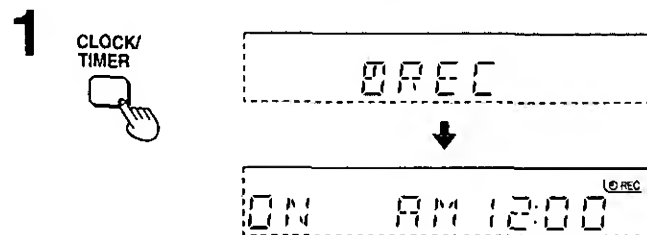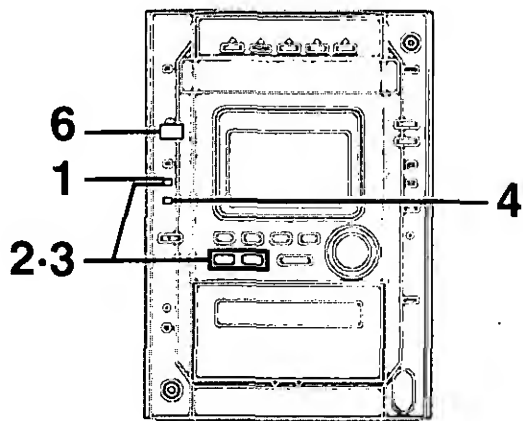

Using the timers

The record timer

This timer records the radio at the set time.

For U.S.A. and Canada: 12-hour clock

For others: 24-hour clock

The example shows settings on the 12-hour clock for recording from 6:30 p.m. to 8:00 p.m.

Preparation:

- Press [POWER \odot /I] to turn the unit on, set the time (\Rightarrow page 12).
- Press [TUNER, BAND] and tune in the desired station.

1 Press [CLOCK/TIMER] to select "0 REC".

Each time you press the button:

CLOCK \rightarrow \odot PLAY \rightarrow \odot REC \rightarrow Original display

2 ON time setting

- (Within 8 seconds)

Press [I<</>>, v] or [>>/>>I, ^] to select the start time.

- Press [CLOCK/TIMER].

3 OFF time setting

- Press [I<</>>, v] or [>>/>>I, ^] to select the finish time.

- Press [CLOCK/TIMER].

4 Press [\odot PLAY/ \odot REC] to display "0 REC".

Each time you press the button:

\odot PLAY \rightarrow \odot REC \rightarrow Original display

5 Prepare for recording (\Rightarrow page 37).

- Insert a tape and set the tape direction.
- Select the reverse mode.

6 Press [POWER \odot /I] to turn the unit off.

Recording starts 30 seconds before the set time with the volume muted.

If you set the timer incorrectly


Repeat the procedure from step 1.

To cancel the timer


Press [\odot PLAY/ \odot REC] to clear "0 REC".

A


CLOCK/
TIMER
⊙PLAY/
⊙REC

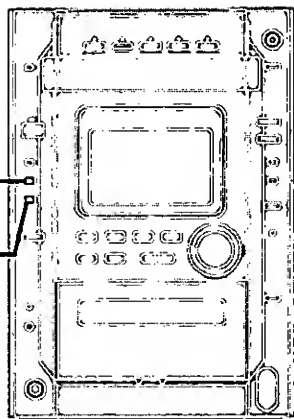**B**

SLEEP

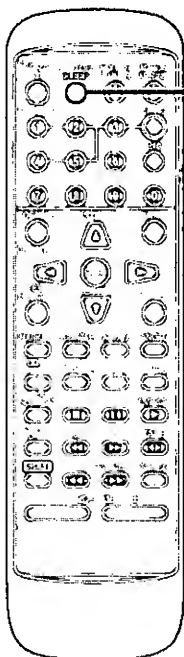

AUTO OFF
SLEEP

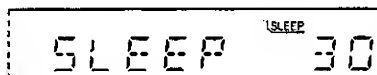 

Using the timers

A The play and record timers

Turning the timers on and off

The selected timer comes on at the set time if the indicator ("⊙PLAY" or "⊙REC") is on. The timer can be turned on and off by pressing [⊙PLAY/⊙REC].

Checking the timers

•While the unit is on

Press [CLOCK/TIMER] to select "⊙PLAY" or "⊙REC".

The set timer conditions are shown in the following order.

Play timer:

start time → finish time → source → volume

Record timer:

start time → finish time → source

•While the unit is off

Press [CLOCK/TIMER].

The clock and the indicator for the timer that is on are shown.

Playing the unit after the timers are set

The unit can be used after the timers are set.

Check the following before turning the unit off again.

If playing tapes or making a recording:

Reset tape direction.

If playing discs:

Make sure the desired disc is selected.

Note

- If you turn the unit off and on again while a timer is functioning, the finish time setting will not be activated.
- If the unit is on, the timer will not function. The unit must be in the standby mode.
- If AUX is selected as the source, when the timer comes on, the system turns on and engages AUX as the source. If you want to playback or record from a connected unit, set the other unit's timer to the same time. (See the other unit's instruction manual.)
- The record timer cannot be used with DVDs and Video CDs.
- The timer cannot be used to start the CD MANAGER or program play.

B The sleep timer

Remote control only

This timer turns the unit off after a set time.

Press [SLEEP] to select the time (minutes).

Each time you press the button:

SLEEP 30 → SLEEP 60 → SLEEP 90

← SLEEP OFF ← SLEEP 120 ←

To cancel the sleep timer

Press [SLEEP] to select "SLEEP OFF".

To confirm the remaining time

While the timer is functioning

Press [SLEEP].

The remaining time is shown for about 5 seconds.

To change the setting

Press [SLEEP] to display the remaining time, then press again to select the required time.

Using the timers together

The play and sleep timers or the record and sleep timers can be used together.

The sleep timer always has priority. Be sure not to overlap timer settings.

The play and record timers cannot be used together.

Convenient functions

A Changing the sound range display

The unit's display shows the level of each sound range with the three types of display described below.

Press [-DISPLAY/-DEMO].

Each time you press the button:

Normal display → Peak-hold display → Aurora display

a Normal display

This display indicates the strength of the sound in each tonal range.

b Peak-hold display

The peak sound value of each sound range is held on the display for about one second after it occurs.

c Aurora display

The peak sound value of each sound range is displayed in inverted form.

B Dimming the display

Remote control only

The display is dimmed and all indicators, except for the AC IN indicator, are turned off for better television viewing.

Press [DIMMER].

To cancel, press [DIMMER] again.

C Muting the volume

Remote control only

Press [MUTING].

Volume is reduced to minimum.

To cancel

Press [MUTING] again.

"MUTING" goes out.

To cancel from the unit, turn [VOL] to minimum (--- dB), then raise it to the required level.

Muting is also canceled when the unit is turned off.

D Using headphones (not included)


Reduce the volume before connection.

Avoid listening for prolonged periods of time to prevent hearing damage.

Plug type: 3.5 mm (1/8") stereo



Audio is automatically switched to stereo (2 channel). If sound is distorted, turn on dynamic range compression (⇒ Audio-D.Range Compression, pages 50-53).

A

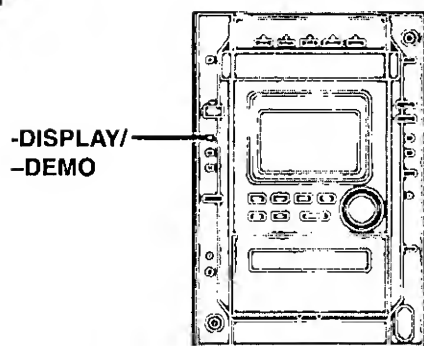


-DISPLAY/
-DEMO

-DISPLAY/
-DEMO

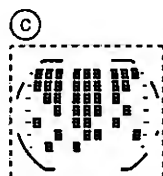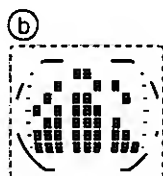

DIMMER

MUTING

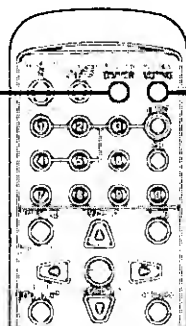

B

 
MIX 2CH
DIMMER




C

ACTION
MUTING

SET UP
MUTING



D

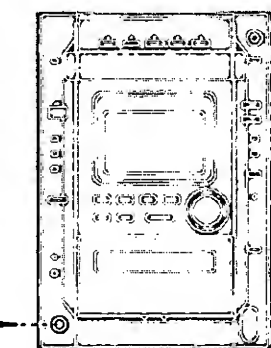

PHONES

External unit connections

- Turn the unit off before making connections.
- Refer to the manual of the other unit for details.
(Cables and equipment not included.)

Stereo connection cable (not included)

White (L)  
Red (R)  

A Laser disc player/Video cassette recorder, etc.

You can playback the sound from a laser disc player/video cassette recorder through this unit's speakers.

This unit has Dolby Pro Logic circuitry. The sound will be reproduced with the same powerful stereophonic effects found in movie theaters.

B Record player

Sound cannot be produced unless a phono equalizer (not included) is connected.

A record player with a built-in phono equalizer is recommended.

C TV with an S-VIDEO terminal

The S-VIDEO output terminal achieves a more vivid picture than VIDEO OUT terminal by separating the color and luminance signals before transmitting them to the television. (Actual results depend on the television.)

S-VIDEO cable (not included)



See the television's manual for details on connection and operation.

D Subwoofer

The included front speakers have superwoofers, but by connecting a subwoofer, you can enhance the bass effect found on DVDs encoded with Dolby Digital (→ page 34 for operation).

Optional antenna connections

Use outdoor antennas if radio reception is poor.

E FM outdoor antenna

- Disconnect the FM indoor antenna.
- The antenna should be installed by a competent technician.

F AM outdoor antenna


Run a piece of vinyl wire horizontally across a window or other convenient location.

Leave the loop antenna connected.


Note

Disconnect the antenna when the unit is not in use.
Do not use the antenna during an electrical storm.


A B Laser disc player/ Video cassette recorder/ Record player

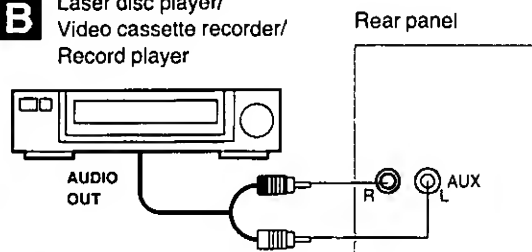


C D TV

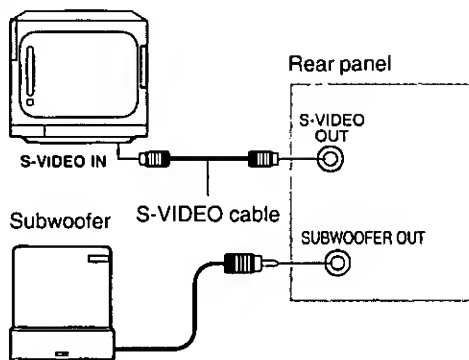


E For China

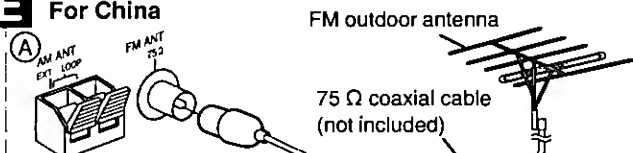


For areas except China

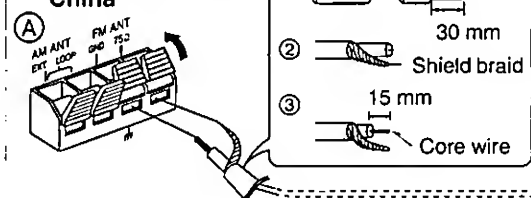

F For China

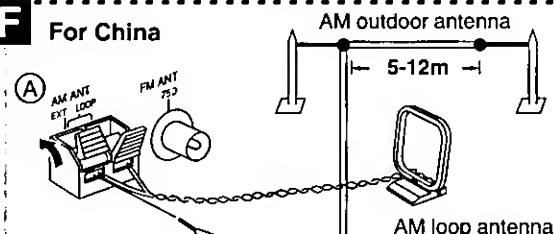

For areas except China

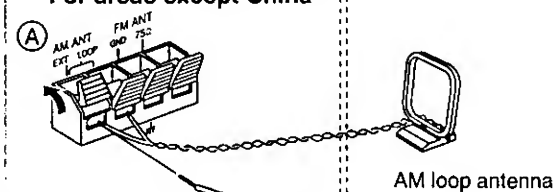

Using other equipment

A Listening to an external source

Preparation: Press [POWER ϕ /I] to turn the unit on.

1 Press [SELECTOR] to select "AUX".

Each time you press the button
TUNER \rightarrow TAPE \rightarrow DVD/CD \rightarrow AUX

2 Operate the unit.

See the unit's manual for details on operation and connection.

B Recording an external source

Preparation:

- Press [POWER ϕ /I] to turn the unit on.
- Do the preparatory steps (see page 37).

1 Press [SELECTOR] to select "AUX".

Each time you press the button
TUNER \rightarrow TAPE \rightarrow DVD/CD \rightarrow AUX

2 Press [●REC/STOP].

3 Start the source to be recorded.

See the unit's manual for details on operation and connection.

To stop recording

Press [●REC/STOP].

C Operating a television with the remote control

You can use the remote control to operate a Panasonic television.

Turning the television on/off

Press [SHIFT] + [TV POWER].

Switching the television's video input mode


Press [SHIFT] + [TV/VIDEO].

Changing channels

Press [SHIFT] + [TV CH UP], [TV CH DOWN].

Note

Some models cannot be operated by this remote control.

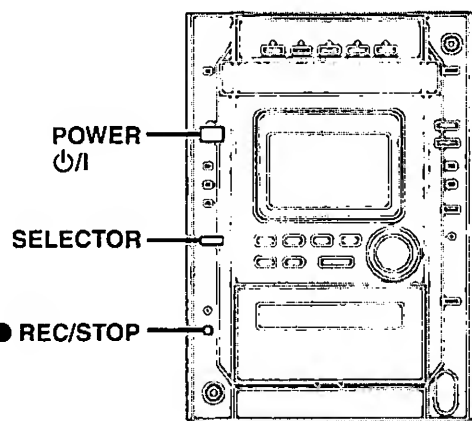

A

1

 


B


1



2

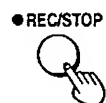

C

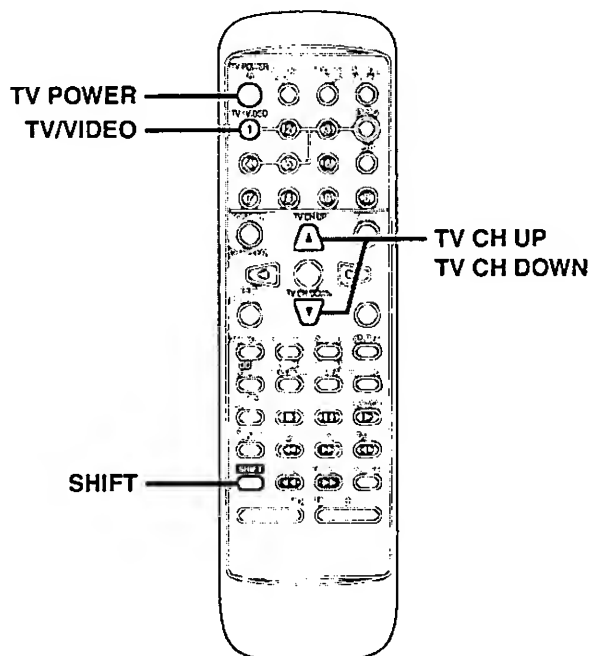

Initial settings

Change the initial settings to suit your preferences and to suit the unit to the environment in which it is being used. These settings are retained in memory until they are changed, even if the unit is turned off.

Changing the initial settings

See pages 50–53 for menu and option details.

Remote control only

Preparation:

Press [SELECTOR] to select "DVD/CD".

1

For Australia, N.Z., China, the Middle East, South Africa and Asia

Press [SHIFT] + [SET UP].


For U.S.A., Canada and others

Press [SHIFT] + [ACTION].

The screen shows the disc setting menu (a) first.

2 Press [◀], [▶] to select the menu's tab.

The screen changes to display the menu.

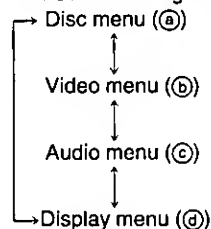

3 Press [▲], [▼] to select the item you want to change and press [ENTER].

4 Press [▲], [▼] to select the option and press [ENTER].

The screen now shows the menu again.

To return to the previous screen

Press [RETURN].

To exit the initial settings menu

Press [SHIFT] + [ACTION] (or [SET UP]).

Note

- The initial settings cannot be accessed while program mode ("P" is displayed, ⇒ page 22) or random mode (⇒ page 23) is on. Press [PLAY MODE] to turn the mode off.
- The initial settings cannot be accessed while CD MANAGER (⇒ page 24) is on. Press [CD MANAGER] to select "NORMAL".

2.3.4

RETURN

SELECTOR

1


1





ACTION
MUTING

+


SET UP
MUTING

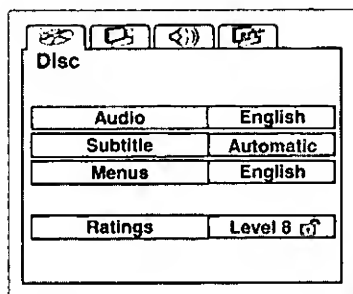

2

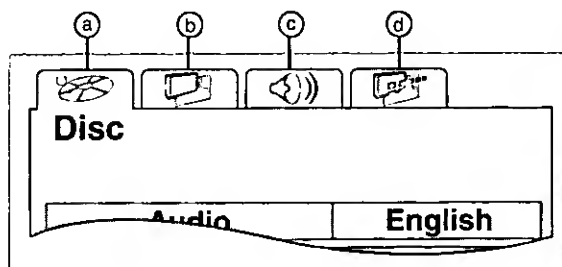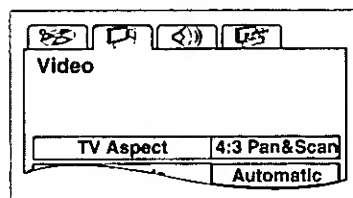

3.4

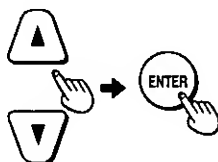

Summary of initial settings

This chart shows the initial settings for this unit.
See page 49 for details on operation.
Shaded items are the factory settings.

The menu and on-screen message language has been factory preset to English. You can change the language by going to "Menu Language" in the Display menu.

| Main menu | Menu | Options |
|------------------|---|---|
| Disc DVD | Audio Choose the preferred audio language. | <p>For Australia, N.Z., the Middle East and South Africa</p> <p>English French German Italian Spanish Original Other ****</p> <p>For China and Asia</p> <p>English Chinese Original Other ****</p> |
| | Subtitle Choose the preferred subtitle language. | <p>For Australia, N.Z., the Middle East and South Africa</p> <p>Automatic English French German Italian Spanish Other ****</p> <p>For China and Asia</p> <p>Automatic English Chinese Other ****</p> |
| | Menus Choose the preferred language for disc menus. | <p>For Australia, N.Z., the Middle East and South Africa</p> <p>English French German Italian Spanish Other ****</p> <p>For China and Asia</p> <p>English Chinese Other ****</p> |
| | Ratings Set a ratings level to limit DVD play. | <p>Setting ratings (When level 8 is selected)</p> <p>8 No Limit 1 to 7 0 Lock All</p> <p>Changing ratings (When level 0-7 is selected)</p> <p>Unlock Player Change Level Change Password Temporary Unlock</p> |
| | | |
| Video DVD VCD | TV Aspect Choose the setting to suit your television and preference (⇒ page 13). | <p>4:3 Pan & Scan</p> <p>4:3 Letterbox</p> <p>16:9</p> |
| | Still Mode Specify the type of picture shown when paused. | <p>Automatic</p> <p>Field</p> <p>Frame</p> |
| | NTSC Disc Output Choose whether PAL 60 or NTSC signals are output during playback of NTSC discs (⇒ page 6). | <p>PAL 60 (Factory setting for Australia, N.Z., the Middle East and south Africa)</p> <p>NTSC (Factory setting for China and Asia)</p> |
| Audio | Speaker Setting DVD (Dolby Digital only) Set the delay time for your center and surround speakers (⇒ page 55). | <p>Center: 0/1.3/2.6/3.9/5.3 ms</p> <p>Surround (L/R): 0/5.3/10.6/15.9 ms</p> |
| | D.Range Compression DVD (Dolby Digital only) Change the dynamic range. Dynamic range is the difference between the loudest sound and the softest sound. | <p>Off On</p> |
| | Audio during Search DVD VCD Choose whether to have sound during search. | <p>On Off</p> |
| Display | Menu Language Choose the preferred language for these menus and the on-screen messages. | <p>For Australia, N.Z., the Middle East and South Africa</p> <p>English Français Deutsch Italiano Español</p> <p>For China and Asia</p> <p>English 中文</p> |
| | On-Screen Messages Choose whether to show on-screen messages or not. | <p>On Off</p> |

Changes to the initial settings remain intact after the unit is turned off.
Do the setting procedures again to restore to the original settings.

| | Remarks |
|---|--|
| <p>"Other ****": Input a code number with the numbered buttons (⇒ page 54).</p> <p>"Original": The original language of each disc will be selected.</p> <p>"Automatic": If the language selected for "Audio" is not available, subtitles of that language will automatically appear if available on that disc.</p> | Some discs are designed to start in a certain language despite any changes you make here. |
| <p>Level 8: All DVDs can be played.</p> <p>Level 1 to 7: Prohibits play of DVDs with corresponding ratings recorded on them.</p> <p>Level 0: Prohibits play of all DVDs.</p> | <ul style="list-style-type: none"> •The password screen is shown if you choose levels 0 to 7 (⇒ page 54). •Select "Level 0" to prevent play of discs that do not have ratings levels recorded on them. |
| | The password screen is shown when you select "Ratings" if levels 0 to 7 have been selected (⇒ page 54). |
| | |
| <p>Field: Less blurred field stills are shown. Select if jittering occurs when "Automatic" is selected.</p> <p>Frame: Sharper frame stills are shown. Select if small text or fine patterns cannot be seen clearly when "Automatic" is selected.</p> | |
| <p>PAL 60: When connected to a PAL television.</p> <p>NTSC: When connected to an NTSC or a multi-system television.</p> | |
| When the center/surround speakers cannot be located in the ideal position. | |
| | <p>Turn dynamic range compression on in the following cases.</p> <ul style="list-style-type: none"> •For clear dialogue when listening at low volume. •When sound is distorted while playing multi-channel DVD audio through two channels (when headphones or a microphone are connected, during recording, or when using the MIX 2CH mode). |
| | |
| | |
| | |

Summary of initial settings

This chart shows the initial settings for this unit.
See page 49 for details on operation.
Shaded items are the factory settings.

The menu and on-screen message language has been factory preset to English. You can change the language by going to "Menu Language" in the Display menu.

| Main menu | Menu | Options | | |
|------------------|--|--|-----------------------|---------|
| Disc DVD | Audio Choose the preferred audio language. | English Original | French Other **** | Spanish |
| | Subtitle Choose the preferred subtitle language. | Automatic Spanish | English Other **** | French |
| | Menus Choose the preferred language for disc menus. | English Other **** | French | Spanish |
| | Ratings Set a ratings level to limit DVD play. | Setting ratings (When level 8 is selected) <input checked="" type="checkbox"/> 8 No Limit 1 to 7 0 Lock All | | |
| | | Changing ratings (When level 0–7 is selected) Unlock Player Change Level Change Password Temporary Unlock | | |
| Video DVD VCD | TV Aspect Choose the setting to suit your television and preference (⇒ page 13). | <input checked="" type="checkbox"/> 4:3 Pan & Scan <input type="checkbox"/> 4:3 Letterbox <input type="checkbox"/> 16:9 | | |
| | Still Mode Specify the type of picture shown when paused. | <input checked="" type="checkbox"/> Automatic <input type="checkbox"/> Field <input type="checkbox"/> Frame | | |
| | Black Level Control Change the black level of the picture. | <input checked="" type="checkbox"/> Lighter <input type="checkbox"/> Darker | | |
| Audio | Speaker Setting <input checked="" type="checkbox"/> DVD (Dolby Digital only) Set the delay time for your center and surround speakers (⇒ page 55). | Center: <input type="checkbox"/> 0/1.3/2.6/3.9/5.3 ms Surround (L/R): <input type="checkbox"/> 0/5.3/10.6/15.9 ms | | |
| | D.Range Compression <input checked="" type="checkbox"/> DVD (Dolby Digital only) Change the dynamic range. Dynamic range is the difference between the loudest sound and the softest sound. | <input checked="" type="checkbox"/> Off On | | |
| | Audio during Search <input checked="" type="checkbox"/> DVD <input checked="" type="checkbox"/> VCD Choose whether to have sound during search. | <input checked="" type="checkbox"/> On Off | | |
| Display | Menu Language Choose the preferred language for these menus and the on-screen messages. | English | Français | Español |
| | On-Screen Messages Choose whether to show on-screen messages or not. | <input checked="" type="checkbox"/> On Off | | |

Changes to the initial settings remain intact after the unit is turned off.
Do the setting procedures again to restore to the original settings.


| | Remarks |
|---|--|
| <p>"Other ****": Input a code number with the numbered buttons (⇒ page 54).</p> <p>"Original": The original language of each disc will be selected.</p> <p>"Automatic": If the language selected for "Audio" is not available, subtitles of that language will automatically appear if available on that disc.</p> | Some discs are designed to start in a certain language despite any changes you make here. |
| <p>Level 8: All DVDs can be played.</p> <p>Level 1 to 7: Prohibits play of DVDs with corresponding ratings recorded on them.</p> <p>Level 0: Prohibits play of all DVDs.</p> | <ul style="list-style-type: none"> • The password screen is shown if you choose levels 0 to 7 (⇒ page 54). • Select "Level 0" to prevent play of discs that do not have ratings levels recorded on them. |
| | The password screen is shown when you select "Ratings" if levels 0 to 7 have been selected (⇒ page 54). |
| | |
| <p>Field: Less blurred field stills are shown. Select if jittering occurs when "Automatic" is selected.</p> <p>Frame: Sharper frame stills are shown. Select if small text or fine patterns cannot be seen clearly when "Automatic" is selected.</p> | |
| | |
| When the center/surround speakers cannot be located in the ideal position. | |
| | <p>Turn dynamic range compression on in the following cases.</p> <ul style="list-style-type: none"> • For clear dialogue when listening at low volume. • When sound is distorted while playing multi-channel DVD audio through two channels (when headphones are connected, during recording, or when using the MIX 2CH mode). |
| | |
| | |
| | |

Entering a password

When setting ratings (When the level is 8)

The password screen is shown when you select levels 0 to 7.

1. Input a 4-digit password with the numbered buttons and press [ENTER].

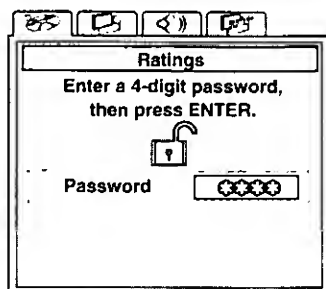

- If you enter a wrong number, press [◀] to erase it before you press [ENTER].

The lock symbol appears closed to show the rating is locked.

Do not forget your password.

2. Press [ENTER] to confirm the 4 digits.


Now, when you insert a DVD that exceeds the ratings limit you set, a message appears on the television.

Follow the on-screen instructions.

When changing ratings (When the level is 0 to 7)

The password screen is shown when you select "Ratings".

1. Input your 4-digit password with the numbered buttons and press [ENTER].

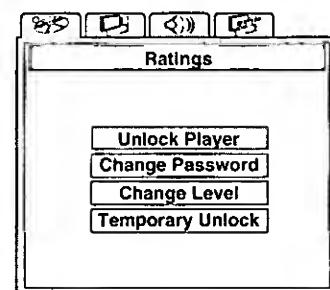

2. Select the item with [▲], [▼] and press [ENTER] and follow the on-screen instructions.


Language code list

| | | | |
|----------------------|------------------------|----------------------|------------------|
| 6566: Abkhazian | 7074: Fiji | 7679: Laotian | 8373: Singhalese |
| 6565: Afar | 7073: Finnish | 7684: Lithuanian | 8375: Slovak |
| 6570: Afrikaans | 7082: French | 7775: Macedonian | 8376: Slovenian |
| 8381: Albanian | 7089: Frisian | 7771: Malagasy | 8379: Somali |
| 6577: Ameharic | 7176: Galician | 7783: Malay | 6983: Spanish |
| 6582: Arabic | 7565: Georgian | 7776: Malayalam | 8385: Sundanese |
| 7289: Armenian | 6869: German | 7784: Maltese | 8387: Swahili |
| 6583: Assamese | 6976: Greek | 7773: Maori | 8386: Swedish |
| 6588: Aymara | 7576: Greenlandic | 7782: Marathi | 8476: Tagalog |
| 6590: Azerbaijani | 7178: Guarani | 7779: Moldavian | 8471: Tajik |
| 6665: Bashkir | 7185: Gujarati | 7778: Mongolian | 8465: Tamil |
| 6985: Basque | 7265: Hausa | 7865: Nauru | 8484: Tatar |
| 6678: Bengali/Bangla | 7387: Hebrew | 7869: Nepali | 8469: Telugu |
| 6890: Bhutani | 7273: Hindi | 7879: Norwegian | 8472: Thai |
| 6672: Bihari | 7285: Hungarian | 7982: Oriya | 6679: Tibetan |
| 6682: Breton | 7383: Icelandic | 8065: Punjabi | 8473: Tigrinya |
| 6671: Bulgarian | 7165: Irish | 8083: Pashto, Pushto | 8479: Tonga |
| 7789: Burmese | 7378: Indonesian | 7065: Persian | 8482: Turkish |
| 6669: Byelorussian | 7365: Interlingua | 8076: Polish | 8475: Turkmen |
| 7577: Cambodian | 7384: Italian | 8084: Portuguese | 8487: Twi |
| 6765: Catalan | 7465: Japanese | 8185: Quechua | 8575: Ukrainian |
| 9072: Chinese | 7487: Javanese | 8277: Rhaeto-Romance | 8582: Urdu |
| 6779: Corsican | 7578: Kannada | 8279: Romanian | 8590: Uzbek |
| 7282: Croatian | 7583: Kashmiri | 8285: Russian | 8673: Vietnamese |
| 6783: Czech | 7575: Kazakh | 8377: Samoan | 8679: Volapük |
| 6865: Danish | 7589: Kirghiz | 8365: Sanskrit | 6789: Welsh |
| 7876: Dutch | 7579: Korean | 7168: Scots Gaelic | 8779: Wolof |
| 6978: English | 7585: Kurdish | 8382: Serbian | 8872: Xhosa |
| 6979: Esperanto | 7665: Latin | 8372: Serbo-Croatian | 7473: Yiddish |
| 6984: Estonian | 7686: Latvian, Lettish | 8378: Shona | 8979: Yoruba |
| 7079: Faroese | 7678: Lingala | 8368: Sindhi | 9085: Zulu |

Delay time

The sound from speakers can reach the listening position at different times depending on placement. You can allow for this difference by changing the delay time of the center and surround speakers.

Calculating delay time

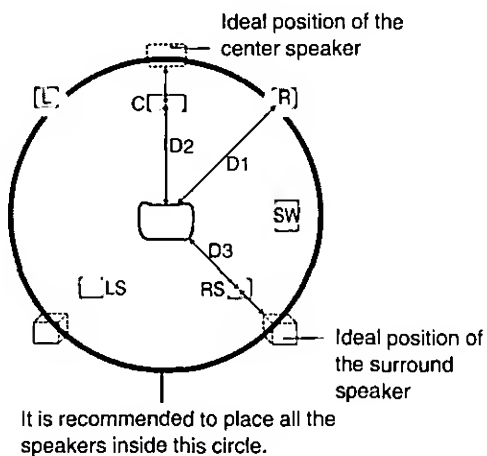

D1: The distance from the front speaker
D2: The distance from the center speaker
D3: The distance from the surround speaker

Center speaker delay time

If $D1 \leq D2$, then set delay time to 0 ms.

If $D1 > D2$, then set delay time as follows:

| Difference between D1 and D2 | Delay time |
|------------------------------|------------|
| 50 cm | 1.3 ms |
| 100 cm | 2.6 ms |
| 150 cm | 3.9 ms |
| 200 cm | 5.3 ms |

Surround speaker delay time


If $D1 \leq D3$, then set delay time to 0 ms.

If $D1 > D3$, then set delay time as follows:

| Difference between D1 and D3 | Delay time |
|------------------------------|------------|
| 200 cm | 5.3 ms |
| 400 cm | 10.6 ms |
| 600 cm | 15.9 ms |

Changing the delay time

- Press the cursor buttons to select the delay time box and press [ENTER].
- Press [Δ], [∇] to adjust the delay time and press [ENTER].

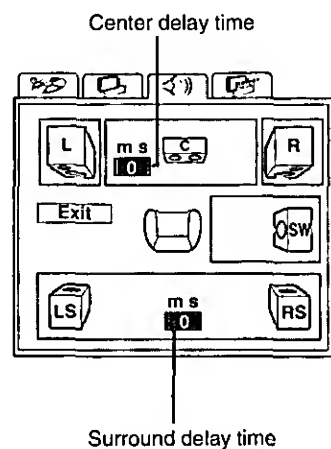

Troubleshooting guide

Before requesting service, make the below checks. If you are in doubt about some of the check points, or if the remedies indicated in the chart do not solve the problem:

In the U.S.A., contact the Panasonic Customer Call Center at 1-800-211-7262, or e-mail consumerproducts@panasonic.com, or web site (<http://www.panasonic.com>).

In Canada, contact Panasonic Canada Inc. Customer Care Centre at 1-800-561-5505, or web site (www.panasonic.ca), or an authorized Servicentre nearest you.

Reference pages are shown as black circled numbers ❸.

Common Problems

| | |
|--|--|
| No sound. | Turn the volume up. The speaker cables may be shorted. Turn the unit off, check and correct the connections and turn the unit on. ❸ |
| Sound is unfixed, reversed or comes from one speaker only. | Check the speaker connections. ❸ |
| Humming heard during play. | An AC power supply cord or fluorescent light is near the cables. Keep other appliances and cords away from this unit's cables. If possible in your area, turn the AC power supply cord's plug or connector over to reverse the plug's polarity. |
| "ERROR" is displayed. | Incorrect operation performed. Read the instructions and try again. |
| "---:---" appears on the display. | You plugged the power supply cord in for the first time or there was a power failure recently. Set the time. ❶ |
| "F61" is displayed. | Check and correct the speaker cords connection. If this does not fix the problem, there is a power supply problem. Consult the dealer. |
| The display starts up even after the unit is turned off. | The demonstration feature (DEMO) is on. Turn it off if it is not required. ❶ |
| "DTS NO AUDIO" is displayed. | This unit is unable to decode DTS signals. |
| "DTS CD" is displayed. | This unit is unable to decode DTS signals. |
| "DVD U11" is displayed. | The disc is dirty. Wipe it with a soft cloth. |
| "DVD H □□" is displayed. (□□ will be numbers.) | A problem has occurred. Turn the unit off and unplug the AC power supply cord. Wait a moment and then plug the cord in and turn on the unit again. If the unit is still not working correctly, consult your dealer. |

Listening to the radio

| | |
|---|---|
| Noise is heard. The stereo indicator flickers or doesn't light. Sound is distorted. | Use an outdoor antenna. ❶ |
| A beat sound is heard. | Turn the TV off or separate it from the unit. |
| A low hum is heard during AM broadcasts. | Separate the antenna from other cables and cords. |

When there is a television set nearby

| | |
|---|--|
| The picture on the TV disappears or stripes appear on the screen. | The location and orientation of the antenna are incorrect. If you are using an indoor antenna, change to an outdoor antenna. The TV antenna wire is too close to the unit. Separate the antenna wire of the TV set from the unit. |
|---|--|

Listening to tapes

| | |
|----------------------------|---|
| Poor quality sound. | Clean the heads. ❶ |
| Recording is not possible. | If the erasure prevention tabs have been removed, cover the holes with adhesive tape. ❶ |

Playing discs

| | |
|---|---|
| The display is wrong or play won't start. | The disc may be upside down. ❶ Wipe the disc. Replace the disc if it is scratched, warped, or nonstandard. Condensation may have formed inside the unit due to a sudden change in temperature. Wait about an hour for it to clear and try again. |
| "TAKE OUT/DISC" appears on the display. | There is a problem with the disc mechanism. (A power failure may have occurred.) The tray will open automatically. Remove the disc from the tray, and after ensuring there is no disc in the tray close it. The unit will make the disc changing noises for a few moments and then it should operate normally. |
| The picture does not appear on the TV, when playing DVD or Video CD. | The region number of the disc doesn't match the region number of this unit. (DVD only) ❷ Connect the video connection cable. ❸ Set the TV to video input mode. |
| CD MANAGER, program and random play cannot be used. | Ensure a Video CD or CD is in the play position tray. ❹, ❺, ❻ |
| The initial settings menu cannot be accessed. | Select disc as the source. Cancel program and random play, or select "NORMAL" with CD MANAGER. ❹, ❺, ❻ |
| You have forgotten your ratings password. | Reset the unit to its original factory settings by doing the following. ① Press [□, TUNE MODE] on the main unit and [≥10] on the remote control at the same time for about 3 seconds until the message "Initialized" disappears from the television screen. ② Turn the unit off and on again. |
| (For China, the Middle East, South Africa and Asia) "ERROR" appears on the display when you press a button to control karaoke. | Press [SHIFT] + [KARAOKE ON/OFF] to display "KARAOKE ON". ❶, ❷, ❸ (You cannot use karaoke functions if the karaoke mode is off.) |

The remote control

| | |
|----------------------------------|--|
| The remote control doesn't work. | Check the batteries are inserted correctly. ❶ Replace the batteries if they are worn. |
|----------------------------------|--|

Maintenance

If the surfaces are dirty

To clean this unit, wipe with a soft, dry cloth.

- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.

For a cleaner crisper sound

Clean the heads regularly to assure good quality playback and recording.
Use a cleaning tape (not included).

Product Service

Do not attempt to remove the cover(s) or repair the unit yourself. Refer servicing to qualified personnel only.

Product information

For product service, product information or assistance with product operation, refer to the servicenter directory.

Chapter

This is the smallest division on DVD and is roughly equivalent to a track.

Title

This is the largest division on DVD.

Track

This is the smallest division on Video CD and Audio CD, and usually equates to a single song.

PBC (Playback control)

This method of controlling disc play is included on version 2.0 Video CDs. You are able to interact with the disc through menus.

Digital audio

Bitstream

This is the digital form of multiple channel audio data (e.g. 5.1 channel) before it is decoded into its various channels.

Decoder

A decoder restores the coded audio signals on DVDs to normal. This is called decoding.

PCM (Pulse code modulation), Linear PCM

PCM is the usual digital method used for Audio CDs. DVDs have a greater volume so they use linear PCM, which has a higher sampling rate.

Sampling rate

This is the number of samples of sound taken per second during conversion to a digital signal. Sampling frequency is expressed in kilohertz (kHz). A high sampling frequency results in a sound close to the original when played back.

Video

Frame

Frames are the still pictures that go together to make a moving picture. There are about thirty frames shown each second.

Field

One frame is made up of two fields. A regular television shows these fields one after the other to create frames.

Frame still and field still

A still is shown when you pause a moving picture. A frame still is made up of two alternating fields, so the picture may appear blurred, but overall quality is high. A field still is not blurred, but it has only half the information of a frame still so picture quality is lower.

I/P/B

MPEG 2, the video compression standard adapted for use with DVD, codes frames using these three picture types.

I: Intra coded picture (I-picture)

This is the standard picture and is a complete picture in itself. This means it has the best picture quality and is the best to use when adjusting the picture.

P: Predictive coded picture (P-picture)

This picture is calculated based on past I and P-pictures.

B: Bidirectionally-predictive coded picture (B-picture)

This picture is calculated by comparing past and future I and P-pictures so it has the lowest volume of information.

Warranty (Only for U.S.A.)

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation
of America
One Panasonic Way,
Secaucus, New Jersey 07094

Panasonic Sales Company, Division of Matsushita Electric
Corporation of Puerto Rico, Inc.
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial
Park, Carolina, Puerto Rico 00985

Panasonic/Technics Audio Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the warrantor") will repair this product with new or refurbished parts in the event of a defect in materials or workmanship, free of charge, in the U.S.A. or Puerto Rico as follows (all time periods start from the date of original purchase):

AUDIO PRODUCTS—labor and parts for one (1) year.

ALL AUDIO BACKS (cabinets)—parts only 30 days.

TECHNICS STAND ALONE SPEAKERS, SUBWOOFER SPEAKERS—labor and parts for three (3) years.

USB READER-WRITER, PERSONAL COMPUTER CARD ADAPTERS—(when applicable)—exchange defective unit with a new or refurbished one for one (1) year.

ACCESSORIES—HEADPHONES, CARTRIDGES, MICROPHONES, ADAPTERS—labor and parts for ninety (90) days.

RECHARGEABLE BATTERIES—(when applicable)—exchange defective item for new one for ten (10) days. Non-rechargeable batteries are not warranted.

SD MEMORY CARDS, RECHARGEABLE BATTERY PACKS—(when applicable)—exchange defective item for new one for ninety (90) days. Non-rechargeable battery packs are not warranted.

Carry-in or mail-in service in the U.S.A. can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Servicenter Directory. Or call toll free, 1-800-211-7262 to locate a PASC authorized Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal wear to the stylus (when applicable) or a dealer installed cartridge or stylus. The warranty does not cover damages which occur in shipment or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, faulty installation, misapplication, set-up adjustments, maladjustment of consumer controls, improper operation or maintenance, improper antenna, inadequate signal reception or pick-up, alteration, modification, power line surge, improper voltage supply, lightning damage, commercial use, such as; hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Department at the company address indicated above.

If you ship the product

Carefully pack and send it prepaid, adequately insured and preferably in the original carton.
Attach a postage-affixed letter, detailing the complaint, to the outside of the carton.

Do NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.

Customer's Record

| | |
|---------------------------------|---------------------------|
| Model No. _____ | Dealer's Name _____ |
| Serial No. _____ or _____ | _____ |
| Code No. _____ | Dealer's Address _____ |
| Date of Purchase _____ | _____ |

Panasonic

Technics

Quasar

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA-(7262); Monday-Friday 9 am-9 pm; Saturday-Sunday 9 am-7 pm, EST.

Web Site: <http://www.panasonic.com>
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday-Friday; 6 am to 10:30 am Saturday; PST)
(Visa, MasterCard, Discover Card, American Express, Check)

References

Factory Servicenters Locations

CALIFORNIA

6550 Katella Avenue
 Cypress, CA 90630

800 Dubuque Avenue
 S. San Francisco
 CA 94080

20201 Sherman Way
 Suite 102
 Canoga Park, CA 91306

3878 Ruffin Road
 Suite A
 San Diego, CA 92123

COLORADO

1640 South Abilene Street
 Suite D
 Aurora, CO 80012

FLORIDA

3700 North 29th Avenue
 Suite 102
 Hollywood, FL 33020

GEORGIA

8655 Roswell Road
 Suite 100
 Atlanta, GA 30350

ILLINOIS

9060 Golf Road
 Niles, IL 60714

1703 North Randall Road
 Elgin, IL 60123
 (Pick-up/Drop-off only)

MARYLAND

62 Mountain Road
 Glen Burnie, MD 21061

MASSACHUSETTS

60 Glacier Drive
 Suite C
 Westwood, MA 02090

MICHIGAN

37048 Van Dyke Avenue
 Sterling Heights, MI 48312

MINNESOTA

7850-12th Avenue South
 Airport Business Center
 Bloomington, MN 55425

OHIO

2236 Waycross Road
 Civic Center Plaza
 Forest Park, OH 45240

PENNSYLVANIA

2221 Cabot Blvd. West
 Suite B
 Langhorne, PA 19047

TEXAS

13615 Welch Road
 Suite 101
 Farmers Branch
 TX 75244

WASHINGTON

20425-84th Avenue South
 Kent, WA 98032

HAWAII

99-859 Iwaiwa Street
 Aiea, Hawaii 96701
 Phone (808) 488-1996
 Fax (808) 486-4369

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/Factory Servicenter:
Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787) 750-4300 Fax (787) 768-2910

AMPLIFIER SECTION

| | |
|-----------------------------------|------------------------|
| Stereo mode power output | |
| RMS power output | |
| THD 10 %, both channels driven | |
| LF 75 Hz | 80 W per channel (8 Ω) |
| HF 1 kHz | 35 W per channel (6 Ω) |
| Total stereo mode power | |
| 230 W | |
| PMPO power output | |
| 1900 W | |
| Power output in Home Theater mode | |
| RMS power output | |
| THD 10 %, both channels driven | |
| Front | |
| LF 75 Hz | 80 W per channel (8 Ω) |
| HF 1 kHz | 35 W per channel (6 Ω) |
| Center 1 kHz | 80 W (8 Ω) |
| Surround 1 kHz | 40 W per channel (8 Ω) |
| Total power output | |
| 390 W | |
| PMPO power output | |
| 3200 W | |
| Input sensitivity | |
| AUX | 250 mV |
| MIC | 0.7 mV |
| Input Impedance | |
| AUX | 10 kΩ |
| MIC | 600 Ω |

FM TUNER SECTION

| | |
|--------------------------------|--|
| Frequency range | |
| 87.50–108.00 MHz (50 kHz step) | |
| Sensitivity | |
| 1.8 μV (IHF) | |
| S/N 26 dB | |
| 1.5 μV | |
| Antenna terminals | |
| 75 Ω (unbalanced) | |

AM TUNER SECTION

| | |
|----------------------------|--|
| Frequency range | |
| 522–1629 kHz (9 kHz step) | |
| 520–1630 kHz (10 kHz step) | |
| Sensitivity | |
| S/N 20 dB at 999 kHz | |
| 500 μV/m | |

CASSETTE DECK SECTION

| | |
|------------------------------|---------------------------|
| Track system | |
| 4 track, 2 channel | |
| Heads | |
| Record/playback | Solid permalloy head |
| Erasure | Double gap ferrite head |
| Motor | DC servo motor |
| Recording system | AC bias 100 kHz |
| Erasing system | AC erase 100 kHz |
| Tape speed | 4.8 cm/s (1 7/8 ips) |
| Overall frequency response | |
| (+3, –6 dB at DECK OUT) | |
| NORMAL (TYPE I) | 35 Hz–14 kHz |
| HIGH (TYPE II) | 35 Hz–14 kHz |
| S/N ratio | 50 dB (A _{WTD}) |
| Wow and flutter | 0.18 % (WRMS) |
| Fast forward and rewind time | |
| Approx. 120 seconds | |
| with C-60 cassette tape | |

DISC SECTION

| | |
|---------------------------------------|------------------------|
| Disc | |
| DVD-Video | |
| 8 cm/12 cm single-sided, single-layer | |
| 8 cm/12 cm single-sided, double-layer | |
| 8 cm/12 cm double-sided, double-layer | |
| (One layer per side) | |
| Video CD/CD | |
| 8 cm/12 cm (CD-R/RW) | |
| Video | |
| Signal system | |
| NTSC/PAL | |
| (depending on disc format) | |
| Output level | |
| Composite video | 1 Vp-p (75 Ω) |
| S-VIDEO Y | 1 Vp-p (75 Ω) |
| S-VIDEO C | 0.300 Vp-p (75 Ω/PAL) |
| | 0.286 Vp-p (75 Ω/NTSC) |
| Audio | |
| Sampling frequency | |
| CD | 44.1 kHz |
| DVD | 48 kHz/96 kHz |
| Decoding | 16/20/24 bit linear |
| Wow and flutter | |
| Below measurable limit | |
| D/A converter | |
| Delta-sigma DAC | |
| Pick up | |
| Beam Source | |
| Semiconductor Laser | |
| Wavelength | |
| DVD | 658 nm |
| VCD/CD | 790 nm |

SPEAKER SECTION

| | |
|-----------------------------|--------------------|
| Front speakers SB-DK10 | |
| Type | 4 way, 4 speaker |
| | bass-reflex system |
| Speakers | |
| Super woofer | 14 cm cone type |
| Woofer | 12 cm cone type |
| Tweeter | 6 cm cone type |
| Super tweeter | Piezo type |
| Impedance | |
| High frequency | 6 Ω |
| Low frequency | 8 Ω |
| Input power | |
| High frequency | 60 W (Music) |
| Low frequency | 120 W (Music) |
| Output sound pressure level | |
| 87 dB/W (1.0 m) | |
| Cross over frequency | |
| 150 Hz, 5 kHz, 10 kHz | |
| Frequency range | |
| 45 Hz–22 kHz (–16 dB) | |
| 55 Hz–20 kHz (–10 dB) | |
| Dimensions (W×H×D) | |
| 173×315×315 mm | |
| Mass | |
| 4.1 kg | |

Surround speakers SB-PS90

| | |
|-----------------------------|-------------------|
| Type | 1 way, 1 speaker, |
| | closed system |
| Speaker | |
| Full range | 8 cm cone type |
| Impedance | 8 Ω |
| Input power | 70 W (Music) |
| Output sound pressure level | |
| 84 dB/W (1.0 m) | |
| Frequency range | |
| 130 Hz–20 kHz (–16 dB) | |
| 150 Hz–18 kHz (–10 dB) | |
| Dimensions (W×H×D) | |
| 140×99×118 mm | |
| Mass | |
| 0.9 kg | |

Center speaker SB-PC90

| | |
|-----------------------------|--------------------|
| Type | 2 way, 3 speaker, |
| | bass-reflex system |
| Speaker | |
| Woofer | 8 cm cone type×2 |
| Tweeter | 6 cm cone type |
| Impedance | 8 Ω |
| Input power | 160 W (Music) |
| Output sound pressure level | |
| 86 dB/W (1.0 m) | |
| Cross over frequency | |
| 4 kHz | |
| Frequency range | |
| 100 Hz–22 kHz (–16 dB) | |
| 115 Hz–20 kHz (–10 dB) | |
| Dimensions (W×H×D) | |
| 190×99×166 mm | |
| Mass | |
| 1.8 kg | |

GENERAL

| | |
|---------------------------|--|
| Power supply | |
| AC 110/127/220–230/240 V, | |
| 50/60 Hz | |
| Power consumption | |
| 191 W | |
| Dimensions (W×H×D) | |
| 215.4×315×350 mm | |
| Mass | |
| 8.2 kg | |

Power consumption in standby mode:

0.8 W

Notes:

- Specifications are subject to change without notice.
Mass and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.

AMPLIFIER SECTION

Stereo mode power output

RMS power output

THD 10 %, both channels driven

LF 75 Hz 70 W per channel (8 Ω)HF 1 kHz 30 W per channel (6 Ω)

Total stereo mode power 200 W

Power output in Home Theater mode

RMS power output

THD 10 %, both channels driven

Front

LF 75 Hz 70 W per channel (8 Ω)HF 1 kHz 30 W per channel (6 Ω)Center 1 kHz 40 W (8 Ω)Surround 1 kHz 35 W per channel (8 Ω)

Total power output 310 W

Input sensitivity

AUX 250 mV

(Only for China)

MIC 0.7 mV

Input impedance

AUX 10 k Ω

(Only for China)

MIC 600 Ω **FM TUNER SECTION**

Frequency range

87.50–108.00 MHz (50 kHz step)

Sensitivity 1.8 μ V (IHF)S/N 26 dB 1.5 μ VAntenna terminals 75 Ω (unbalanced)**AM TUNER SECTION**

Frequency range

(For Australia and N.Z.)

522–1629 kHz (9 kHz step)

(For China)

522–1629 kHz (9 kHz step)

520–1630 kHz (10 kHz step)

Sensitivity

S/N 20 dB at 999 kHz 500 μ V/m**CASSETTE DECK SECTION**

Track system 4 track, 2 channel

Heads

Record/playback Solid permalloy head

Erasure Double gap ferrite head

Motor DC servo motor

Recording system AC bias 100 kHz

Erasing system AC erase 100 kHz

Tape speed 4.8 cm/s (17 1/8 ips)

Overall frequency response

(+3, –6 dB at DECK OUT)

NORMAL (TYPE I) 35 Hz–14 kHz

HIGH (TYPE II) 35 Hz–14 kHz

S/N ratio 50 dB (A_WTD)

Wow and flutter 0.18 % (WRMS)

Fast forward and rewind time

Approx. 120 seconds

with C-60 cassette tape

DISC SECTION

Disc

DVD-Video

8 cm/12 cm single-sided, single-layer

8 cm/12 cm single-sided, double-layer

8 cm/12 cm double-sided, double-layer

(One layer per side)

Video CD/CD 8 cm/12 cm (CD-R/RW)

Video

Signal system NTSC/PAL

(depending on disc format)

Output level

Composite video 1 Vp-p (75 Ω)S-VIDEO Y 1 Vp-p (75 Ω)S-VIDEO C 0.300 Vp-p (75 Ω /PAL)0.286 Vp-p (75 Ω /NTSC)

Audio

Sampling frequency

CD 44.1 kHz

DVD 48 kHz/96 kHz

Decoding 16/20/24 bit linear

Wow and flutter

Below measurable limit

D/A converter Delta-sigma DAC

Pick up

Beam Source Semiconductor Laser

Wavelength

DVD 658 nm

VCD/CD 790 nm

SPEAKER SECTION

Front speakers SB-DK10

Type

4 way, 4 speaker

bass-reflex system

Speakers

Super woofer 14 cm cone type

Woofer 12 cm cone type

Tweeter 6 cm cone type

Super tweeter Piezo type

Impedance

High frequency 6 Ω Low frequency 8 Ω

Input power

High frequency 60 W (Music)

Low frequency 120 W (Music)

Output sound pressure level

87 dB/W (1.0 m)

Cross over frequency

150 Hz, 5 kHz, 10 kHz

Frequency range

45 Hz–22 kHz (–16 dB)

55 Hz–20 kHz (–10 dB)

Dimensions (W×H×D)

173×315×315 mm

Mass

4.1 kg

Surround speakers SB-PS90

Type

1 way, 1 speaker,

closed system

Speaker

Full range 8 cm cone type

Impedance 8 Ω

Input power 70 W (Music)

Output sound pressure level

84 dB/W (1.0 m)

Frequency range

130 Hz–20 kHz (–16 dB)

150 Hz–18 kHz (–10 dB)

Dimensions (W×H×D)

140×99×118 mm

Mass

0.9 kg

Center speaker SB-PC93

Type

1 way, 1 speaker,

closed system

Speaker

Full range 8 cm cone type

Impedance 8 Ω

Input power 70 W (Music)

Output sound pressure level

84 dB/W (1.0 m)

Frequency range

130 Hz–20 kHz (–16 dB)

150 Hz–18 kHz (–10 dB)

Dimensions (W×H×D)

140×99×118 mm

Mass

0.8 kg

GENERAL

For Australia and N.Z.

Power supply AC 230–240 V, 50 Hz

Power consumption 186 W

Dimensions (W×H×D)

215.4×315×350 mm

Mass

8.2 kg

GENERAL

For China

Power supply AC 220 V, 50 Hz

Power consumption 195 W

Dimensions (W×H×D)

215.4×315×350 mm

Mass

8.2 kg

Power consumption

in standby mode:

0.6 W

Notes:

- Specifications are subject to change without notice.
Mass and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.

AMPLIFIER SECTION**For U.S.A. and Canada**

| | |
|--|------------------------|
| Stereo mode power output | |
| RMS power output | |
| THD 10 %, both channels driven | |
| LF 75 Hz | 65 W per channel (8 Ω) |
| HF 1 kHz | 30 W per channel (6 Ω) |
| Total stereo mode power | |
| LF 55 Hz-100 Hz | |
| 65 W per channel (8 Ω) | |
| HF 100 Hz-15 kHz | |
| 28 W per channel (6 Ω) | |
| Power output in Home Theater mode | |
| RMS power output | |
| THD 10 %, both channels driven | |
| Front | |
| LF 75 Hz | 65 W per channel (8 Ω) |
| HF 1 kHz | 30 W per channel (6 Ω) |
| Center 1 kHz | 40 W (8 Ω) |
| Surround 1 kHz | |
| 35 W per channel (8 Ω) | |
| Total power output | |
| 300 W | |
| Input sensitivity | |
| AUX | 250 mV |
| Input impedance | |
| AUX | 10 kΩ |

AMPLIFIER SECTION**For Latin America and others**

| | |
|--|------------------------|
| Stereo mode power output | |
| RMS power output | |
| THD 10 %, both channels driven | |
| LF 75 Hz | 80 W per channel (8 Ω) |
| HF 1 kHz | 35 W per channel (6 Ω) |
| Total stereo mode power | |
| 230 W | |
| PMPO power output | |
| 1900 W | |
| Power output in Home Theater mode | |
| RMS power output | |
| THD 10 %, both channels driven | |
| Front | |
| LF 75 Hz | 80 W per channel (8 Ω) |
| HF 1 kHz | 35 W per channel (6 Ω) |
| Center 1 kHz | 50 W (8 Ω) |
| Surround 1 kHz | |
| 40 W per channel (8 Ω) | |
| Total power output | |
| 360 W | |
| PMPO power output | |
| 2800 W | |
| Input sensitivity | |
| AUX | 250 mV |
| Input impedance | |
| AUX | 10 kΩ |

FM TUNER SECTION

| | |
|---|--|
| Frequency range | |
| (For Latin America) | |
| 87.50-108.00 MHz (50 kHz step) | |
| (For U.S.A., Canada, and others) | |
| 87.9-107.9 MHz (200 kHz step) | |
| 87.5-108.0 MHz (100 kHz step) | |
| Sensitivity | |
| 1.8 μV (IHF) | |
| S/N 26 dB | |
| 1.5 μV | |
| Antenna terminals | |
| 75 Ω (unbalanced) | |

AM TUNER SECTION

| | |
|---|--|
| Frequency range | |
| (For Latin America) | |
| 522-1629 kHz (9 kHz step) | |
| 520-1630 kHz (10 kHz step) | |
| (For U.S.A., Canada, and others) | |
| 520-1710 kHz (10 kHz step) | |
| Sensitivity | |
| (For Latin America) | |
| S/N 20 dB at 999 kHz | |
| 500 μV/m | |
| (For U.S.A., Canada, and others) | |
| S/N 20 dB at 1000 kHz | |
| 500 μV/m | |

CASSETTE DECK SECTION

| | |
|-------------------------------------|--|
| Track system | |
| 4 track, 2 channel | |
| Heads | |
| Record/playback | |
| Solid permalloy head | |
| Erase | |
| Double gap ferrite head | |
| Motor | |
| DC servo motor | |
| Recording system | |
| AC bias 100 kHz | |
| Erasing system | |
| AC erase 100 kHz | |
| Tape speed | |
| 4.8 cm/s (17 1/8 ips) | |
| Overall frequency response | |
| (+3, -6 dB at DECK OUT) | |
| NORMAL (TYPE I) | |
| 35 Hz-14 kHz | |
| HIGH (TYPE II) | |
| 35 Hz-14 kHz | |
| S/N ratio | |
| 50 dB (A_WTD) | |
| Wow and flutter | |
| 0.18 % (WRMS) | |
| Fast forward and rewind time | |
| Approx. 120 seconds | |
| with C-60 cassette tape | |

DISC SECTION

| | |
|---------------------------------------|--|
| Disc | |
| DVD-Video | |
| 8 cm/12 cm single-sided, single-layer | |
| 8 cm/12 cm single-sided, double-layer | |
| 8 cm/12 cm double-sided, double-layer | |
| (One layer per side) | |
| Video CD/CD | |
| 8 cm/12 cm (CD-R/RW) | |
| Video | |
| Signal system | |
| NTSC | |
| Output level | |
| Composite video | |
| 1 Vp-p (75 Ω) | |
| S-VIDEO Y | |
| 1 Vp-p (75 Ω) | |
| S-VIDEO C | |
| 0.286 Vp-p (75 Ω/NTSC) | |
| Audio | |
| Sampling frequency | |
| CD | |
| 44.1 kHz | |
| DVD | |
| 48 kHz/96 kHz | |
| Decoding | |
| 16/20/24 bit linear | |
| Wow and flutter | |
| Below measurable limit | |
| D/A converter | |
| Delta-sigma DAC | |
| Pick up | |
| Beam Source | |
| Semiconductor Laser | |
| Wavelength | |
| DVD | |
| 658 nm | |
| VCD/CD | |
| 790 nm | |

SPEAKER SECTION**Front speakers SB-DK10**

| | |
|------------------------------------|--|
| Type | |
| 4 way, 4 speaker | |
| bass-reflex system | |
| Speakers | |
| Super woofer | |
| 14 cm (5 1/2") cone type | |
| Woofer | |
| 12 cm (4 3/4") cone type | |
| Tweeter | |
| 6 cm (2 3/8") cone type | |
| Super tweeter | |
| Piezo type | |
| Impedance | |
| High frequency | |
| 6 Ω | |
| Low frequency | |
| 8 Ω | |
| Input power | |
| High frequency | |
| 60 W (Music) | |
| Low frequency | |
| 120 W (Music) | |
| Output sound pressure level | |
| 87 dB/W (1.0 m) | |
| Cross over frequency | |
| 150 Hz, 5 kHz, 10 kHz | |
| Frequency range | |
| 45 Hz-22 kHz (-16 dB) | |
| 55 Hz-20 kHz (-10 dB) | |
| Dimensions (W×H×D) | |
| 173×315×315 mm | |
| (6 13/16"×12 13/32"×12 13/32") | |
| Mass | |
| Approx. 4.1 kg (9.0 lb.) | |

Surround speakers SB-PS90

| | |
|------------------------------------|--|
| Type | |
| 1 way, 1 speaker, | |
| closed system | |
| Speaker | |
| Full range | |
| 8 cm (3 1/8") cone type | |
| Impedance | |
| 8 Ω | |
| Input power | |
| 70 W (Music) | |
| Output sound pressure level | |
| 84 dB/W (1.0 m) | |
| Frequency range | |
| 130 Hz-20 kHz (-16 dB) | |
| 150 Hz-18 kHz (-10 dB) | |
| Dimensions (W×H×D) | |
| 140×99×118 mm | |
| (5 1/2"×3 29/32"×4 21/32") | |
| Mass | |
| Approx. 0.9 kg (2.0 lb.) | |

Center speaker SB-PC93

| | |
|------------------------------------|--|
| Type | |
| 1 way, 1 speaker, | |
| closed system | |
| Speaker | |
| Full range | |
| 8 cm (3 1/8") cone type | |
| Impedance | |
| 8 Ω | |
| Input power | |
| 70 W (Music) | |
| Output sound pressure level | |
| 84 dB/W (1.0 m) | |
| Frequency range | |
| 130 Hz-20 kHz (-16 dB) | |
| 150 Hz-18 kHz (-10 dB) | |
| Dimensions (W×H×D) | |
| 140×99×118 mm | |
| (5 1/2"×3 29/32"×4 21/32") | |
| Mass | |
| Approx. 0.8 kg (1.8 lb.) | |

GENERAL**For U.S.A. and Canada**

| | |
|------------------------------|--|
| Power supply | |
| AC 120 V, 60 Hz | |
| Power consumption | |
| 161 W | |
| Dimensions (W×H×D) | |
| 215.4×315×350 mm | |
| (8 1/2"×12 13/32"×13 25/32") | |
| Mass | |
| Approx. 7.8 kg (17.2 lb.) | |

GENERAL**For Latin America and others**

| | |
|---------------------------|--|
| Power supply | |
| AC 110/127/220-230/240 V, | |
| 50/60 Hz | |
| Power consumption | |
| 191 W | |
| Dimensions (W×H×D) | |
| 215.4×315×350 mm | |
| Mass | |
| Approx. 8.2 kg | |

| | |
|--|--|
| Power consumption in standby mode | |
| (For U.S.A. and Canada) | |
| 0.25 W | |
| (For Latin America and others) | |
| 0.8 W | |

Notes:

- Specifications are subject to change without notice.
Mass and dimensions are approximate.
- Total harmonic distortion is measured by the digital spectrum analyzer.

The model number and serial number of this product can be found on either the back or the bottom of the unit. Please note them in the space provided below and keep for future reference.

| | MODEL NUMBER | SERIAL NUMBER |
|-------------------|--------------|---------------|
| Main unit | _____ | _____ |
| Front speakers | _____ | _____ |
| Center speaker | _____ | _____ |
| Surround speakers | _____ | _____ |

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, and 4,819,098, licensed for limited viewing uses only.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

For USA

**Panasonic Consumer Electronics
Company, Division of Matsushita
Electric Corporation of America**
One Panasonic Way Secaucus,
New Jersey 07094
<http://www.panasonic.com>

**Panasonic Sales Company,
Division of Matsushita Electric of
Puerto Rico, Inc. ("PSC")**
Ave. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park, Carolina,
Puerto Rico 00985

For Canada

Panasonic Canada Inc.
5770 Ambler Drive
Mississauga, Ontario
L4W 2T3
www.panasonic.ca

For others

Matsushita Electric Industrial Co., Ltd.
Osaka 542-8588, Japan

En